




BREAKOUTS

BREAKOUTS

BREAKOUTS	CONDUIT SIZE
A	3/4"
B	1"
C	1 1/4"
D	1 1/2"
E	2"

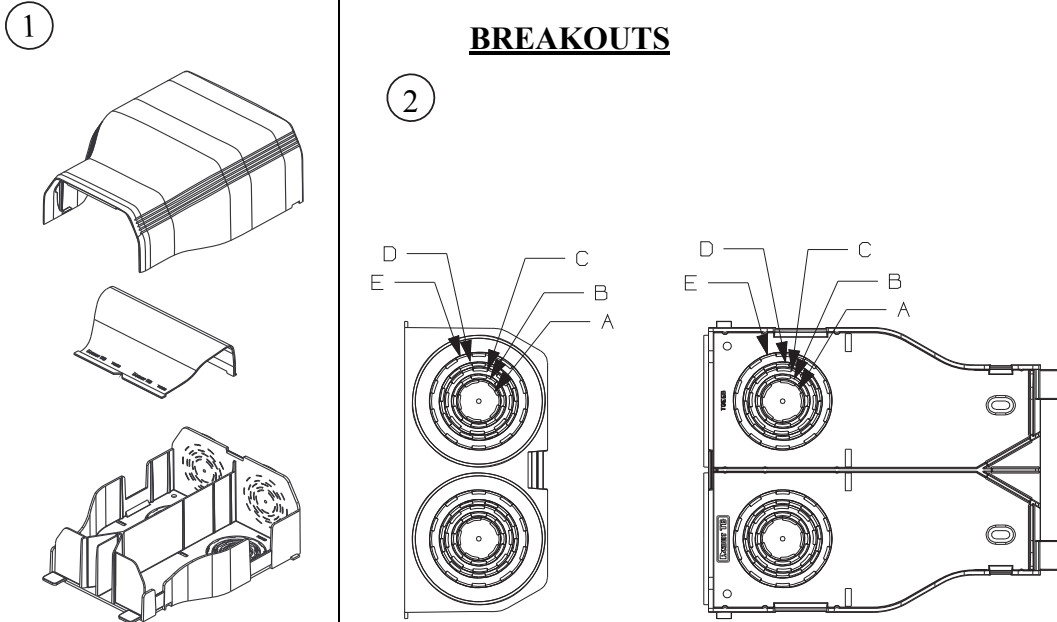


REMOVING BREAKOUTS

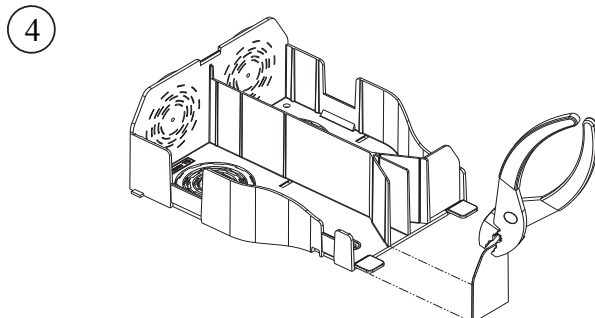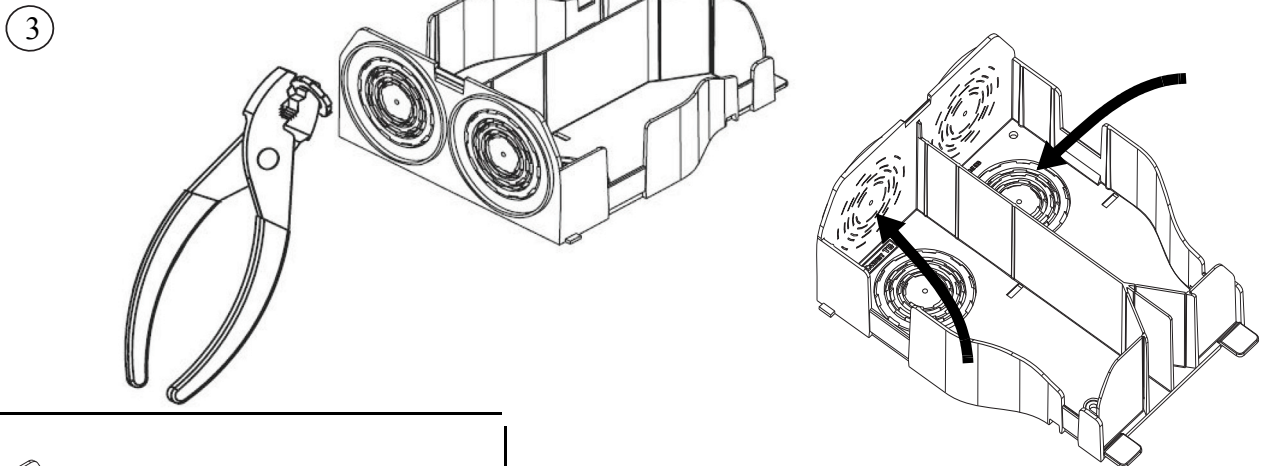


MOUNTING

5

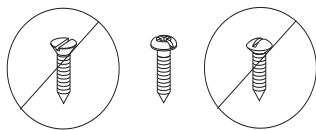


The mounting hardware used to secure the raceway shall be appropriate for the mounting surface.


5a

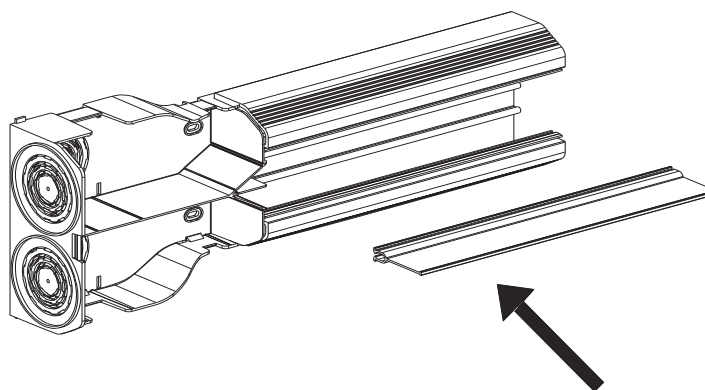**POWER/DATA LOW VOLTAGE APPLICATIONS**



6

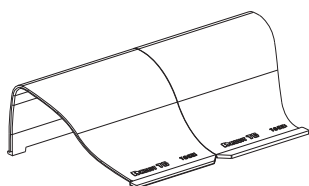


6b

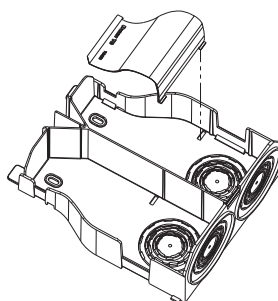


6a

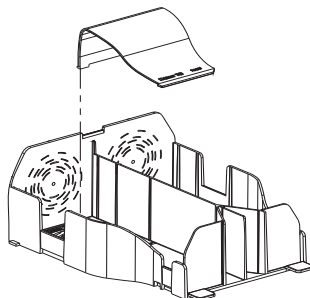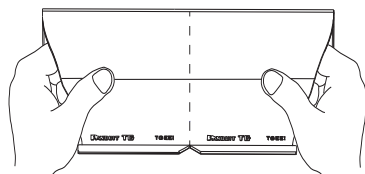**ROUTING**


DATA

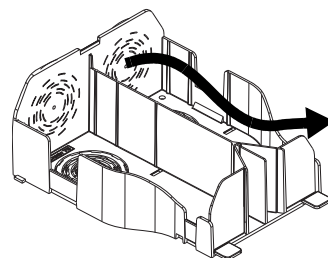

POWER

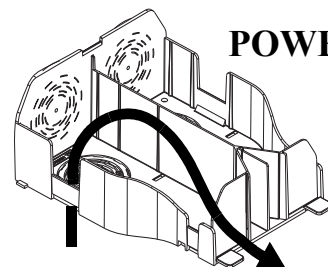


7

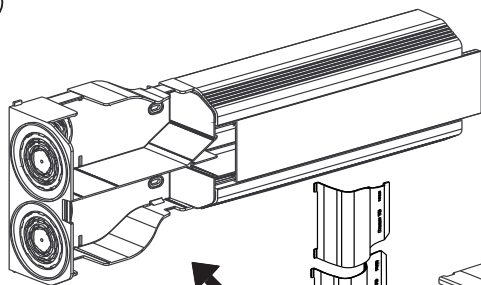


7a



7b

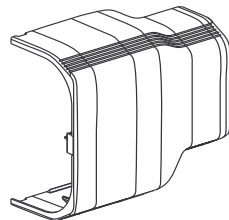

8

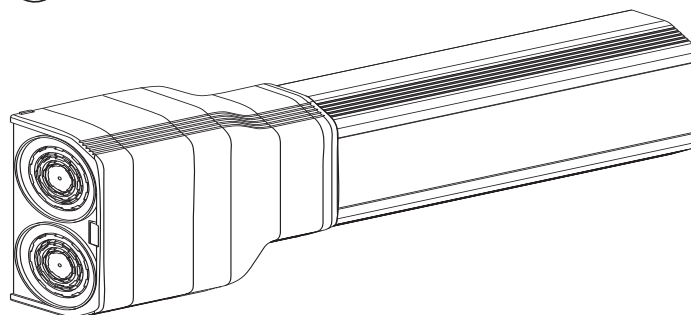

For Instructions in Local Languages
and Technical Support:

www.panduit.com/resources/install_maintain.asp

PANDUIT
www.panduit.com

E-mail:
techsupport@panduit.com

Phone:
866-405-6654