


Spot Fluid Leak Sensor (EE001)

The Spot Fluid Leak Sensor is designed to reliably monitor a remote location for the presence of water or any other conductive liquid. The sensor can be extended using a standard RJ45 coupling and standard ethernet cable (sold separately).

Note: The Spot Fluid Leak Sensor is designed to connect only to a Panduit G5/G6 iPDU or UPS. Connecting it to another device may result in damage.

INVENTORY

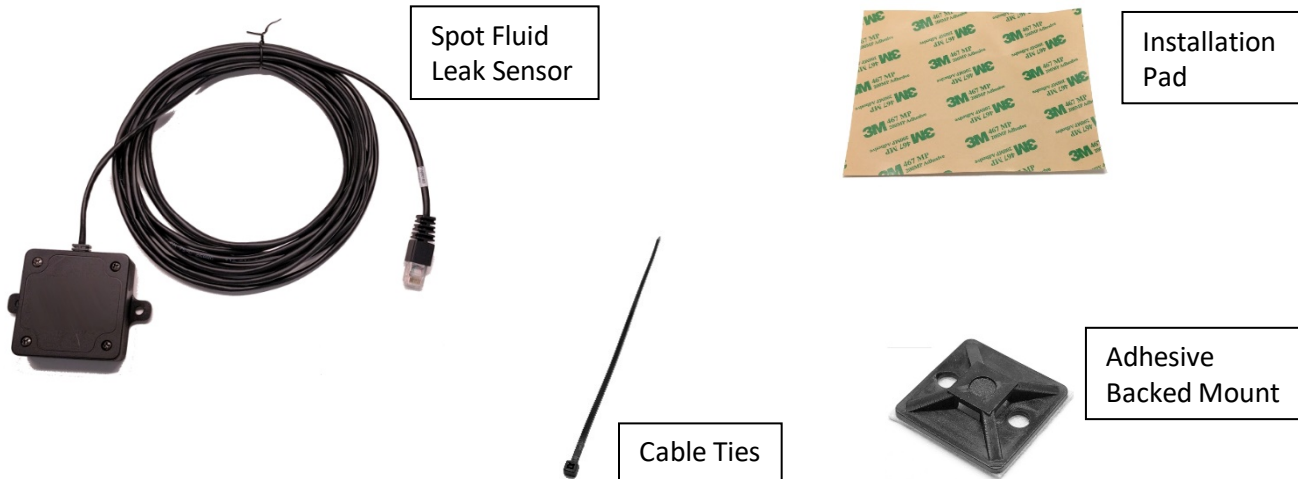


OPTIONAL ACCESSORIES



Panduit PN: CC688BL

Panduit PN: UTP28CH2MBL

INSTALLATION INSTRUCTIONS

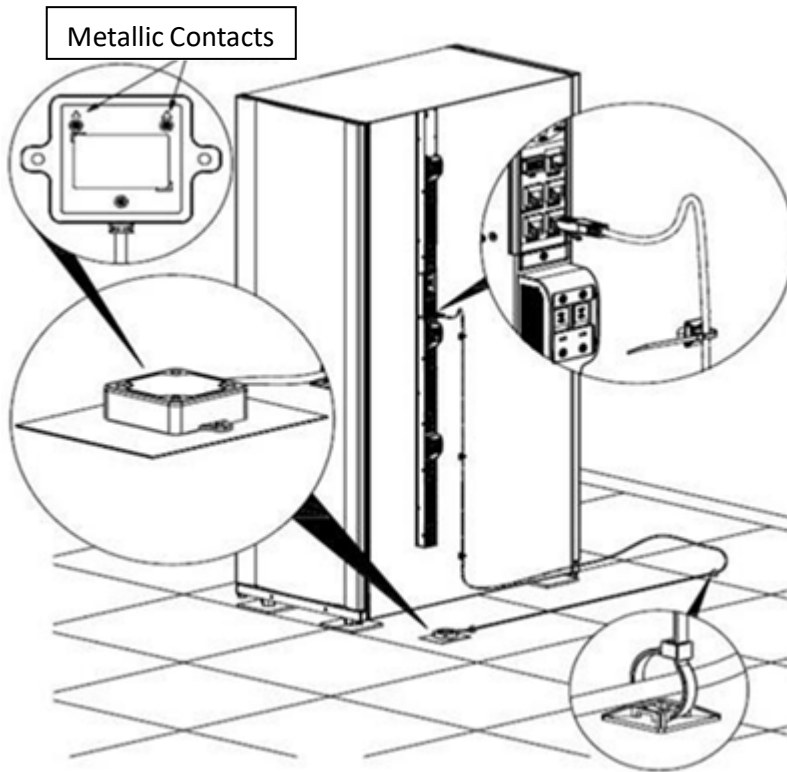

1. Place the Spot Fluid Sensor on the surface to be monitored. Secure the cable using the included Cable Ties and Adhesive Mounts.

Note: The Spot Fluid Leak Sensor detects the presence of liquids. Certain materials, such as metal surfaces or cement floor, may activate a false leak signal. To avoid this, place the sensor on the provided installation pad. The installation pad is best installed on a clean, dry surface.

2. Plug the RJ45 cable into a sensor port on the Panduit G5/G6 iPDU, UPS or Sensor Hub (Panduit PN: EF001). If desired, use a RJ45 quick disconnect coupler and a standard ethernet cable to extend the length of the sensor input cable.
3. Using the Web UI set up specific conditions to monitor and send an alarm.
4. The Spot Fluid Leak Sensor is now installed and ready for use.