



PANDUIT WIRE BASKET SPILL-OVER JUNCTION


Part Numbers: PWBSPJ2**, PWBSPJ4**

©Panduit Corp. 2026



INSTALLATION INSTRUCTIONS

FS182

PWBSPJ2**

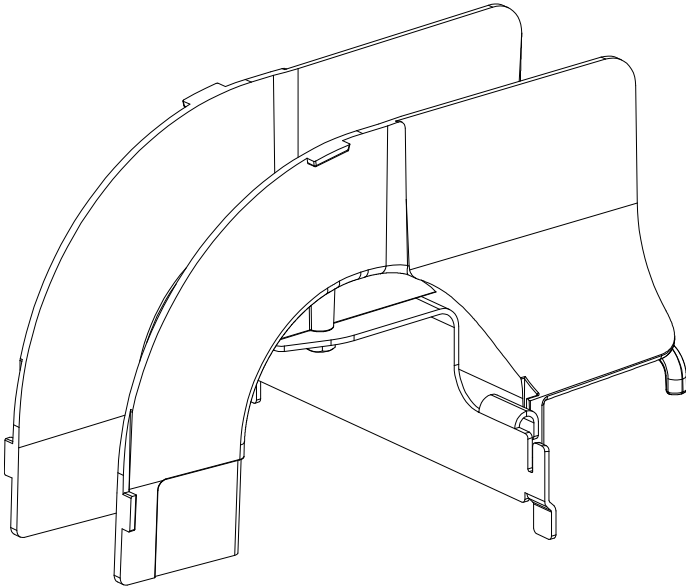


PWBSPJ4**

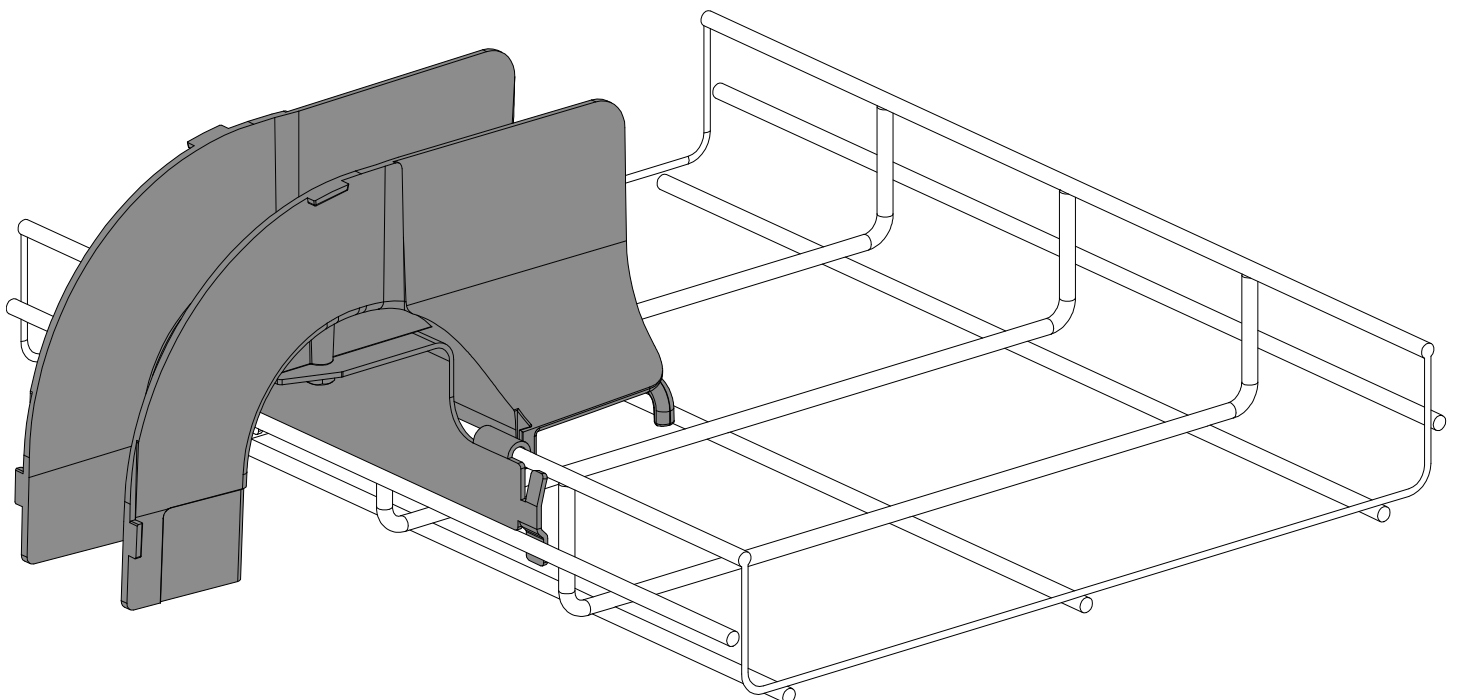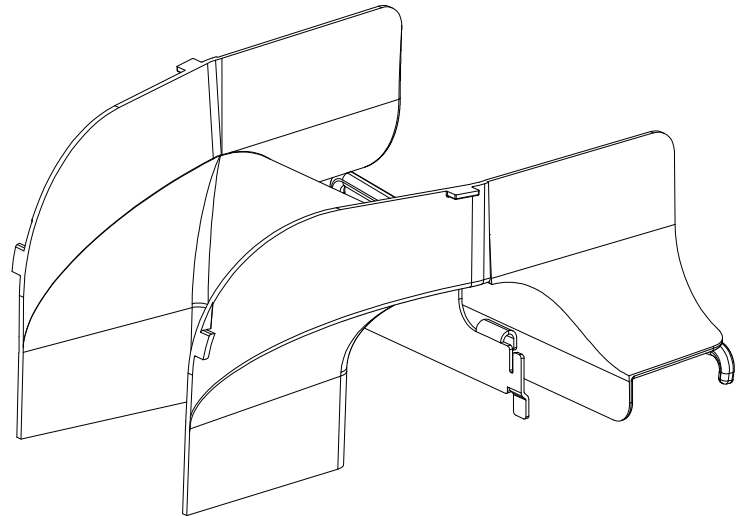

For Technical Support: www.panduit.com


Installing Spill Over

- Insert Spill Over on to Wire Basket

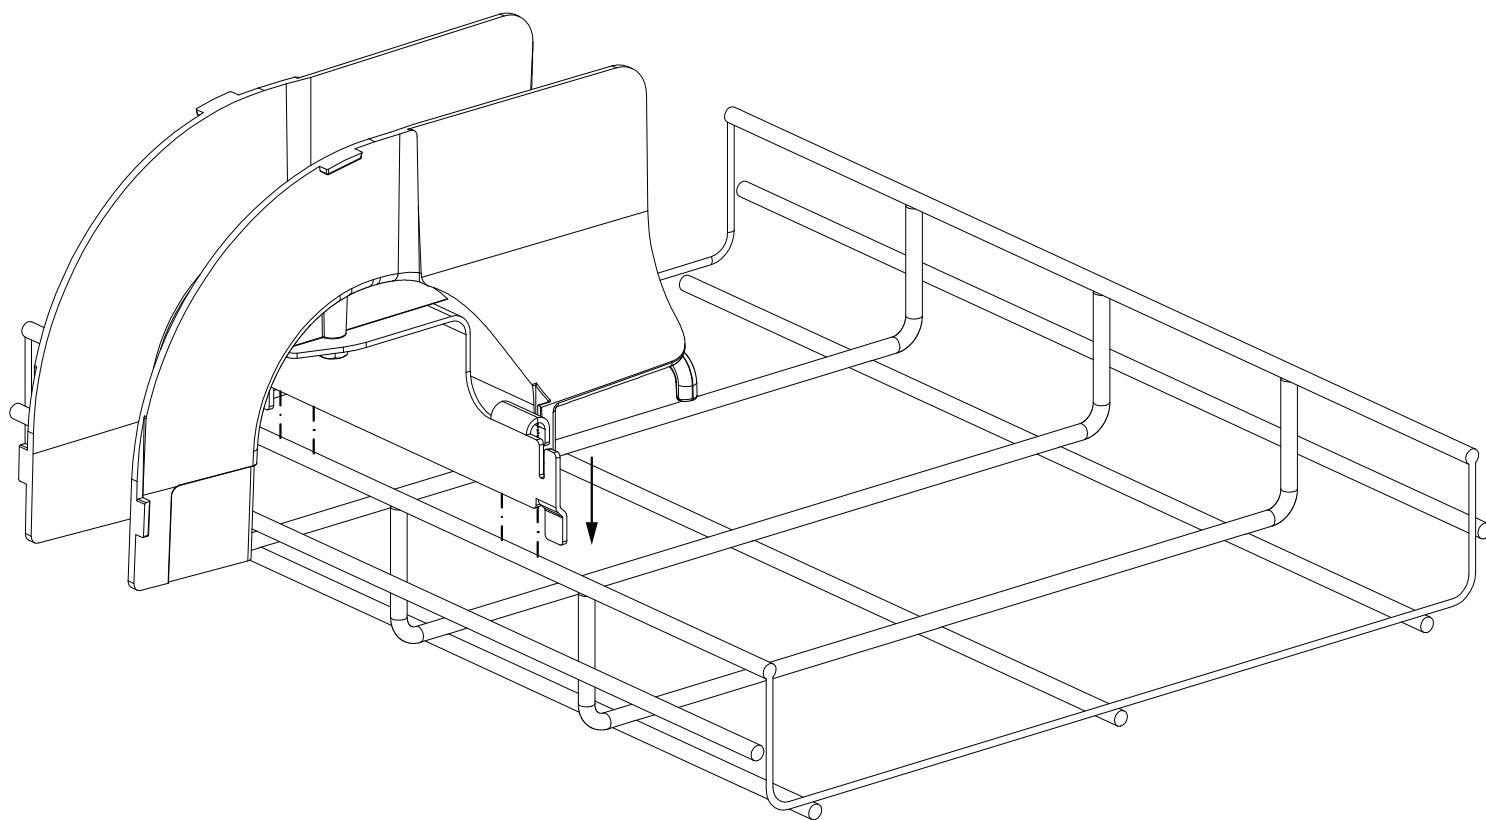



Secure Spill Over on to Wire Basket

- Insert Flat Head Screw Driver and bend tab behind cross wire as shown below.
- Repeat on opposite side


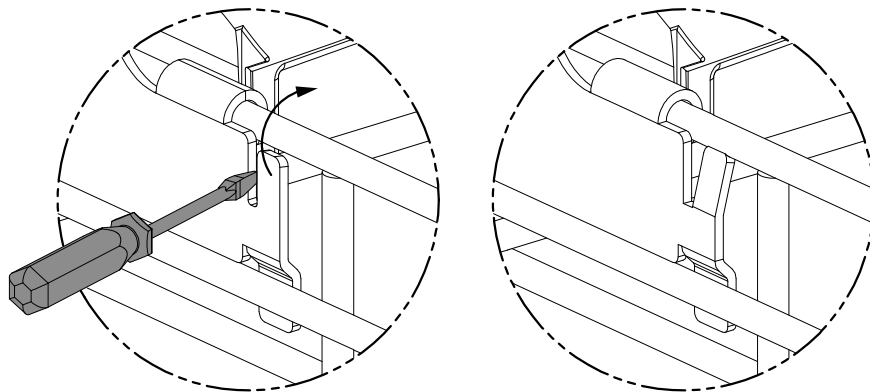


Maximum Load: 10 lbs

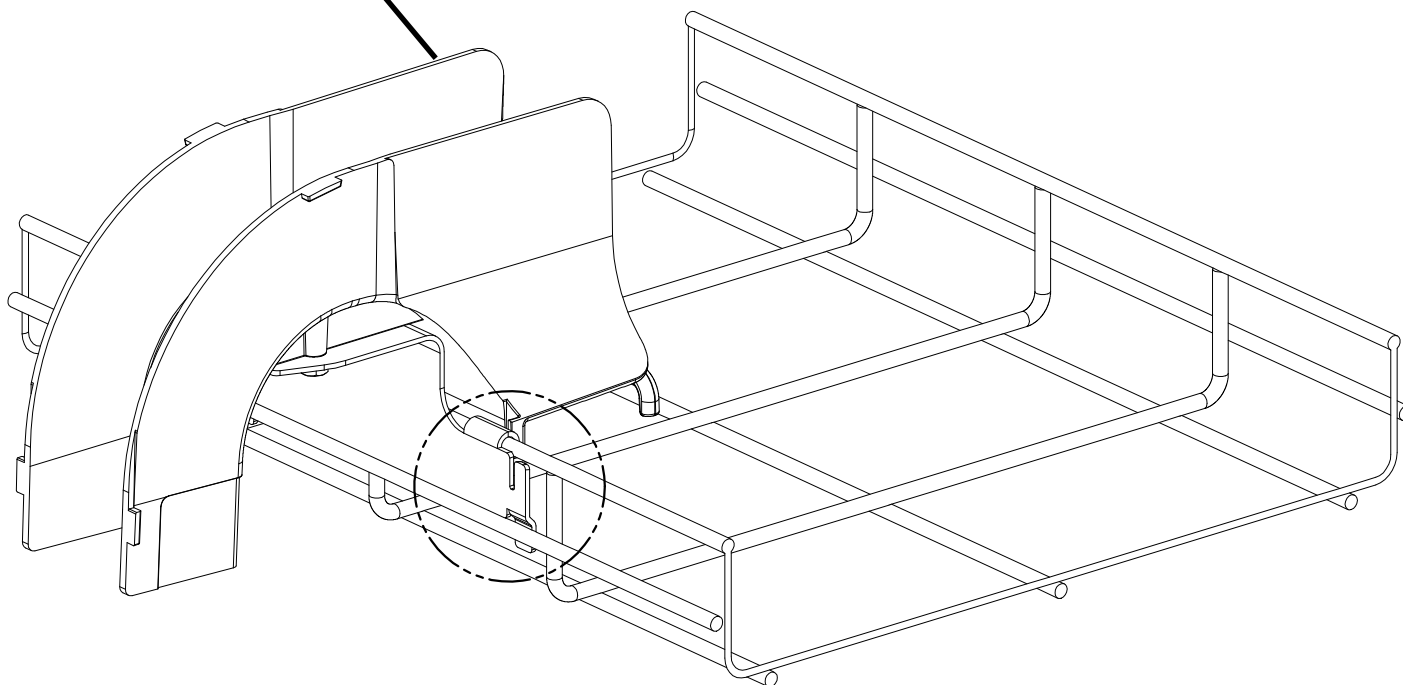


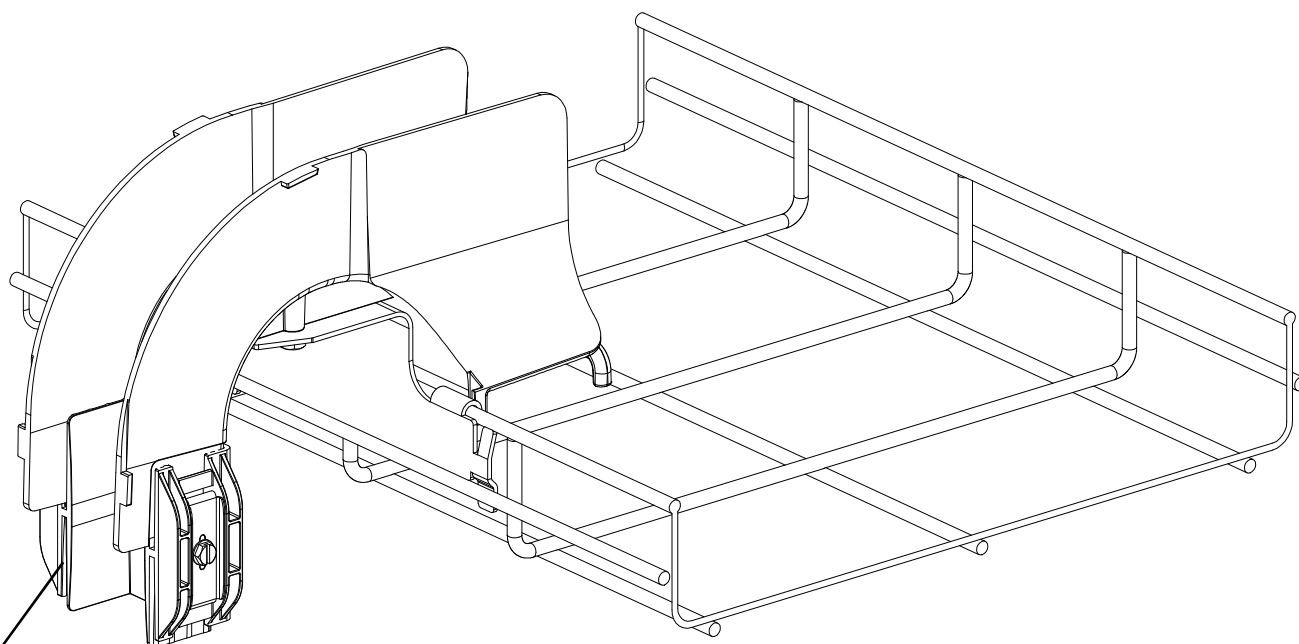


FBC2X2** or FBC4X4** CAN
BE USED TO ATTACH OTHER
ACCESSORIES
(Sold Separately)

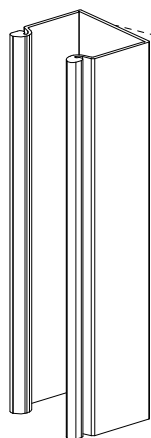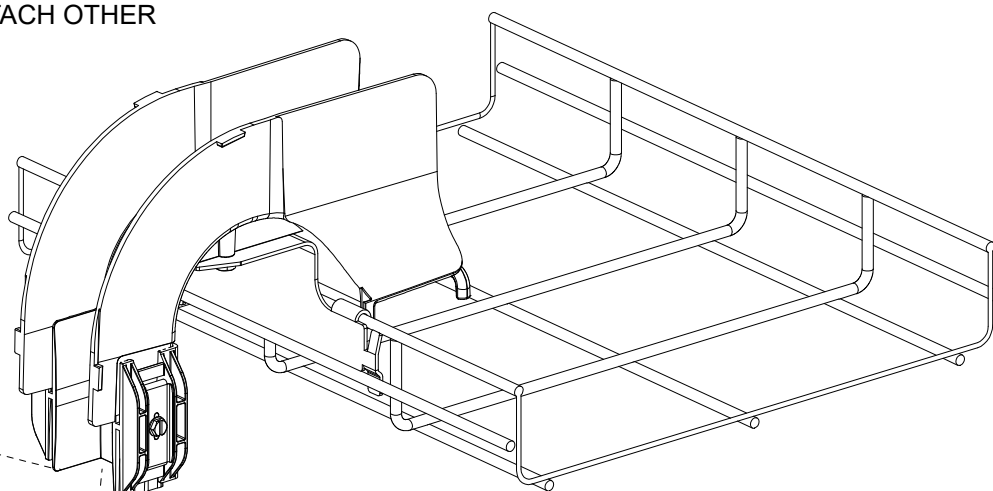

HS2X2** or
HS4X4**
(Sold Separately)

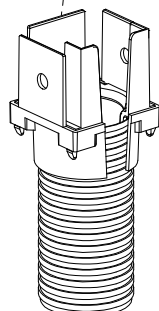

FIDTR2X2**
(Sold Separately)

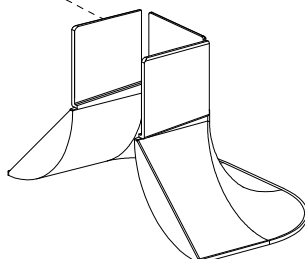

FTR2X2** or FTR4X4**
(Sold Separately)

For Instructions in Local Languages
and Technical Support:
www.panduit.com

PANDUIT
www.panduit.com

E-mail:
techsupport@panduit.com
Phone:
866-405-6654