PANDUIT®

PatchRunner™ Enhanced Horizontal Front-Only Manager

Part Number(s): PEHF2, PEHF3, PEHF4

INSTALLATION INSTRUCTIONS   **CM508B**

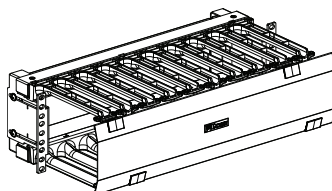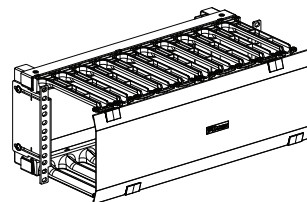**PEHF2**   **PEHF3**   **PEHF4**

PatchRunner™ Enhanced Horizontal Front-Only Managers include (1) Manager, (1) Door, and #12-24 Screws for Mounting to Vertical Equipment.

Prior to Installation

Step 1 (all configurations): Loosen mounting screws on both sides of part. See Figure 1 for locations.
AND

Step 2 (mounting with PatchRunner™ Enhanced Vertical Manager): Slide both side mounting brackets as far back as possible. See Figure 2.1.
OR

Step 2 (mounting with PatchRunner™ Vertical Manager): Align marking on both mounting brackets with center of screws. See Figure 2.2.
OR

Step 2 (mounting with cabinet): Slide mounting brackets as far forward as possible. See Fig. 2.3.
AND

Step 3 (all configurations): Tighten mounting screws on both sides of part.
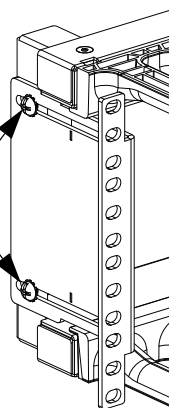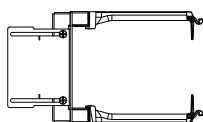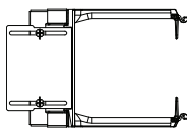

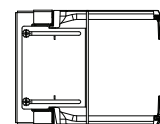**Loosen screws (both sides of part)**

Figure 1

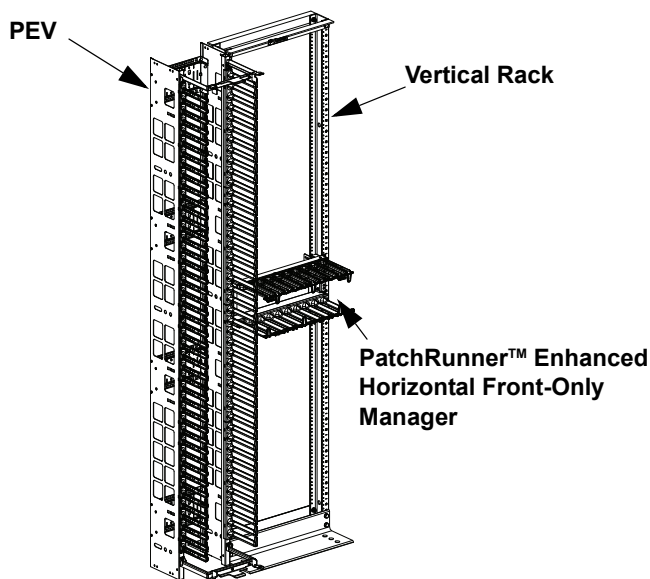**Figure 2.1**   **Figure 2.2**   **Figure 2.3**
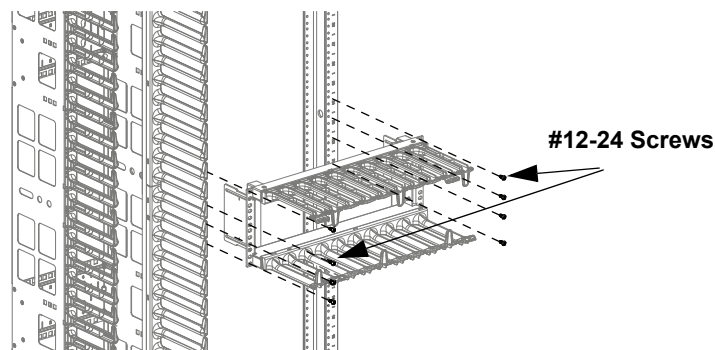
Installation with PatchRunner™ Enhanced Vertical Manager (PEV) on 2 or 4 Post Rack

Attach PatchRunner™ Enhanced Front-Only Manager to desired location on Vertical Equipment using #12-24 Screws.

#12-24 Screws

PEV

Vertical Rack

PatchRunner™ Enhanced Horizontal Front-Only Manager

For Technical Support: www.panduit.com/resources/install_maintain.asp

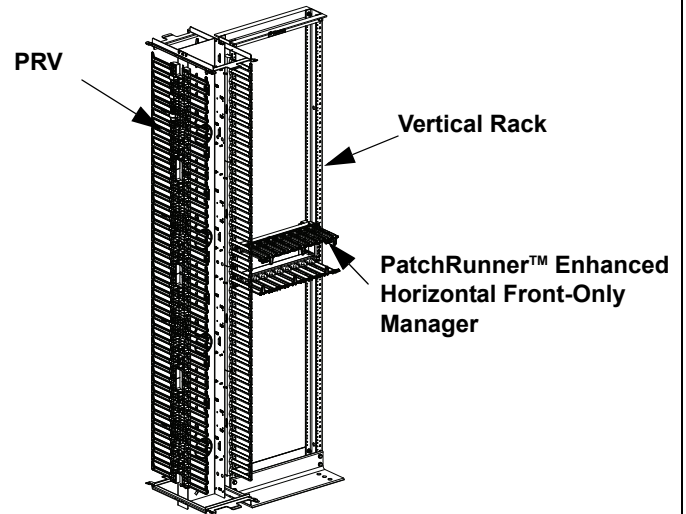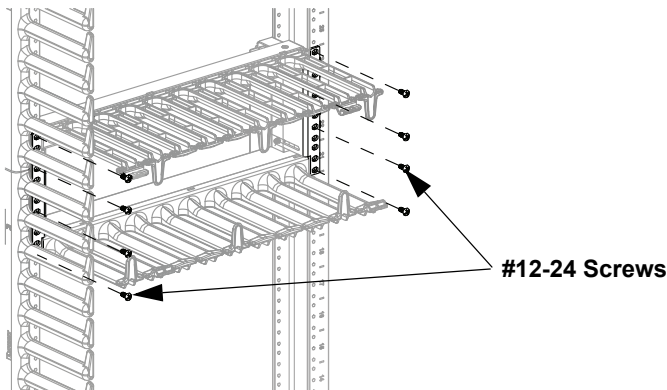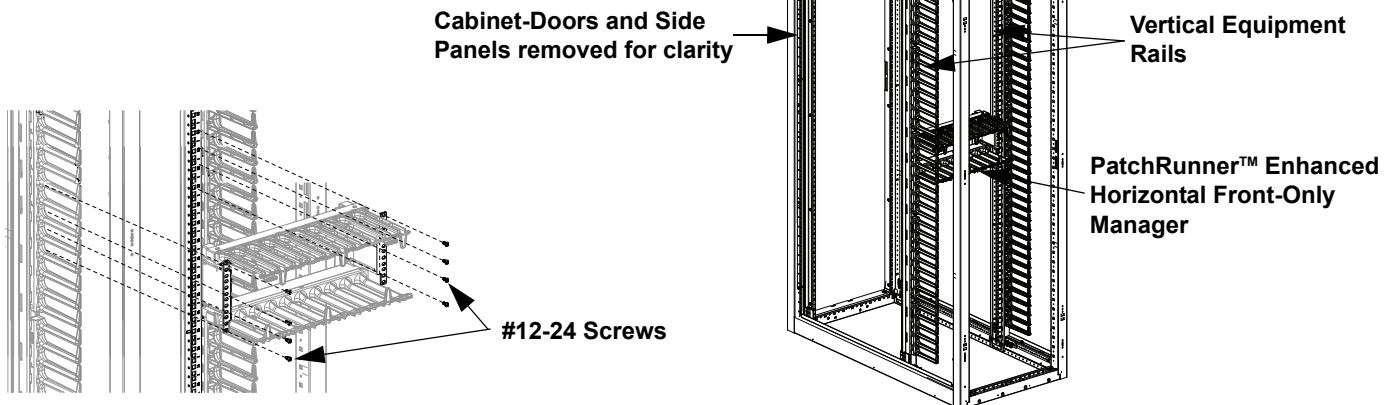## Installation with PatchRunner™ Vertical Manager (PRV) on 2 or 4 Post Rack

Attach PatchRunner™ Enhanced Horizontal Front-Only Manager to desired location on Vertical Equipment using #12-24 Screws.
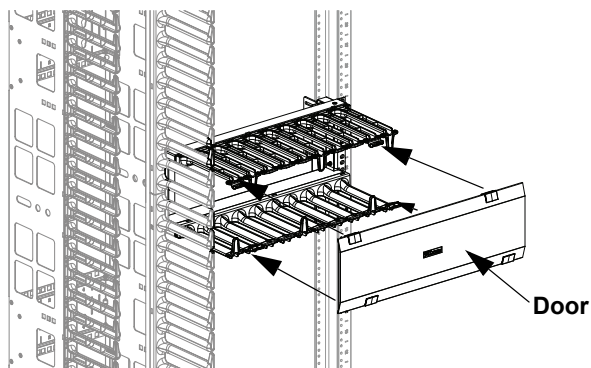
#12-24 Screws

PRV

Vertical Rack

PatchRunner™ Enhanced Horizontal Front-Only Manager

Installation with Cabinet

Attach PatchRunner™ Enhanced Horizontal Front-Only Manager to desired location on Vertical Equipment using #12-24 Screws.

Cabinet-Doors and Side Panels removed for clarity

Vertical Equipment Rails

PatchRunner™ Enhanced Horizontal Front-Only Manager
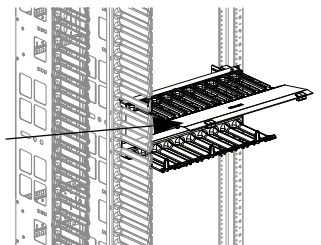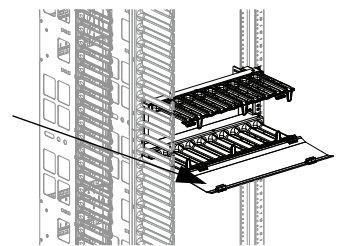
#12-24 Screws

Door Installation

Install Doors to PatchRunner™ Enhanced Horizontal Front-Only Manager by aligning the door hinges with knuckles on the fingers and press until door snaps into place. Door may be opened up or down by pulling on opposite side of door.

Door Opening Up

Door Opening Down

Door

For Instructions in Local Languages and Technical Support:	**PANDUIT®**	**E-mail:** cs@panduit.com
www.panduit.com/resources/install_maintain.asp	www.panduit.com	**Fax:** (708) 444-6448