


Floor standing enclosures

















Combinable enclosure, high protection IP66

MOUNTING INSTRUCTIONS

7697-0302-01 REV.4





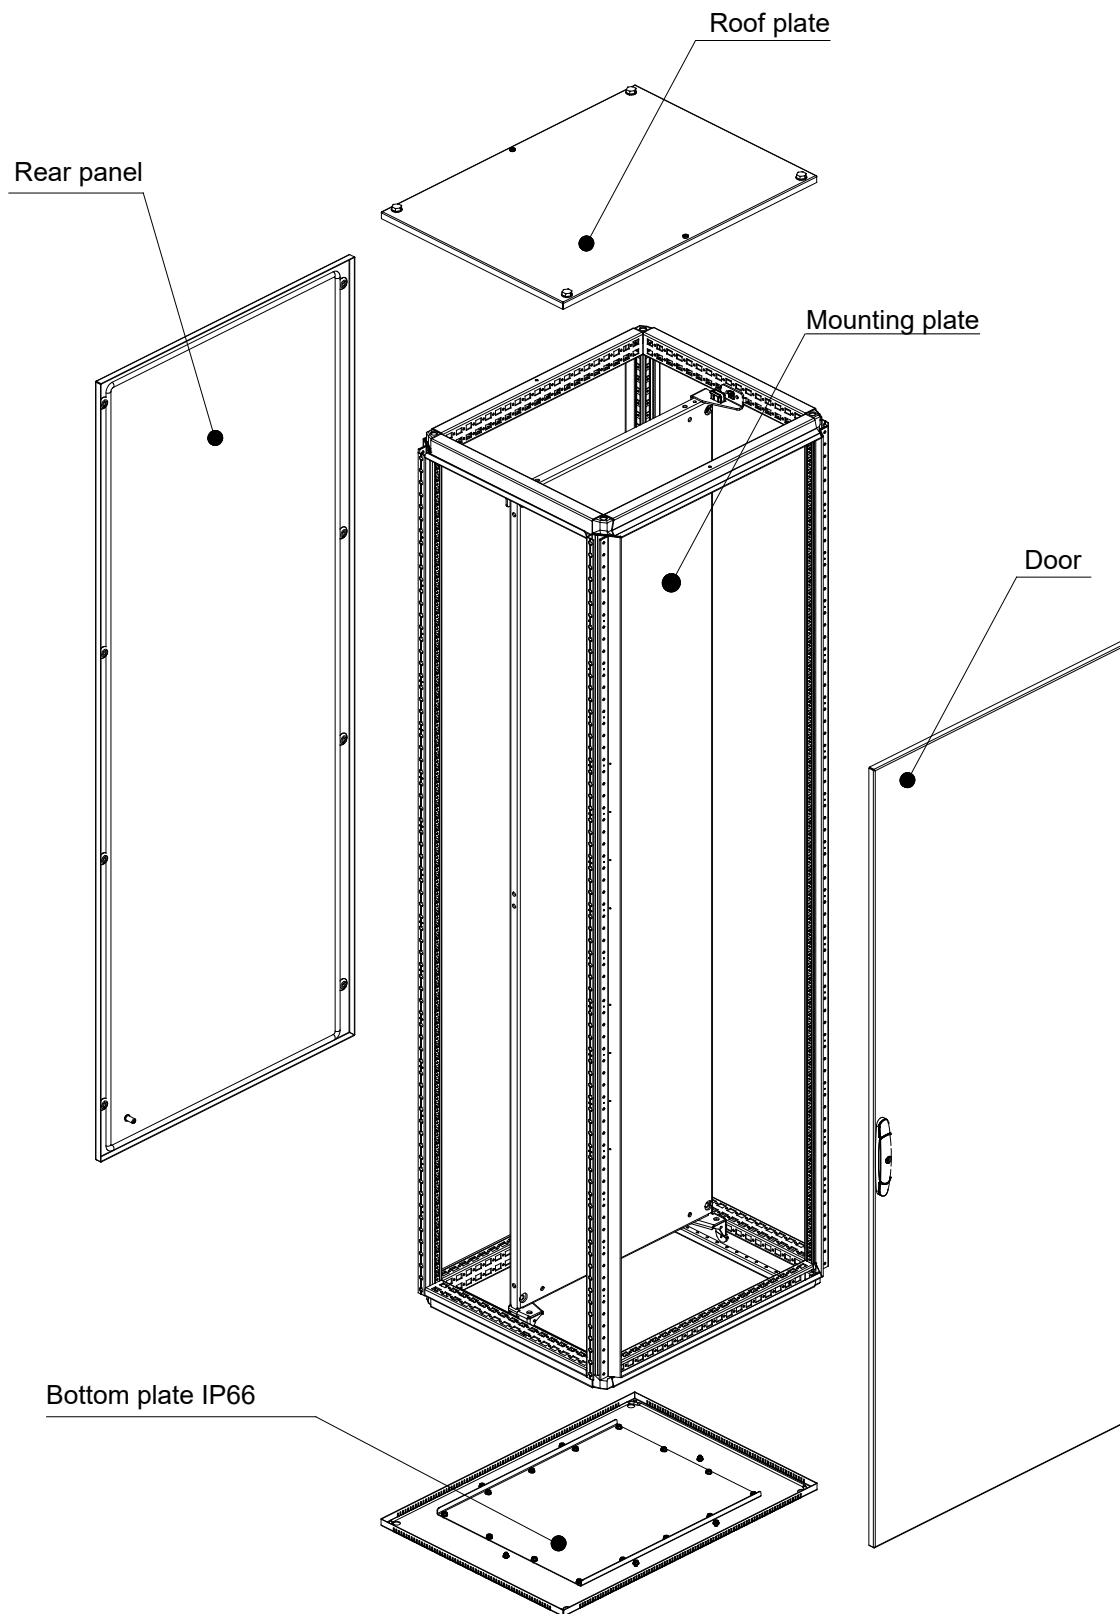


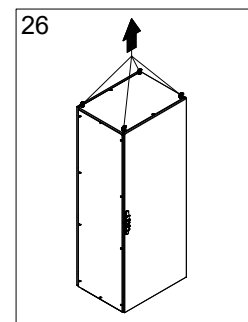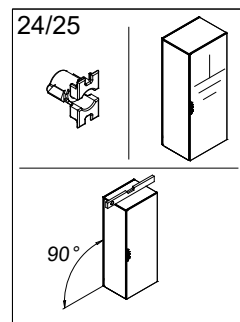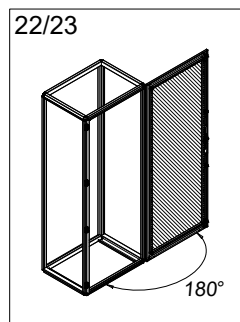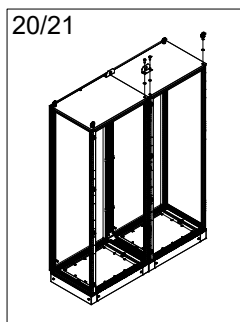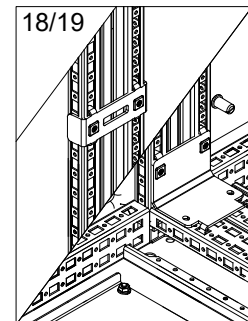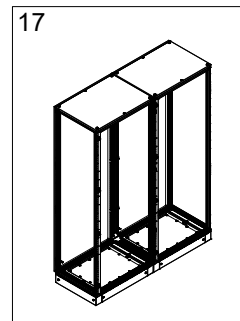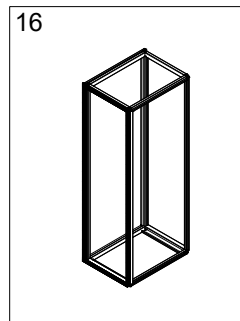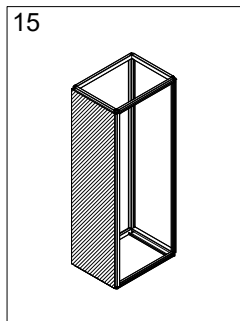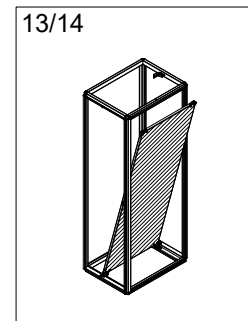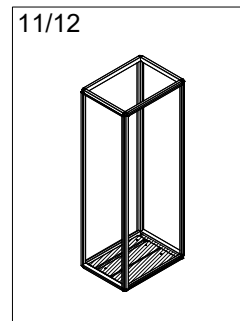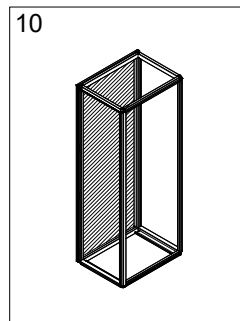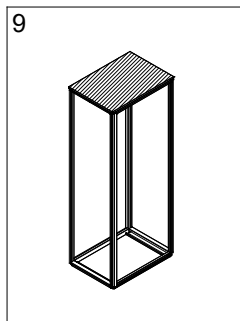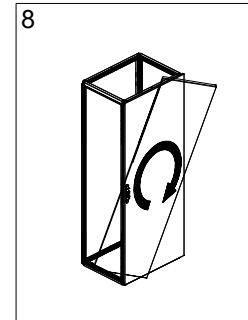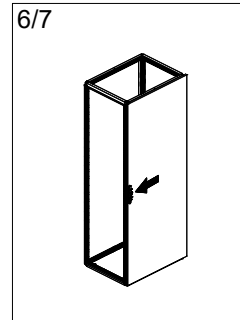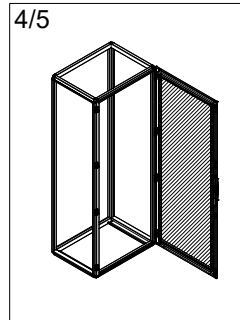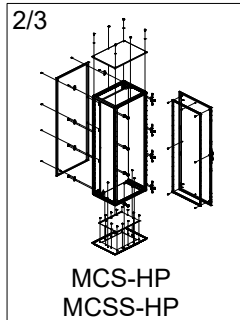




WARNING: When mounting on or over a combustible surface, a floor plate of at least 1.43 mm galvanized or 1.6 mm uncoated steel extended at least 150 mm beyond the equipment on all sides must be installed.


WARNING: In order to maintain the environmental integrity of the enclosure, devices with the same environmental ratings shall be used to close openings in customized enclosure.

MCS-HP

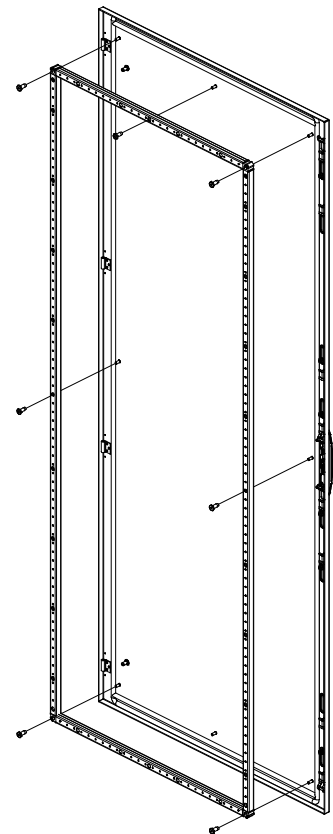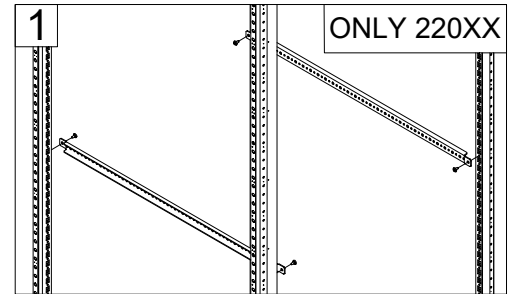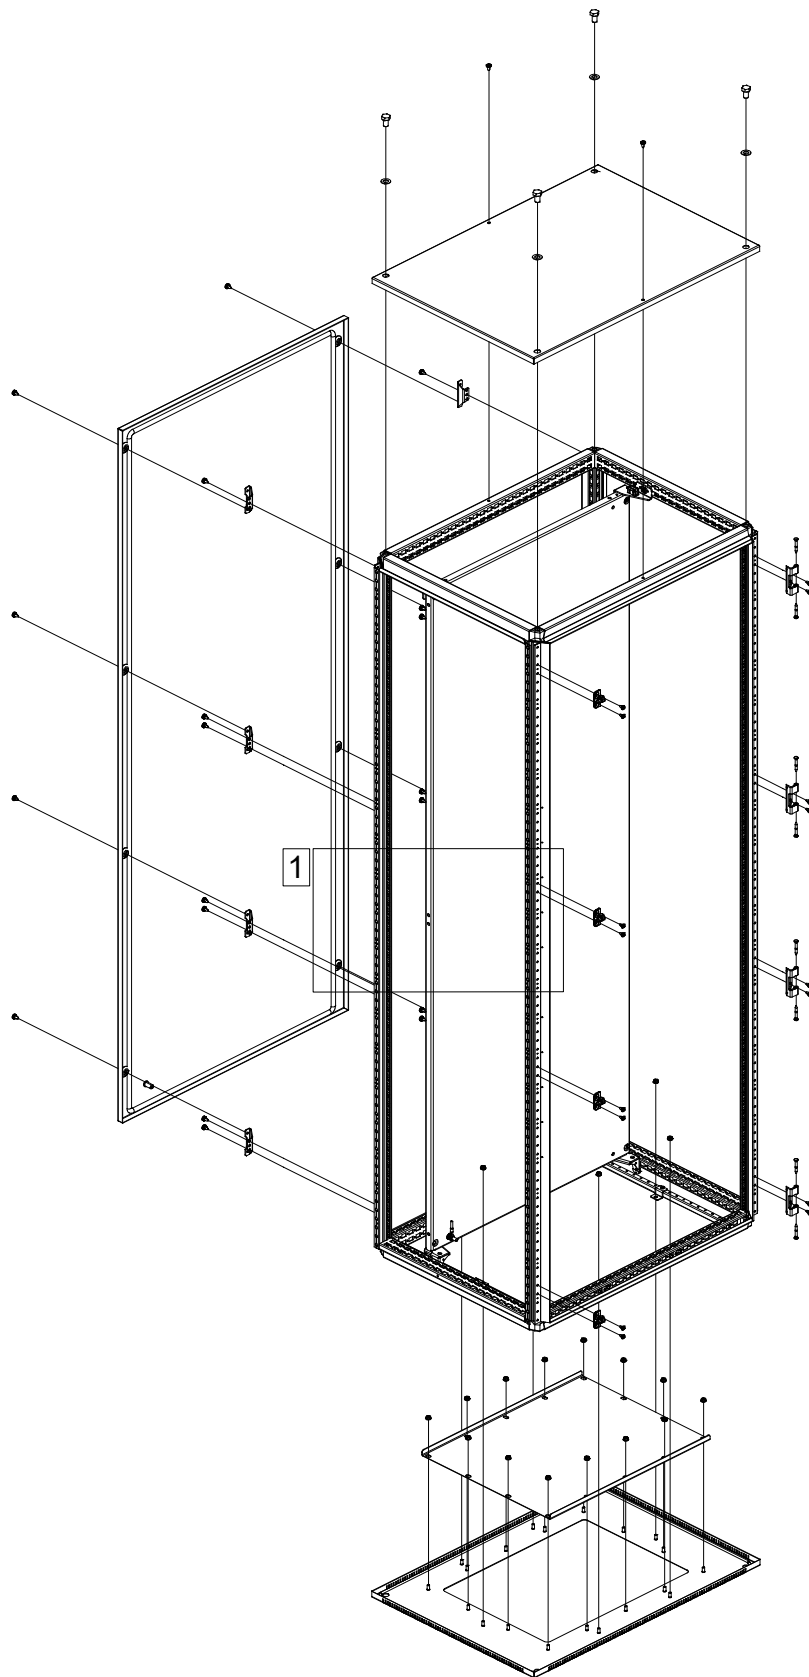






MCSS-HP

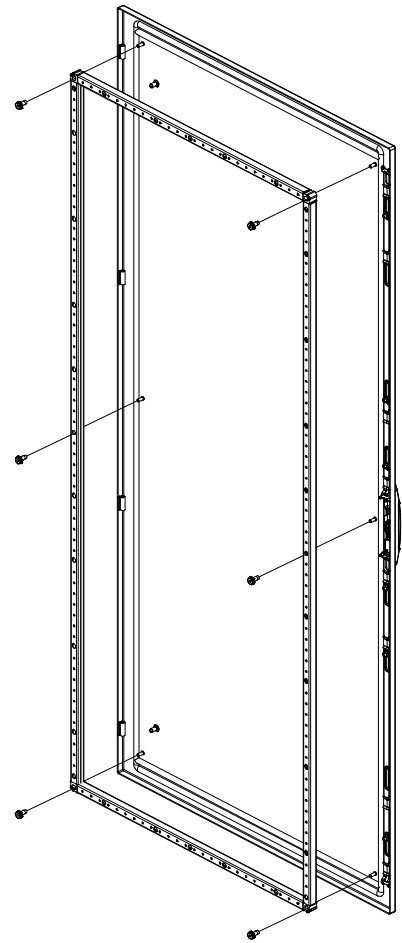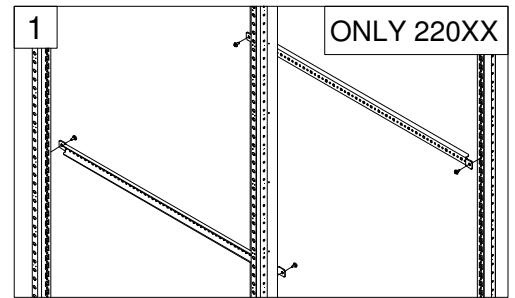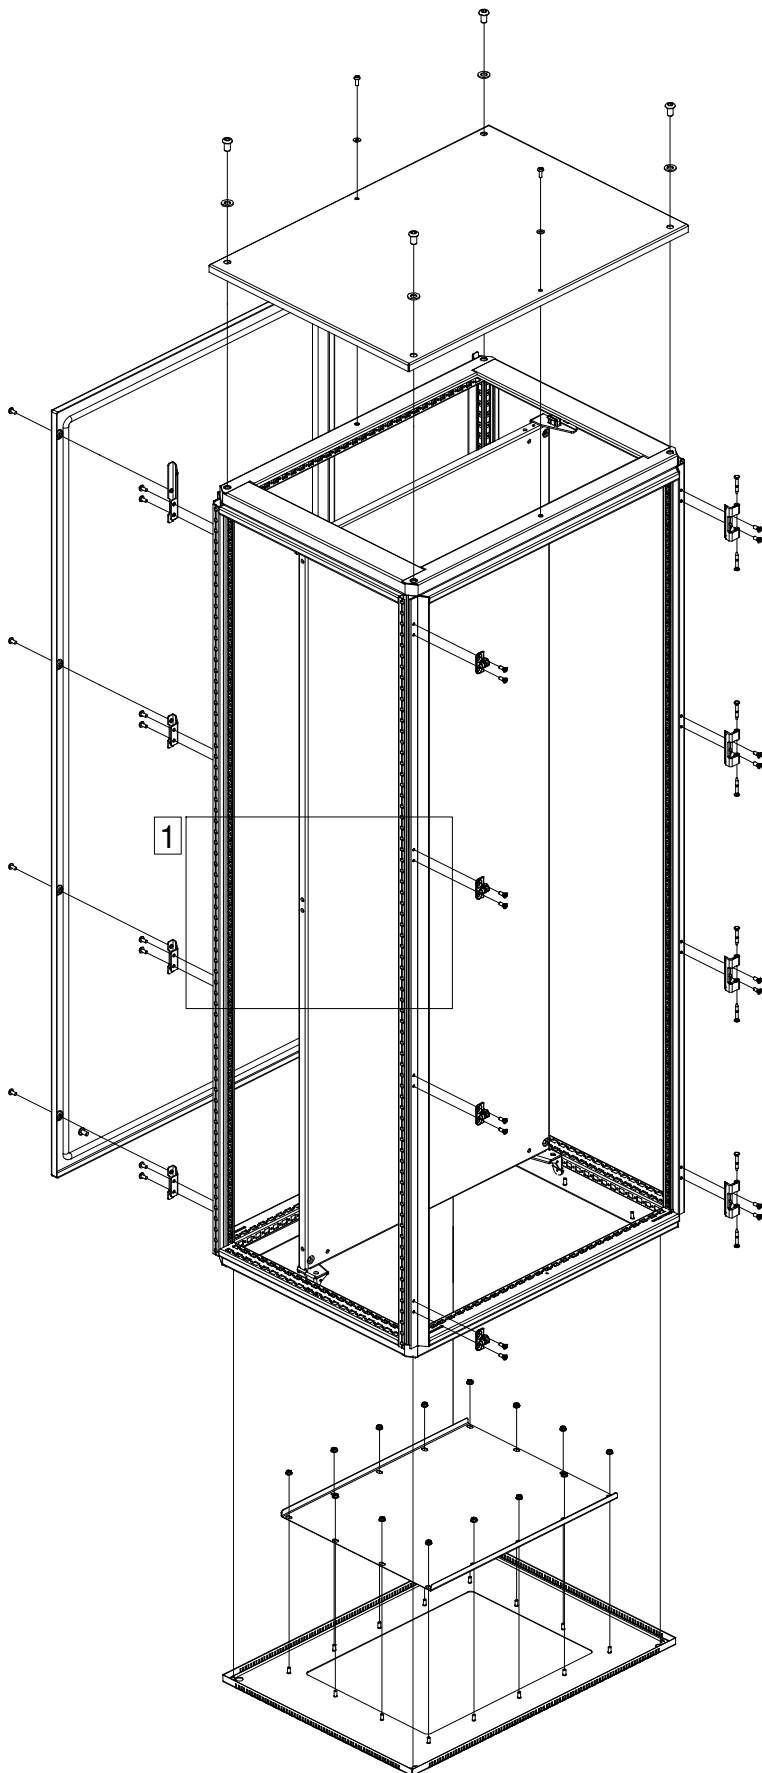










COMBINABLE ENCLOSURE

H	A
1100	175
1400	325
1600	425
1800	525
2000	625
2200	725

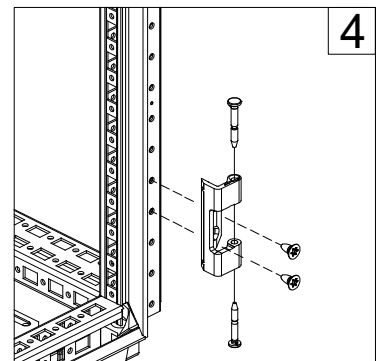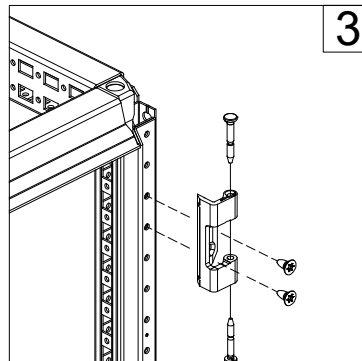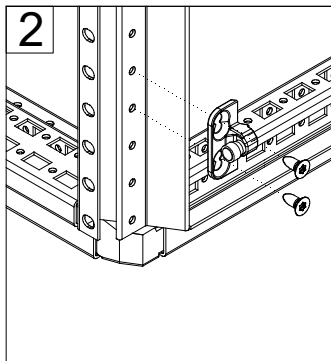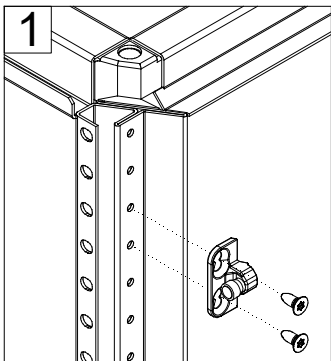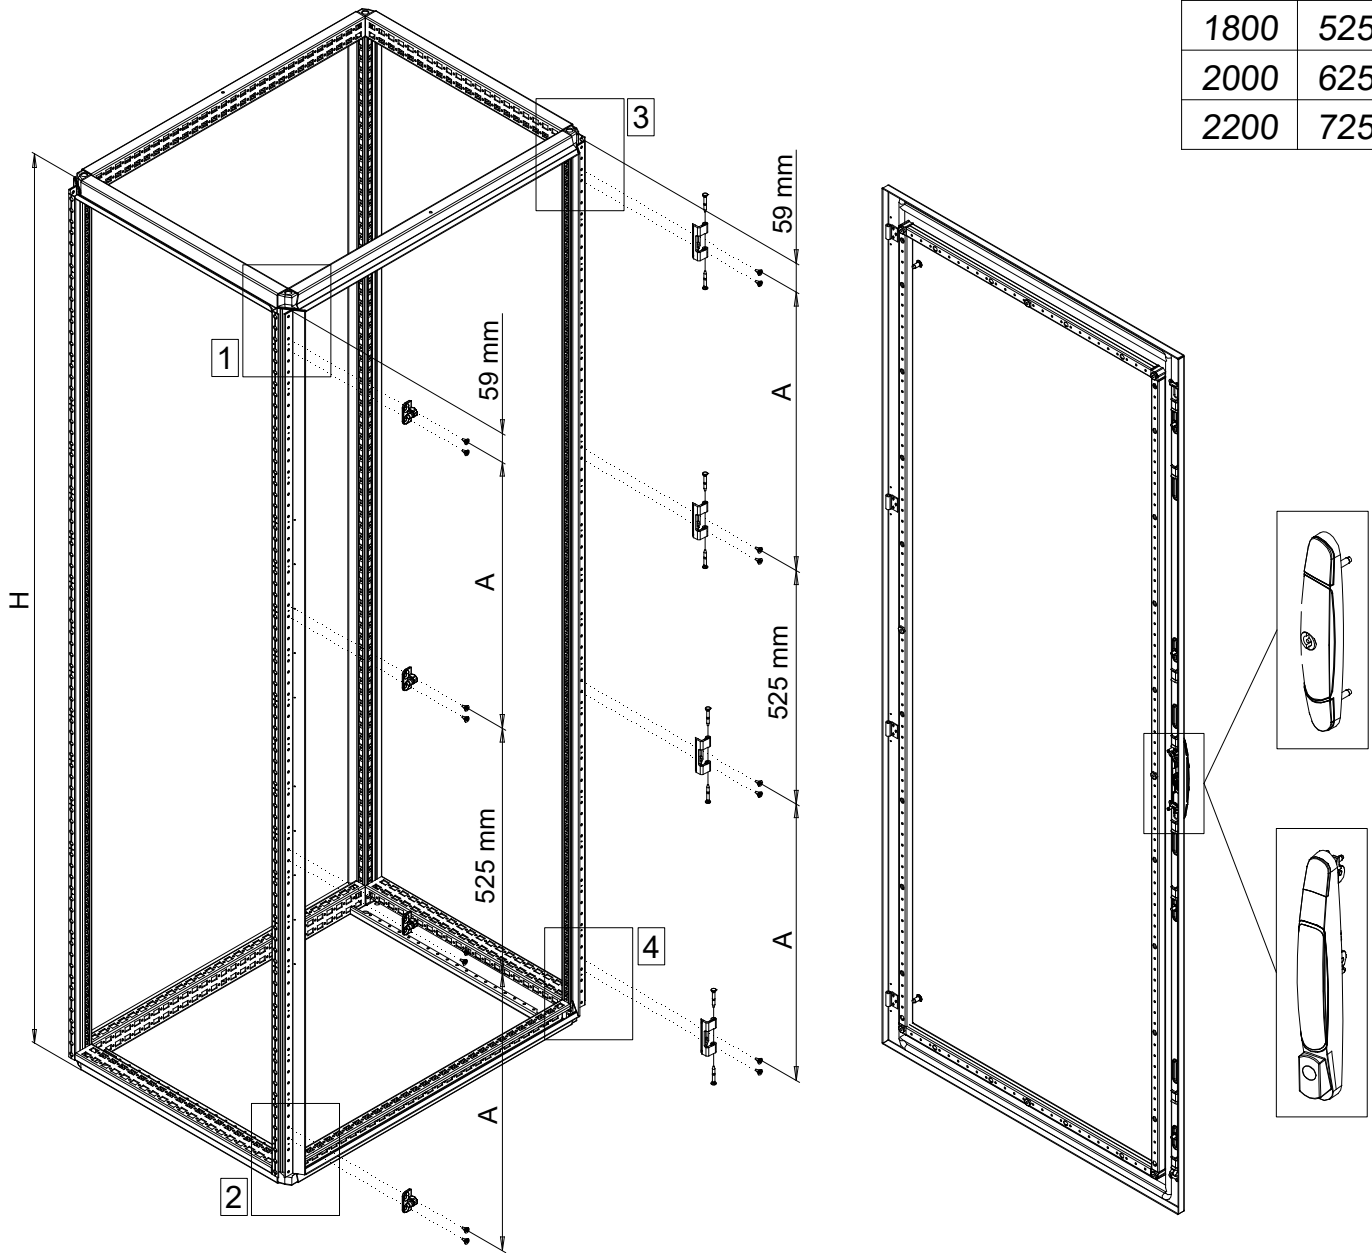











Ref.	Pic.	Qty.
A	M5x10	2
B	M5	4

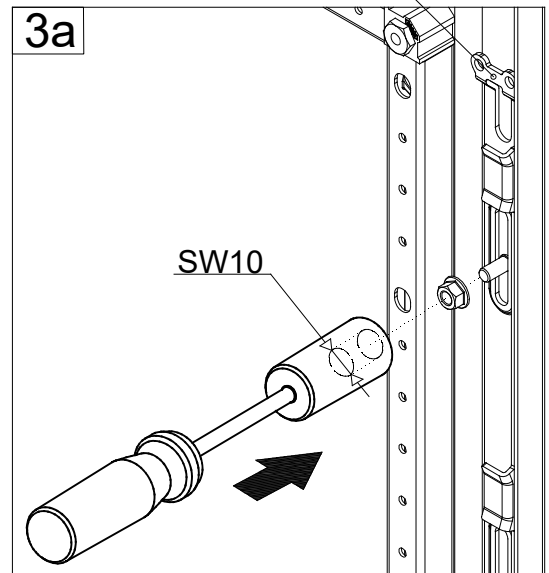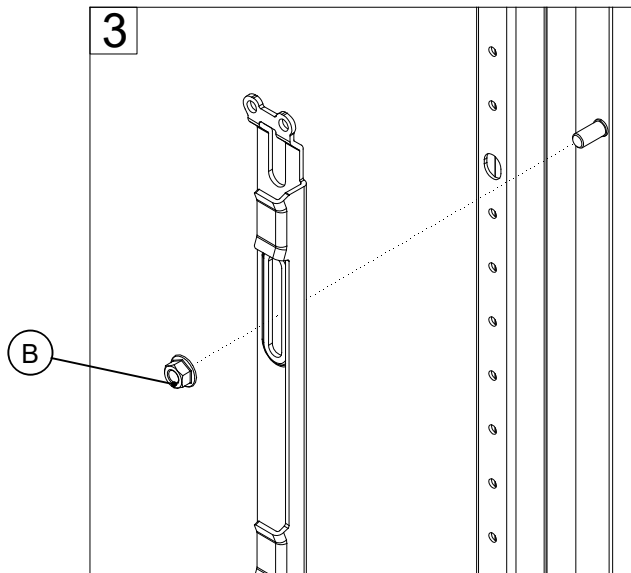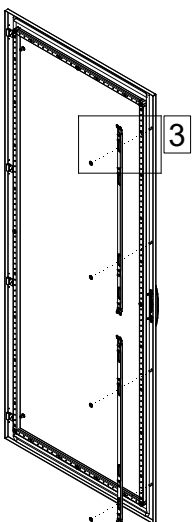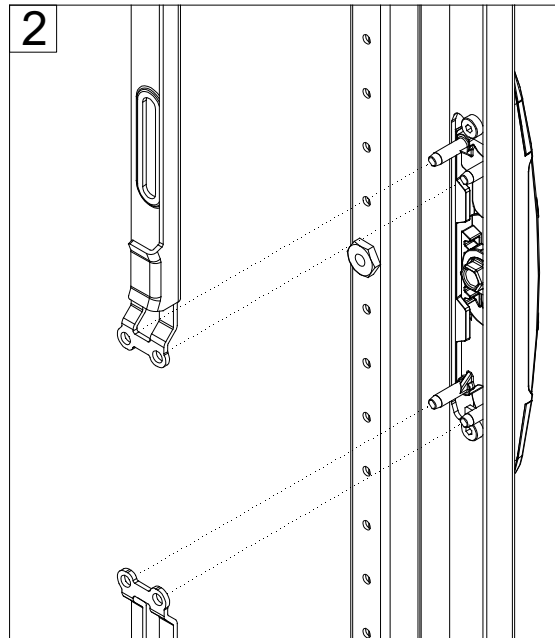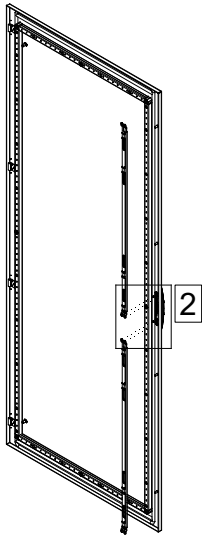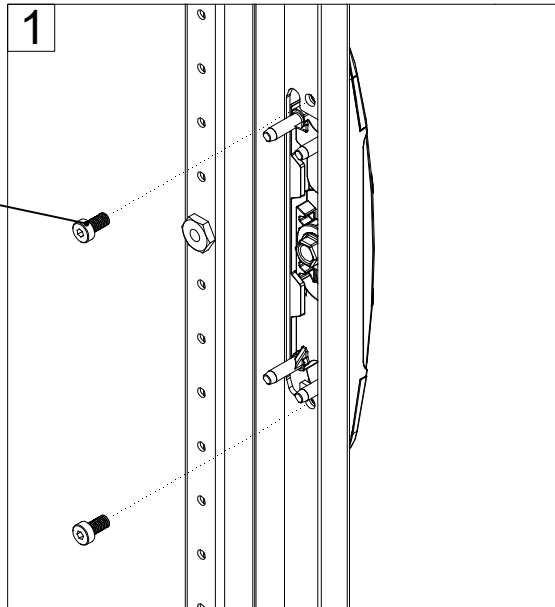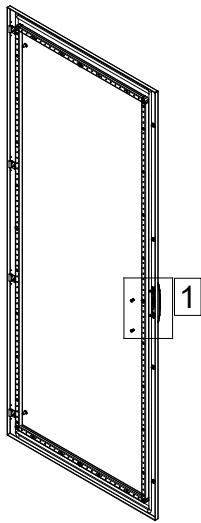

Metal Guider



MOUNTING THE LIFT HANDLE

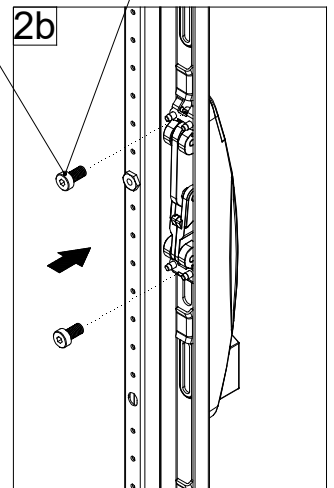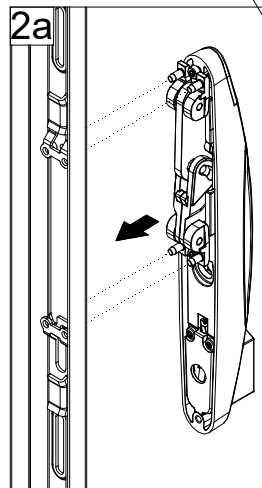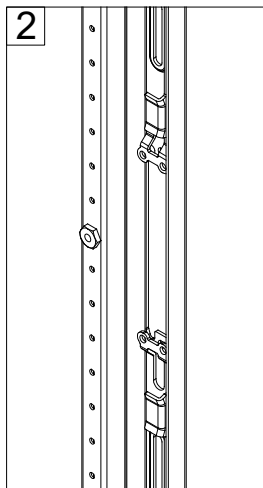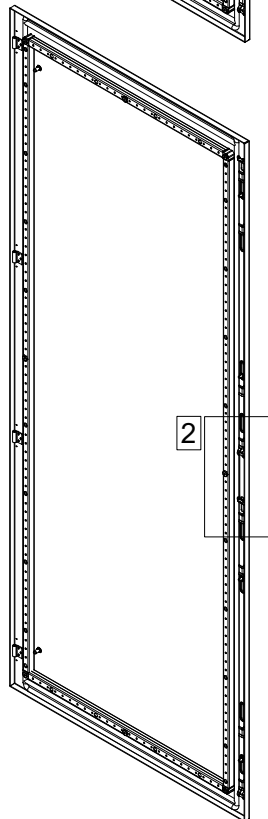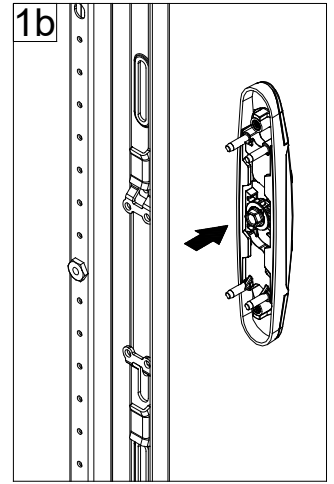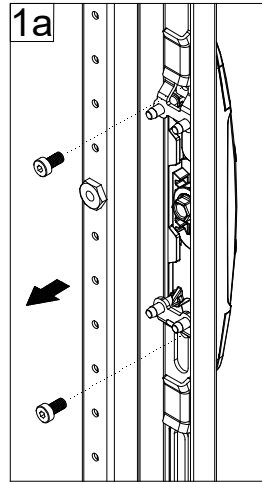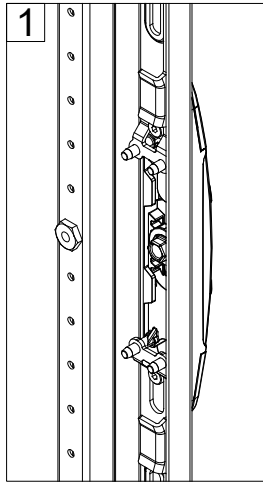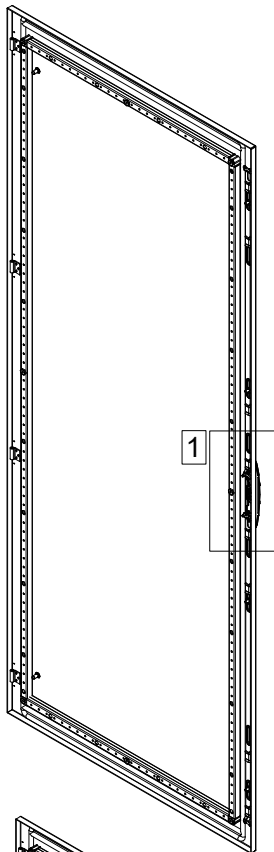


Torque
4-5.5 Nm


A




Standard Locking System




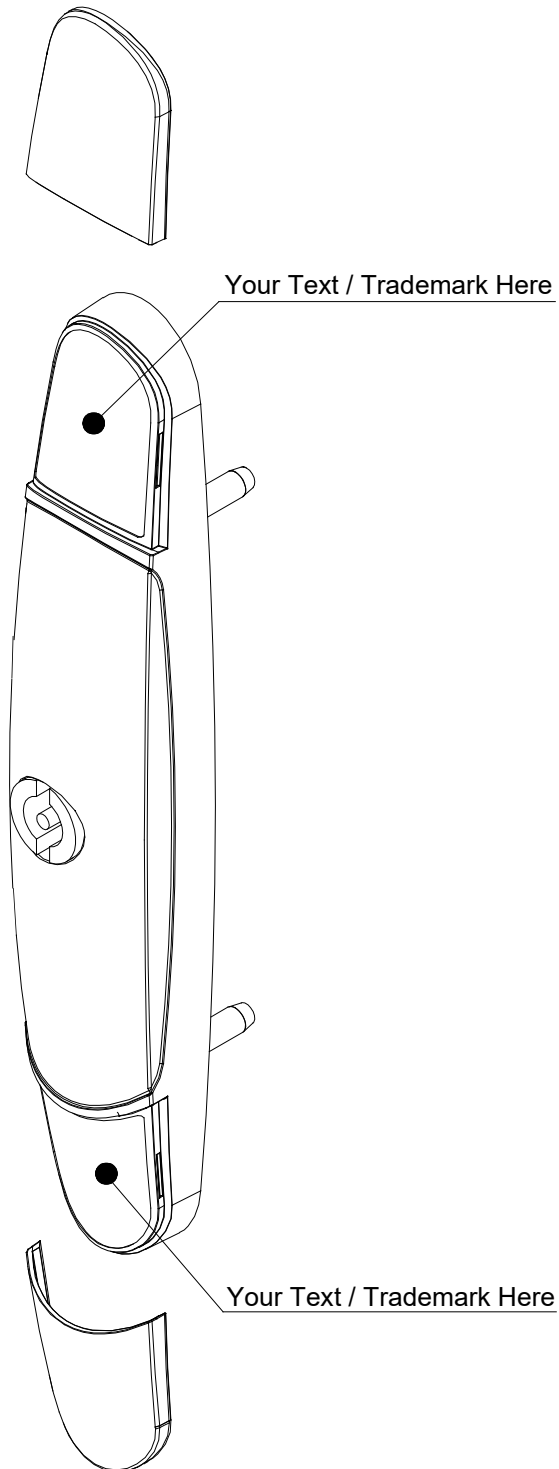


Lift Handle Locking System



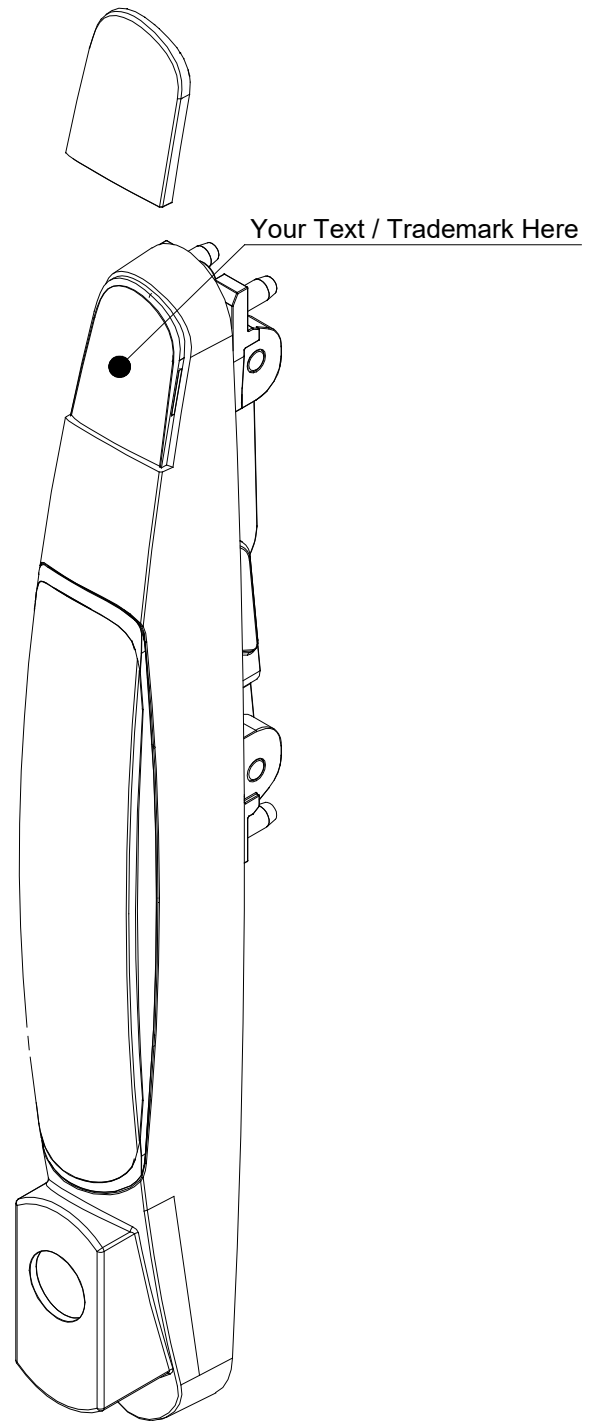


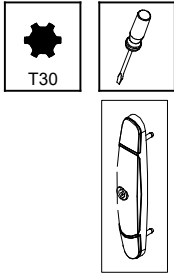

Standard Locking System

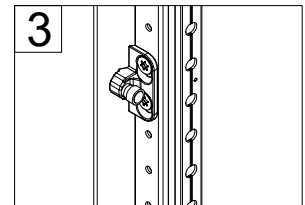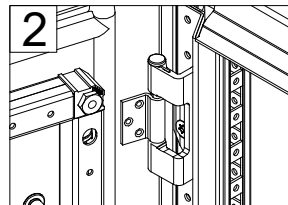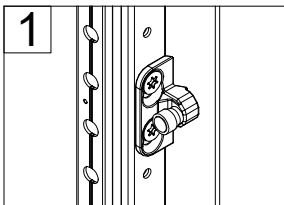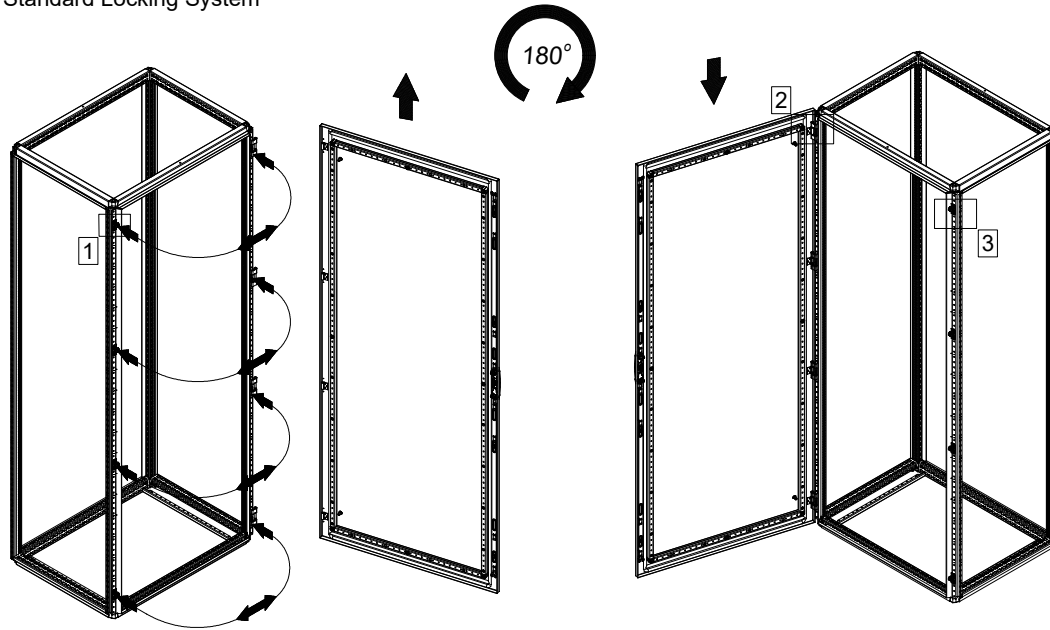


Lift Handle Locking System

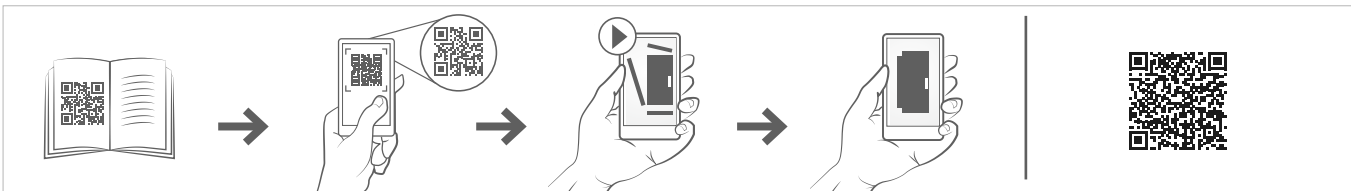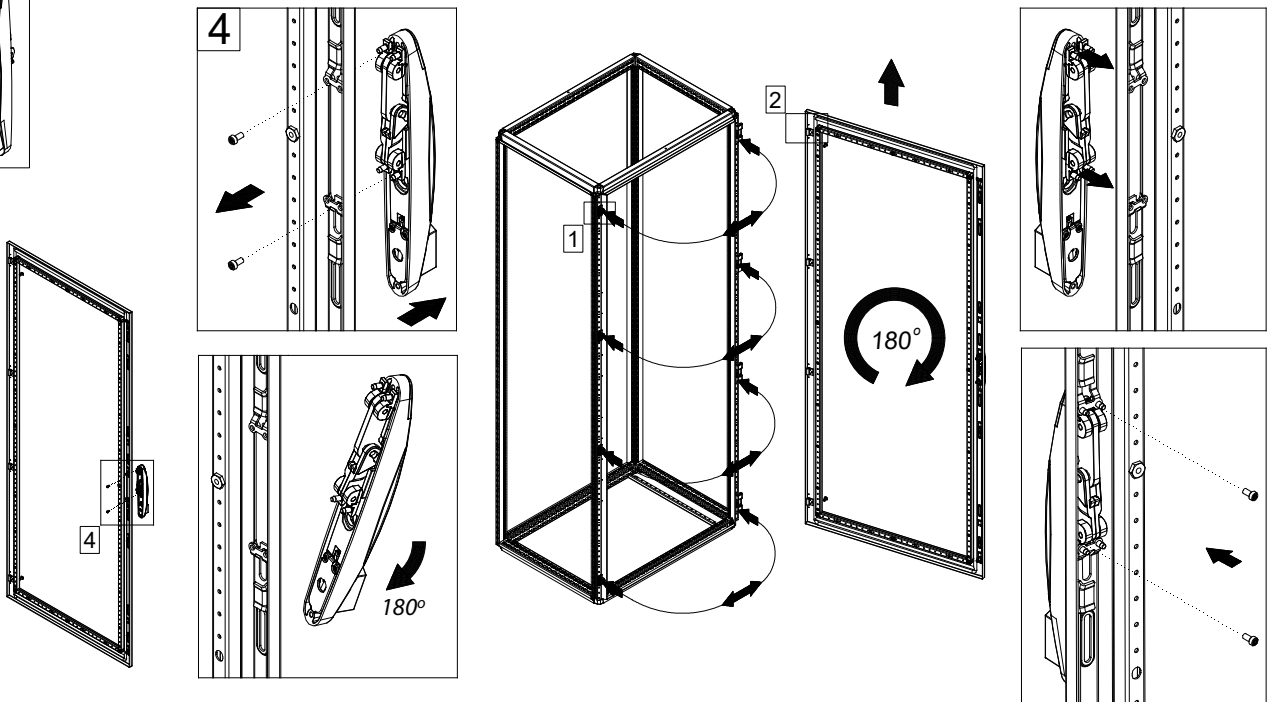

ROOF PLATE








Ref.	Pic.	Qty.
A	 M6x12	2
B	 M12x20	4
C	 M12	4

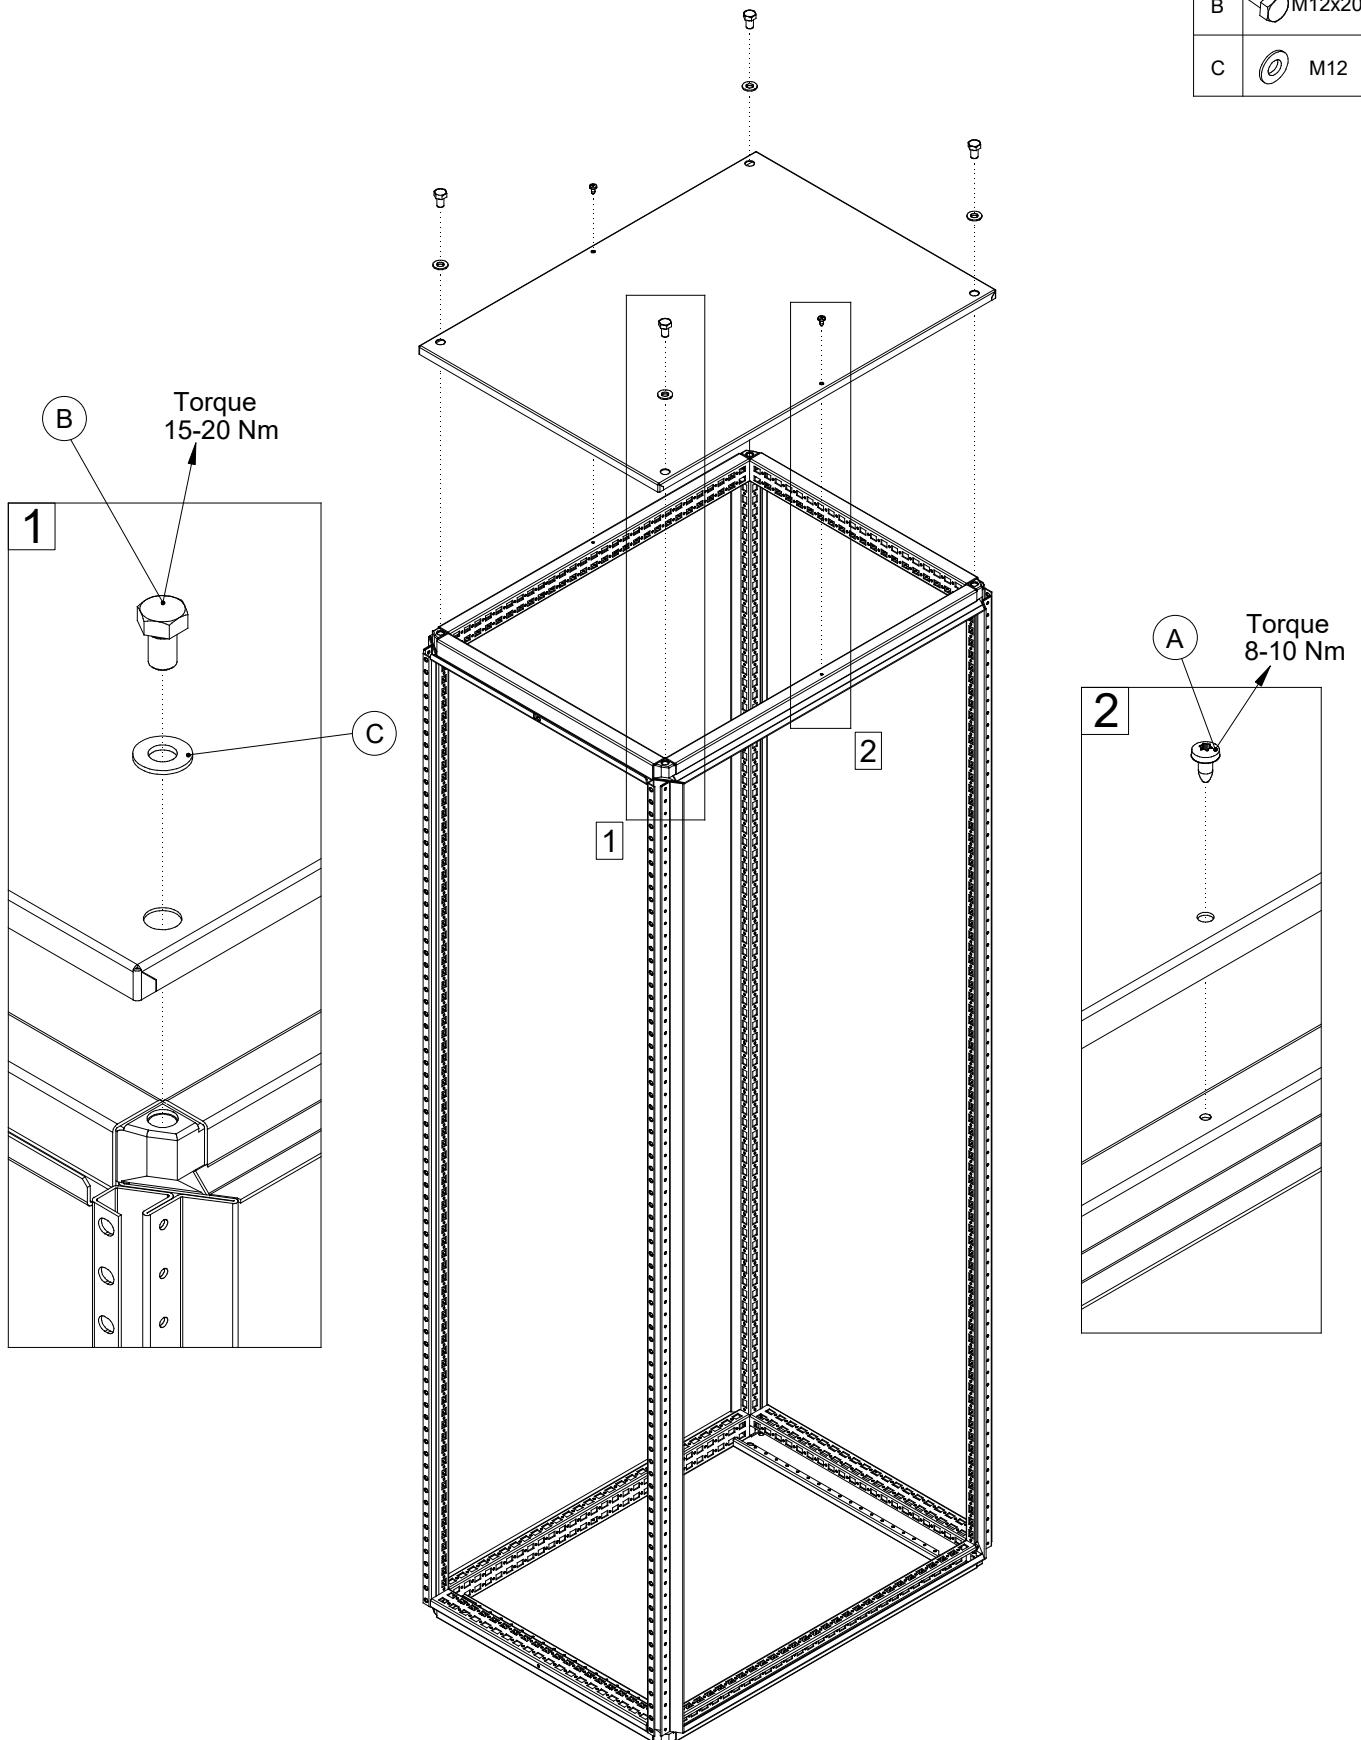



BACK PANEL

Ref.	Pic.	Qty.
A		22

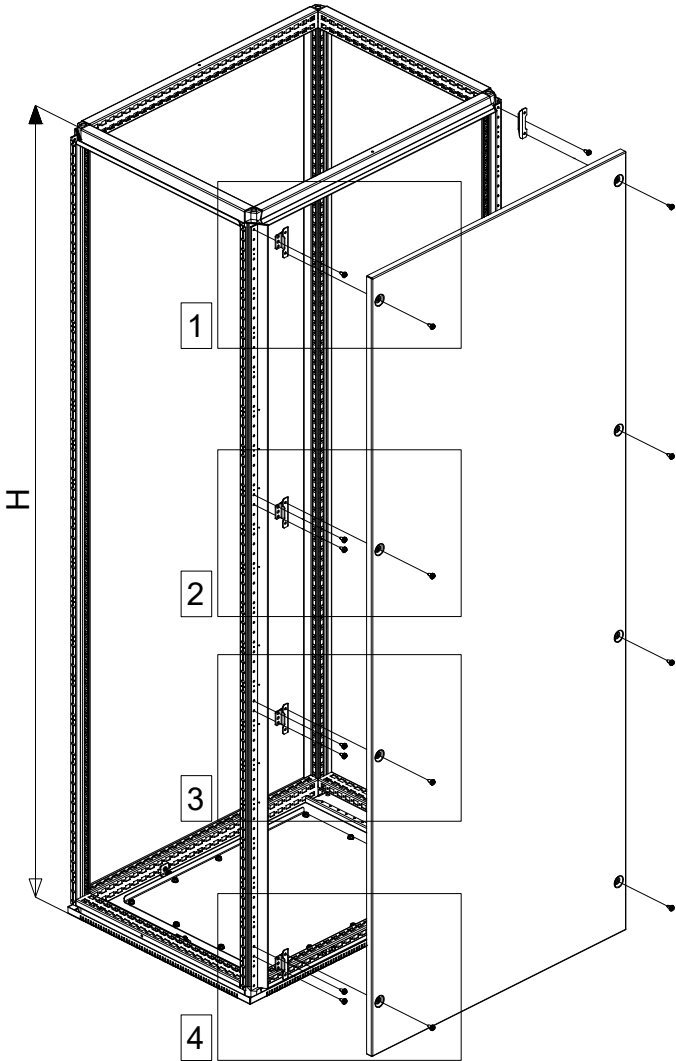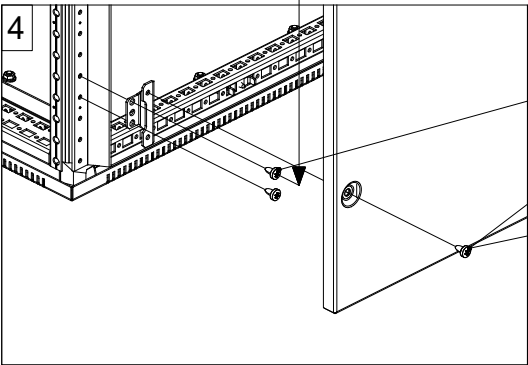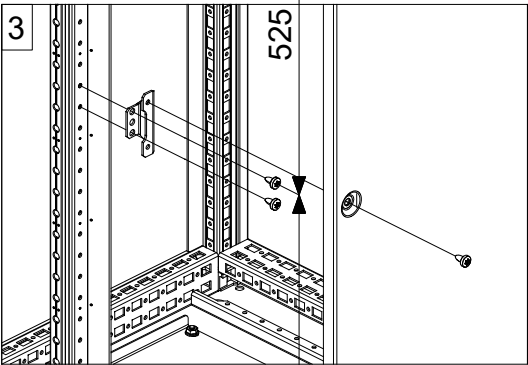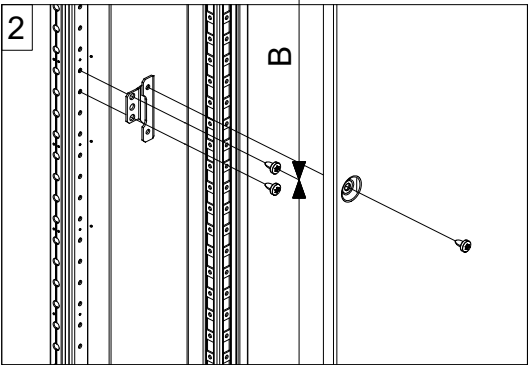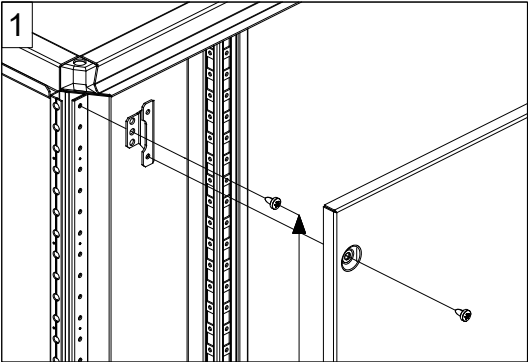


H	A	B
1100	-	350
1400	325	375
1600	425	475
1800	525	575
2000	625	675
2200	725	775




BOTTOM PLATE MCS-HP

Ref.	Pic.	Qty.
A		6
B		20
C		2
D		4




A.

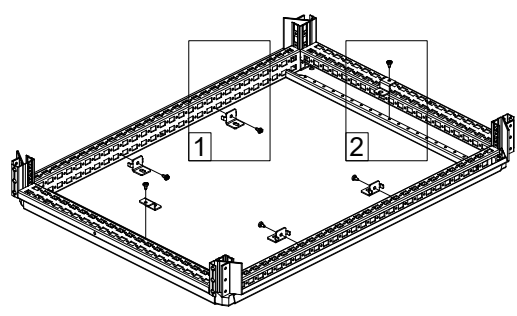




Torque
4.5-5 Nm

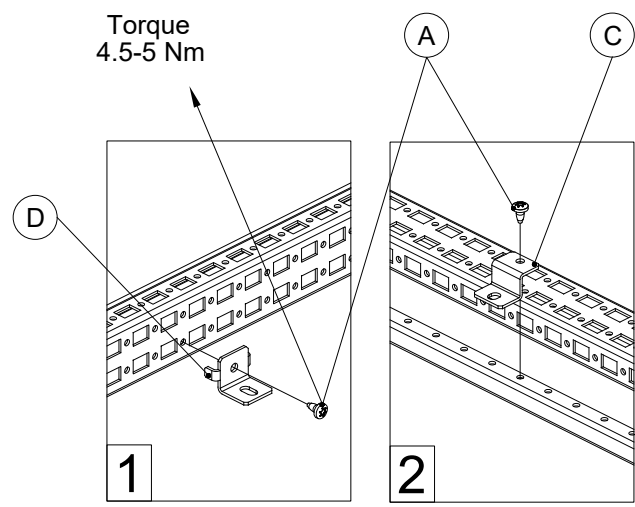

B.

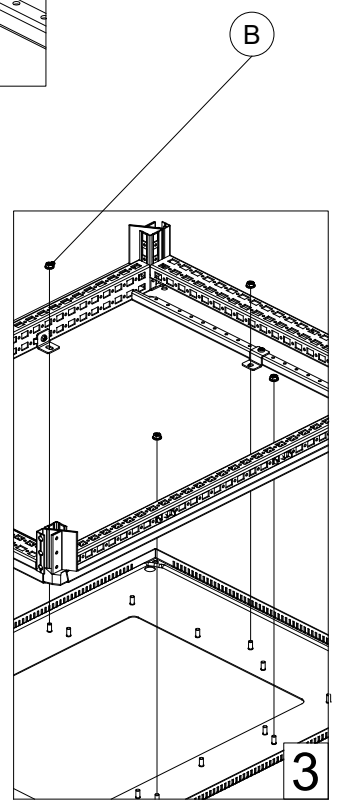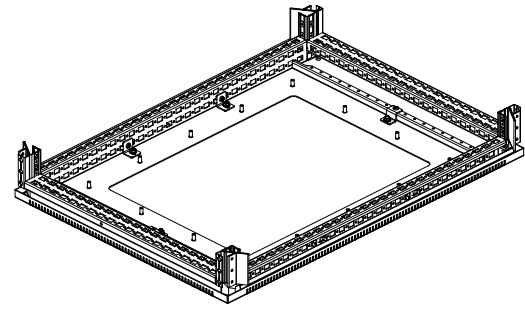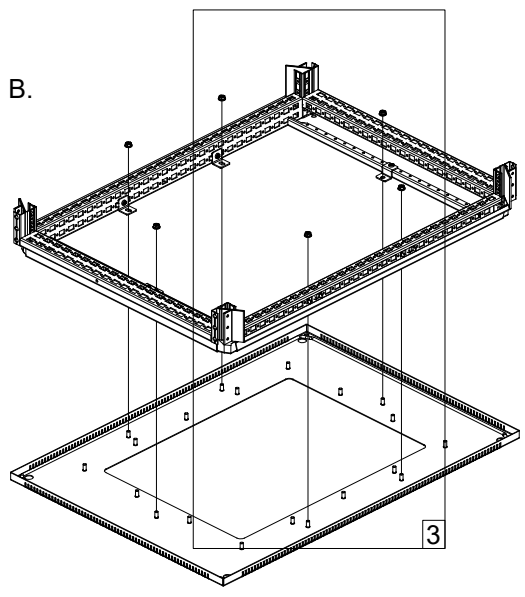




C.

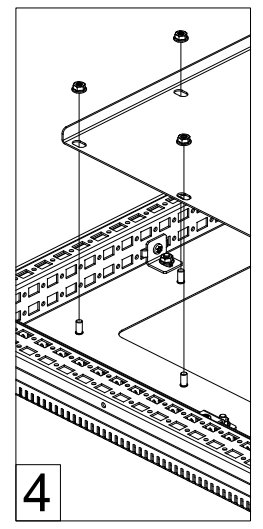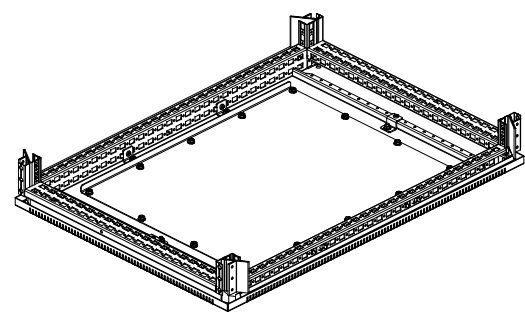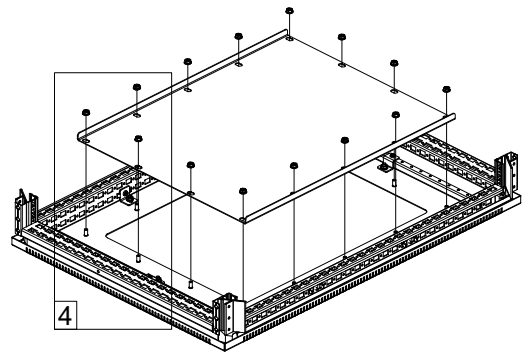




BOTTOM PLATE MCSS-HP

Ref.	Pic.	Qty.
A	M6	14

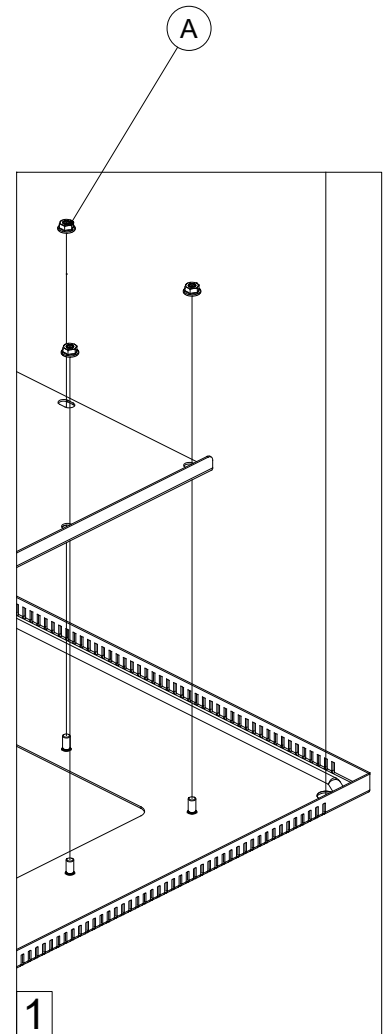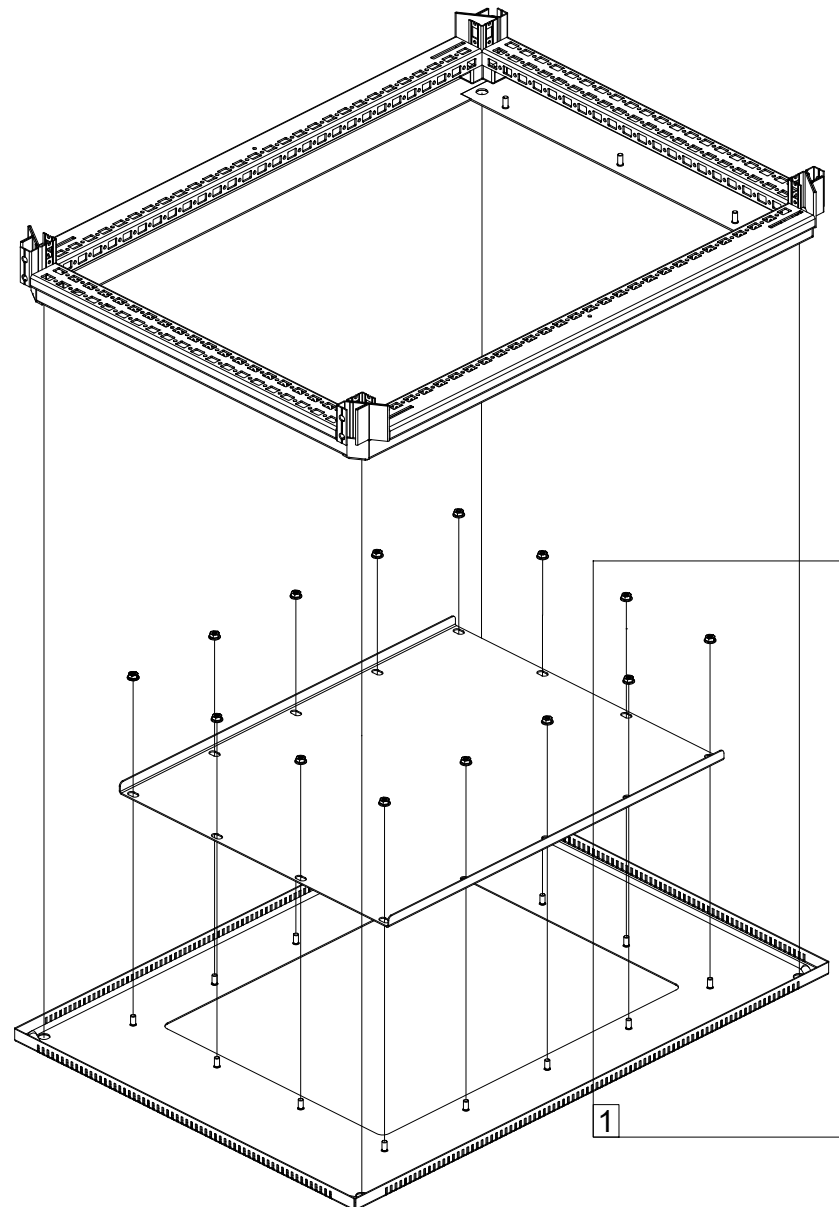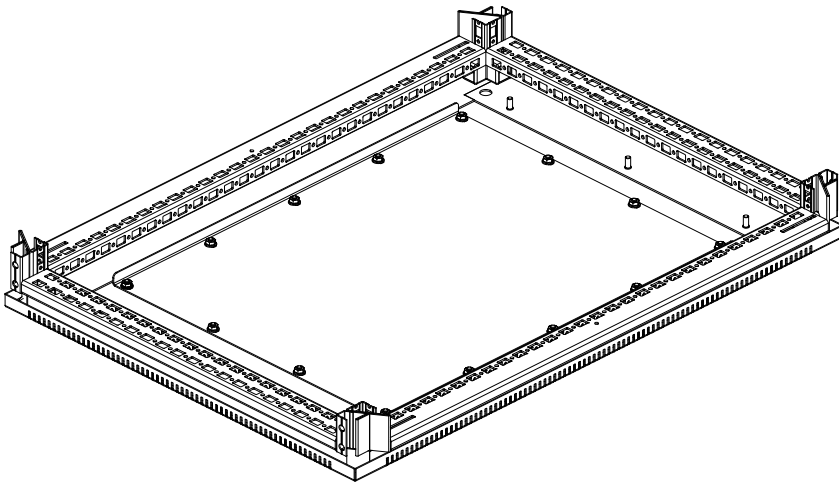




MOUNTING PLATE

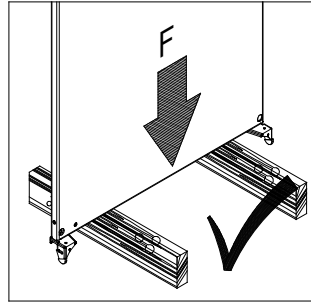


$F > 1000N$

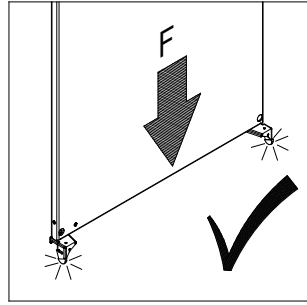




$F \leq 1000N$










Ref.	Pic.	Qty.
A	M8x16	2
B	M8x16	2
C		2
D	Bottom right	1
E	Bottom left	1
F	Top right	1
G	Top left	1

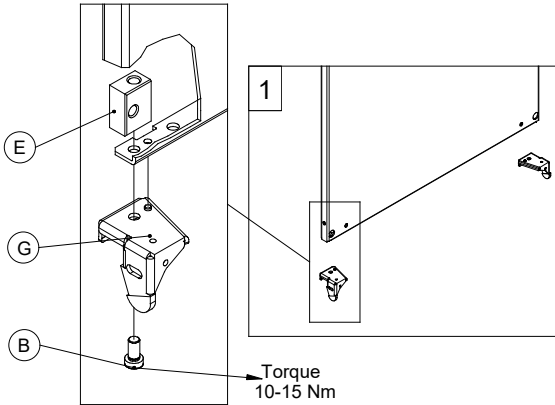

MOUNTING

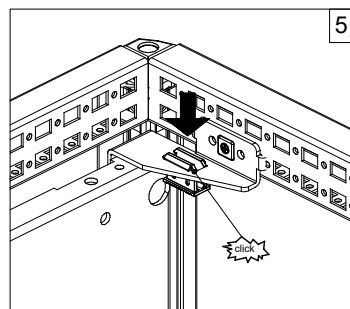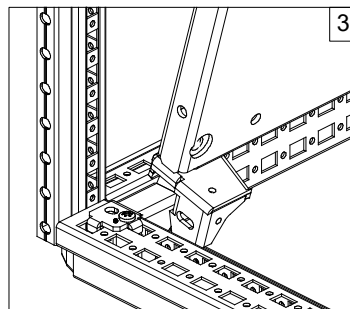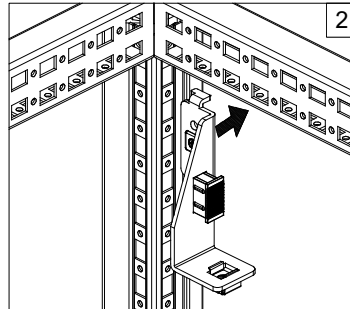



UNMOUNTING

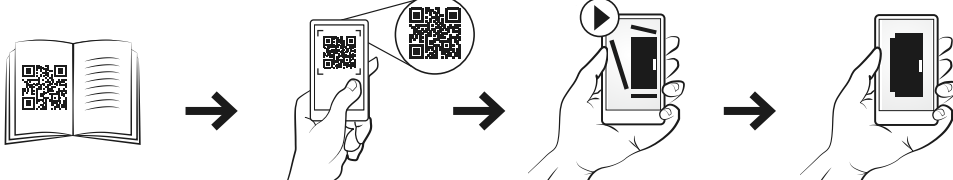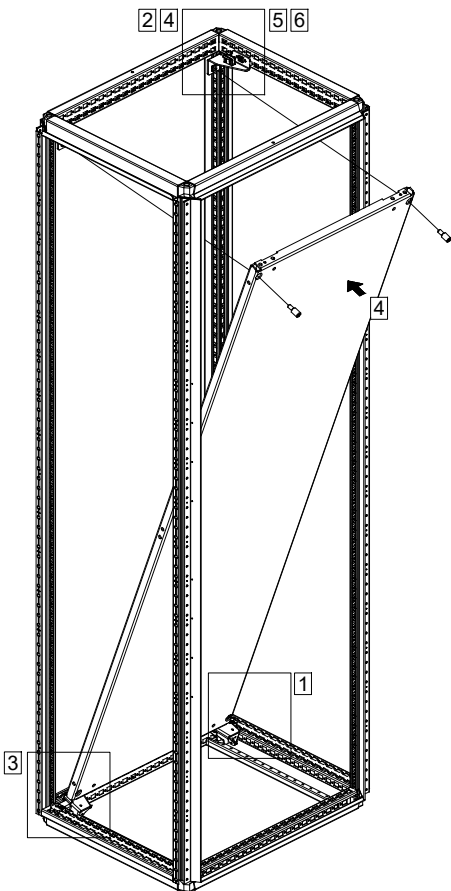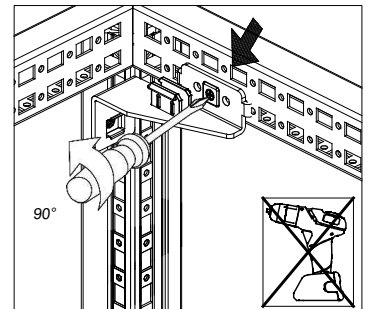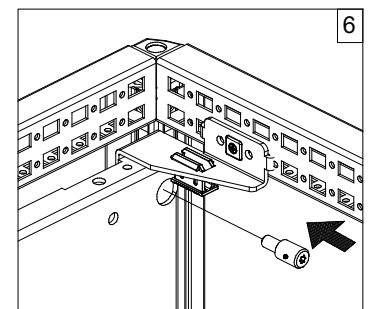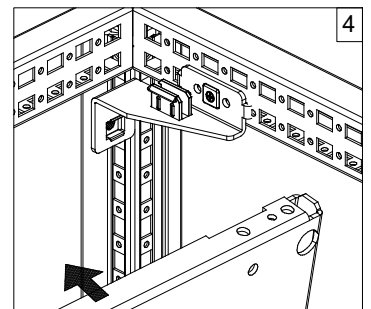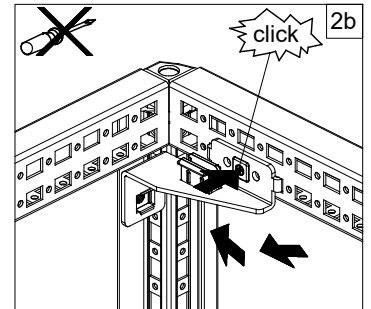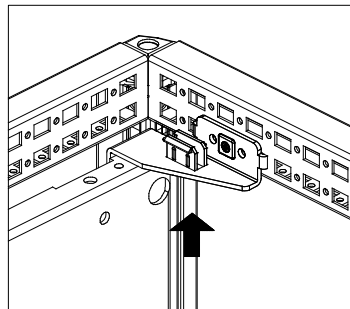









MPD02

Ref.	Pic.	Qty.
A	M5X12	2
B	Bottom left	1
C	Bottom right	1




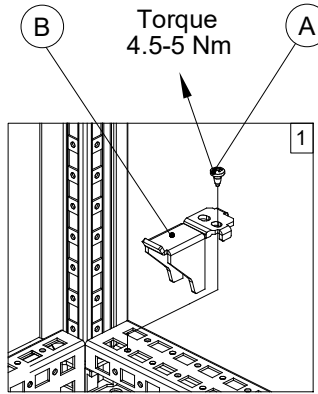
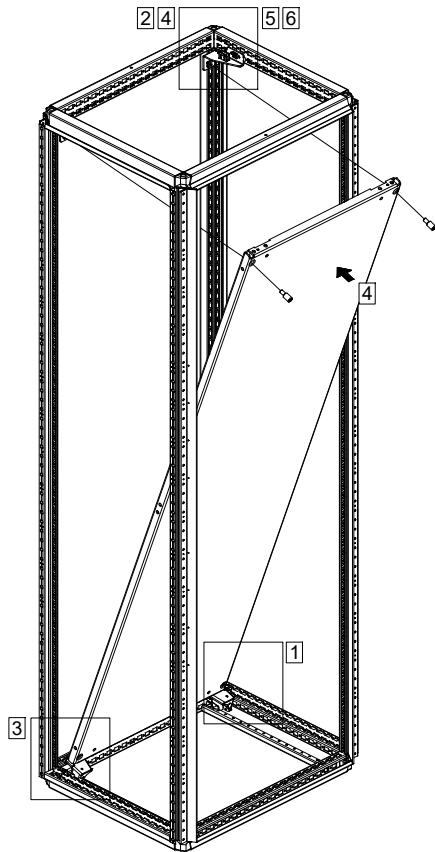


MOUNTING

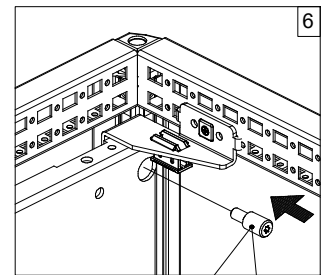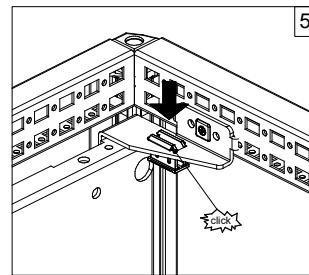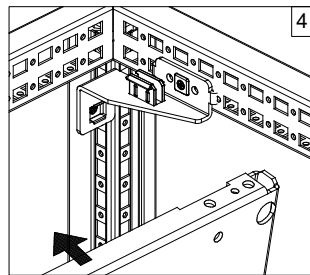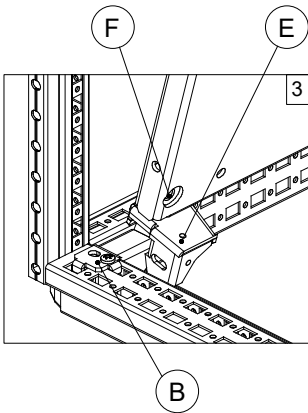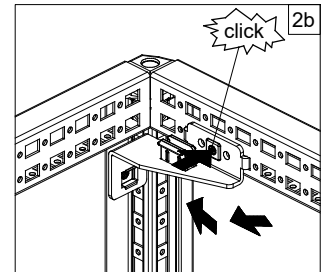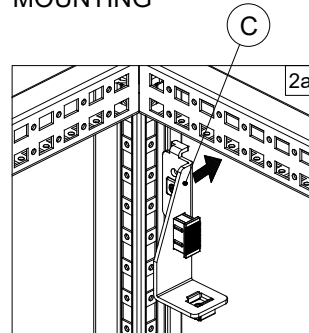

D Torque 4.5-5 Nm




UNMOUNTING

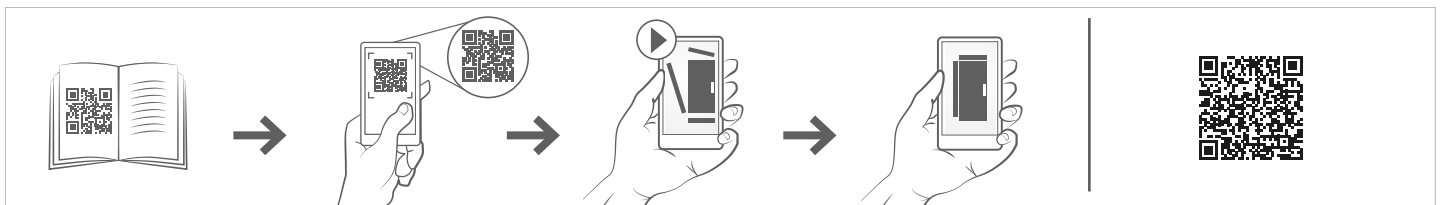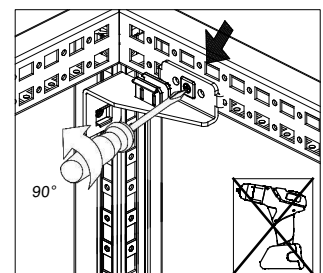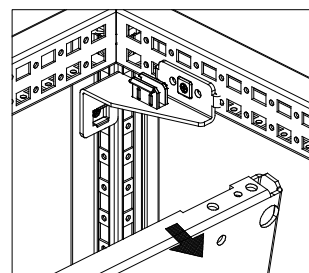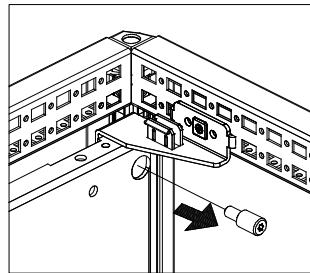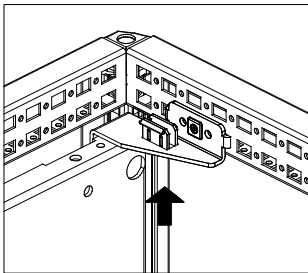







SPM

Ref.	Pic.	Qty.
A		9
B		8
C		2

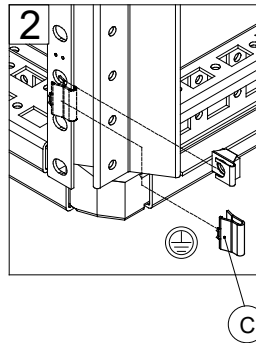
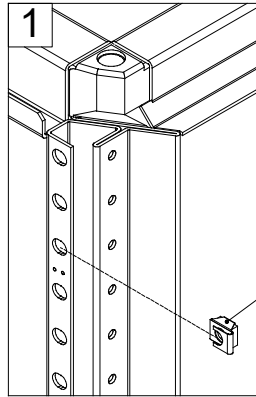
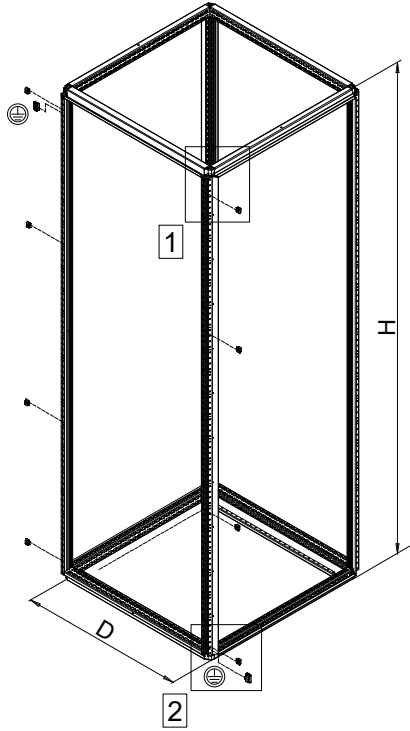


H	R	S
1100	475	450
1400	425	375
1600	475	475
1800	525	575
2000	625	575
2200	675	675

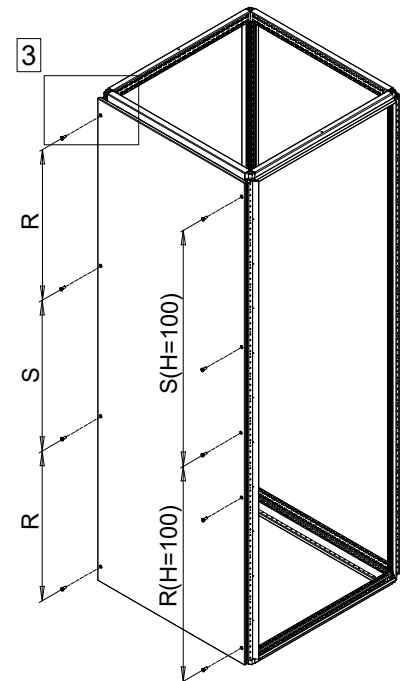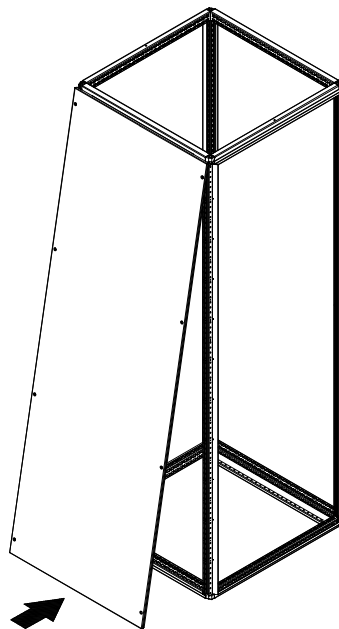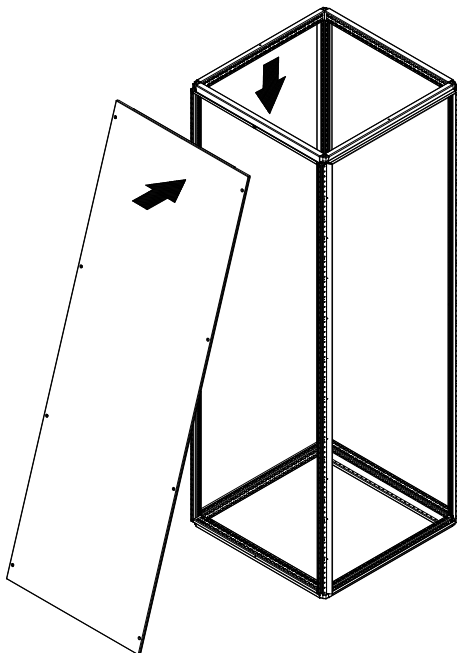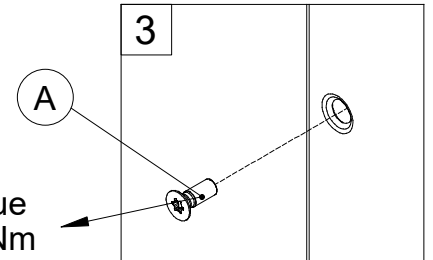

HPPG01 Puzzle Gasket

Ref.	Pic.	Qty.
A		4

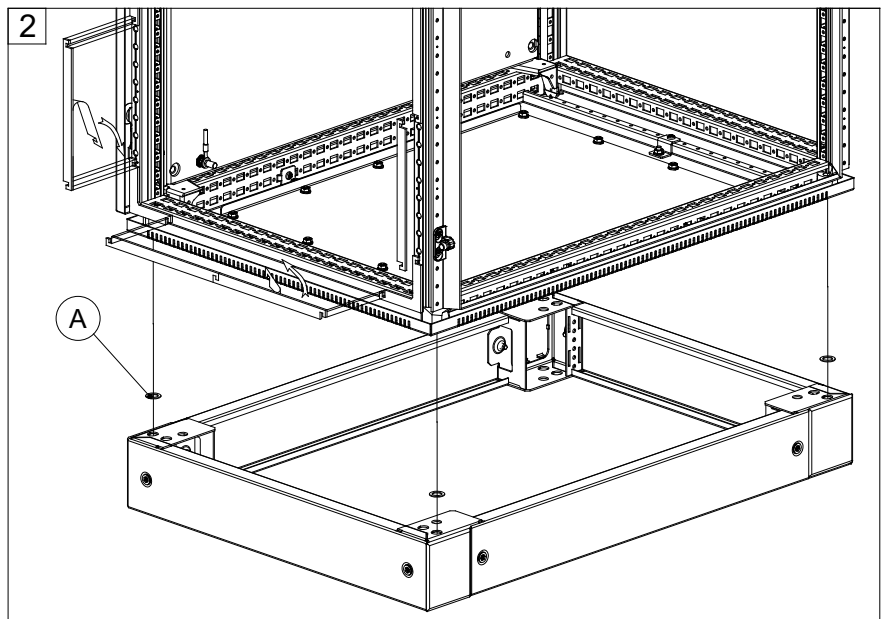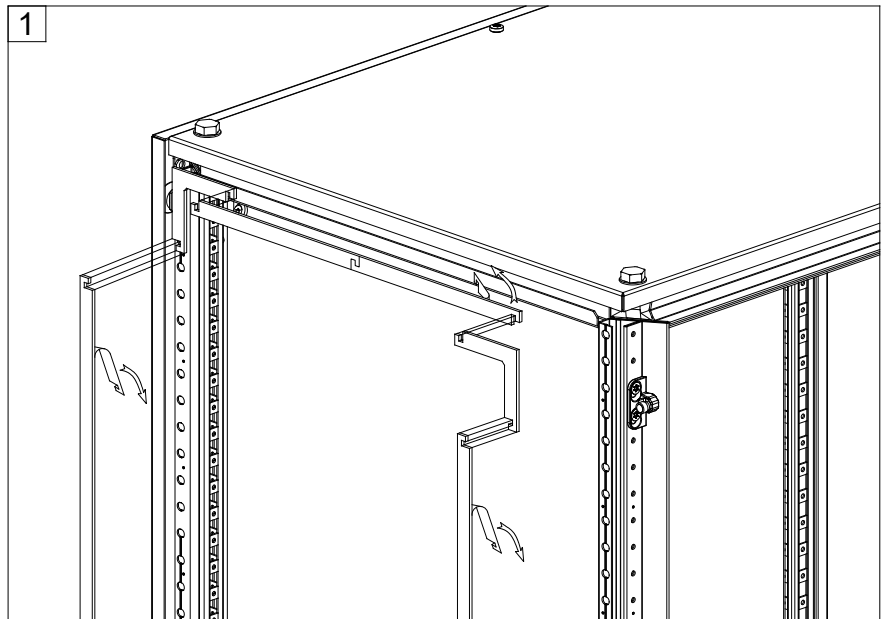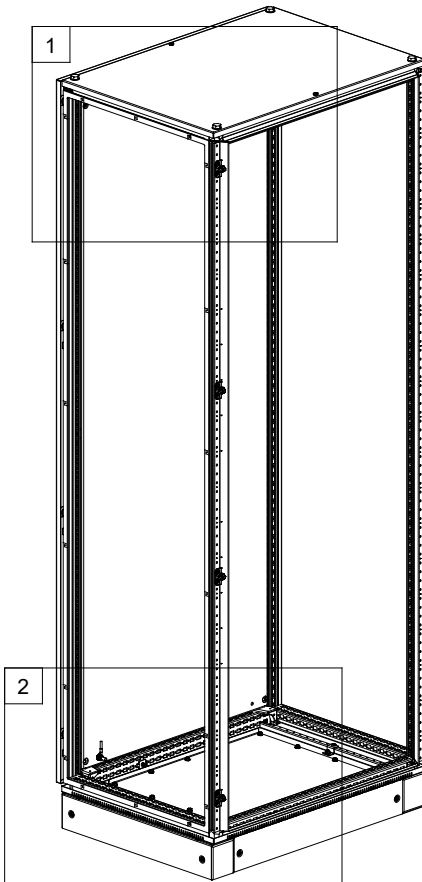


MCS20086HP MCSS20086HP				
ENCLOSURE HIGHT				
H=2000	4x	0x	2x	8x
ENCLOSURE DEPTH				
D=600	-	0x	4x	0x

*To combine the enclosures side to side
CCI06 and CCM04 are also required.




*Nylon washers for plinth fixation are included
in the enclosure kit.






Ref.	Pic.	Qty.
A		24
B		6

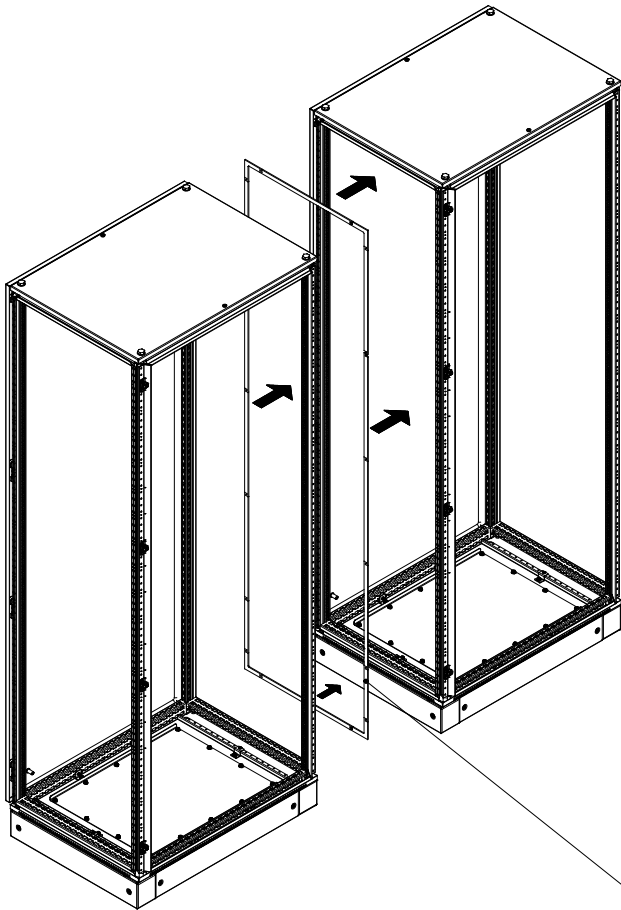

HPPG01

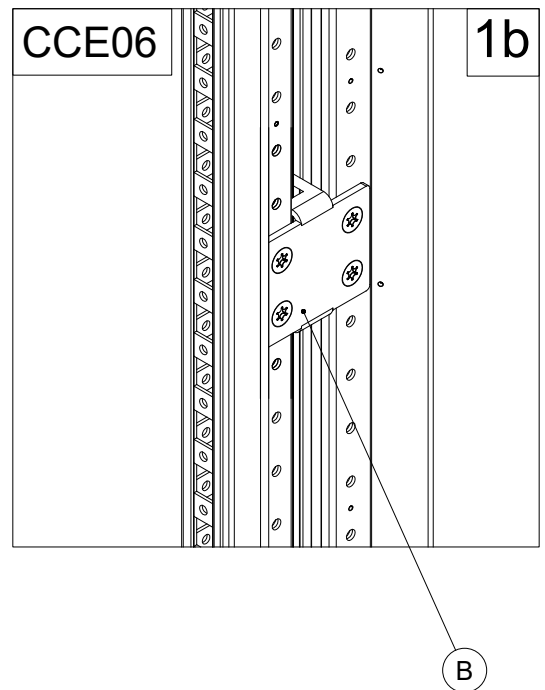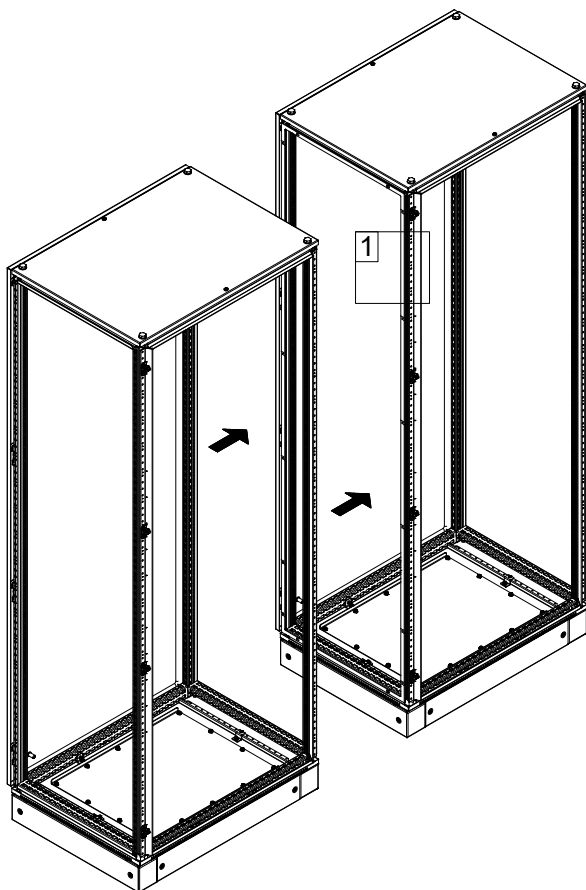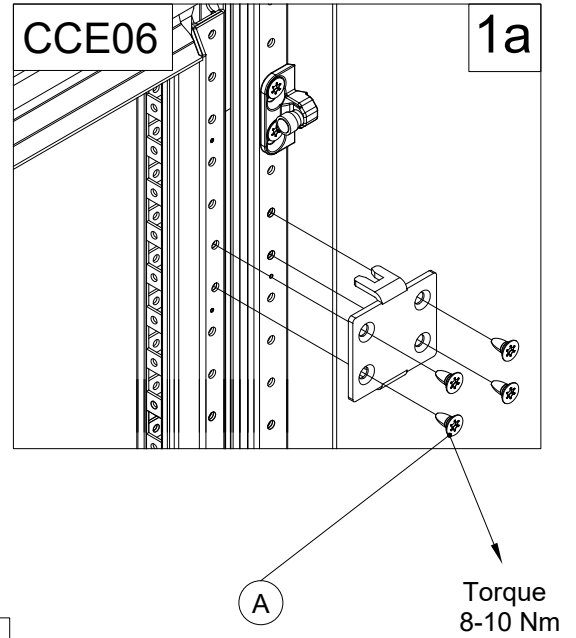










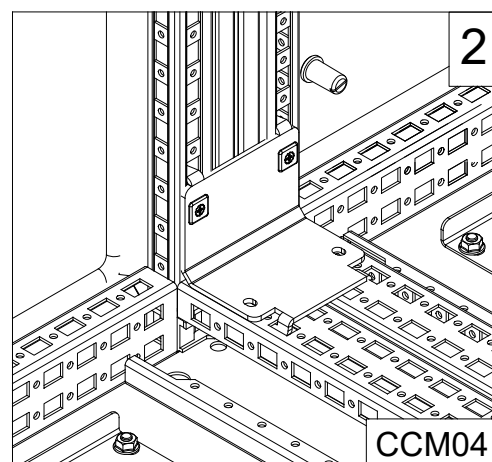
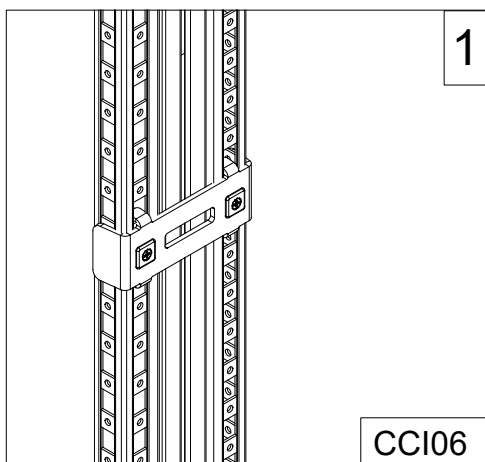
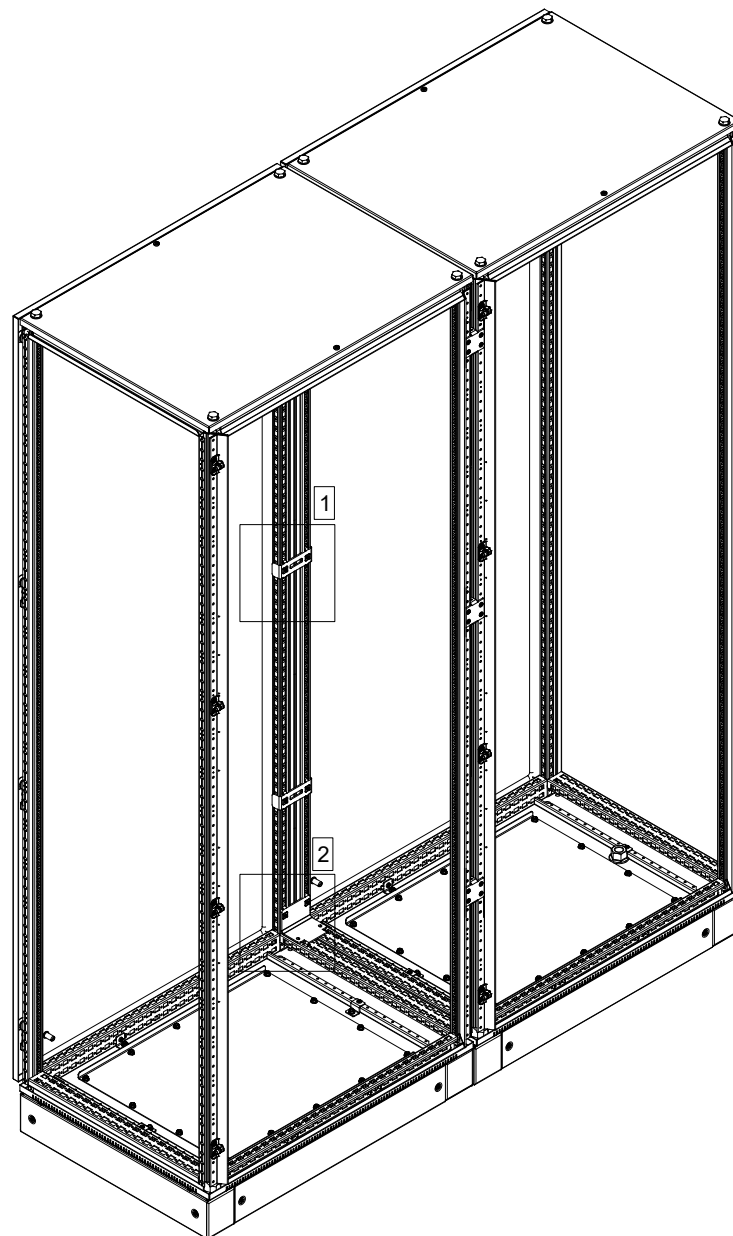




CCM 04

Ref.	Pic.	
A		4
B		8

MOUNTING

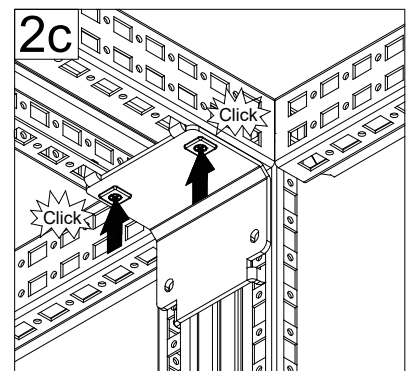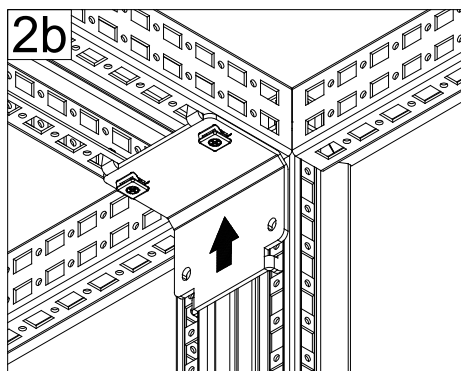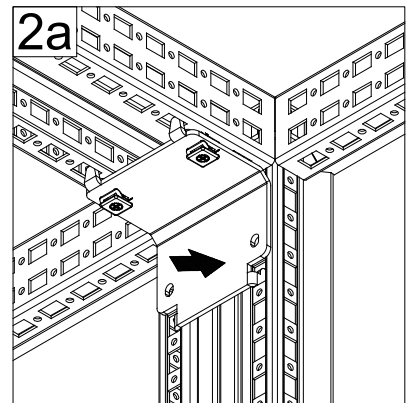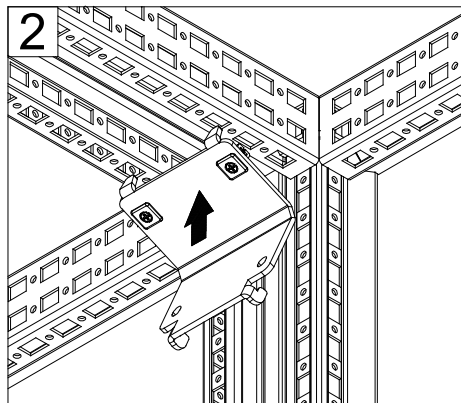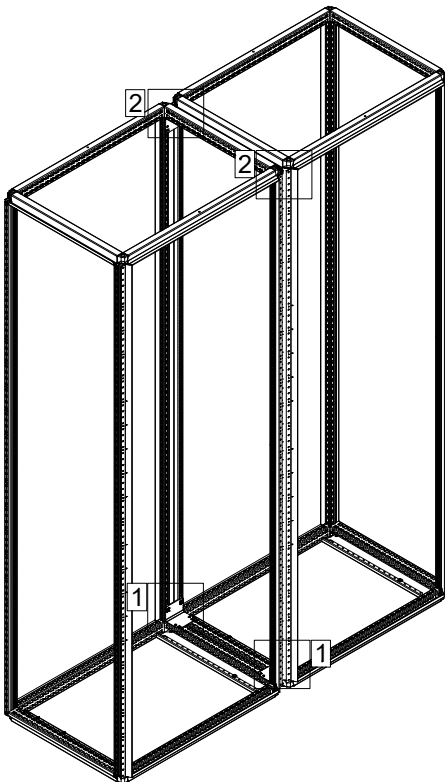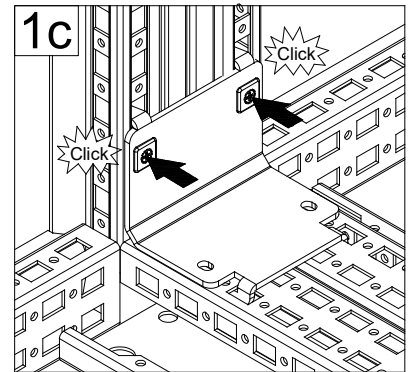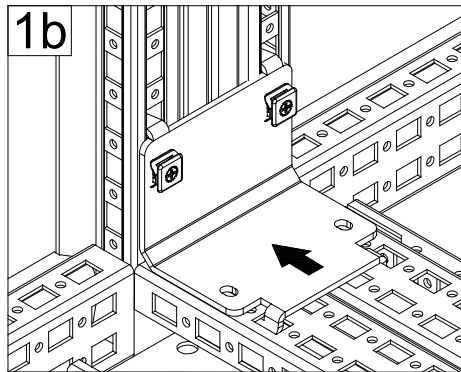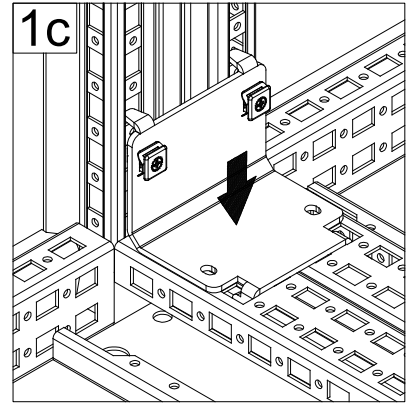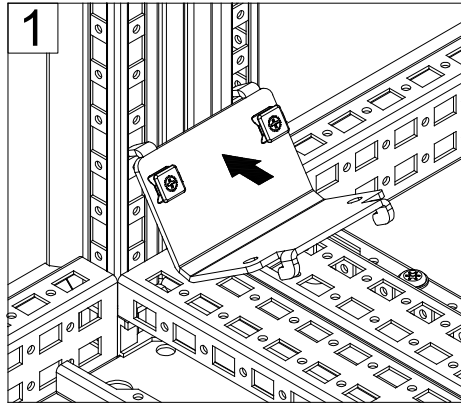
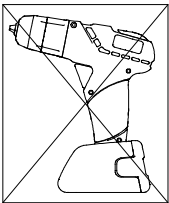
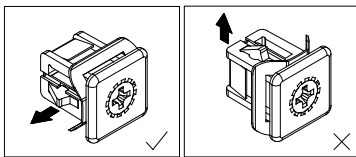
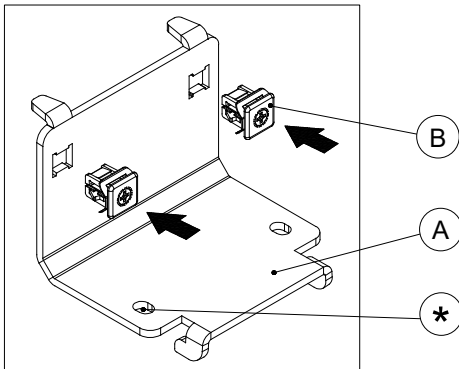


Note: It is mandatory for all four brackets to be installed at all four corners !

★ The fixation holes can be used to better fix the bracket to the frame, using cage nuts and screws !












Ref.	Pic.	Qty.
A		4
B		4
C		2
D		4

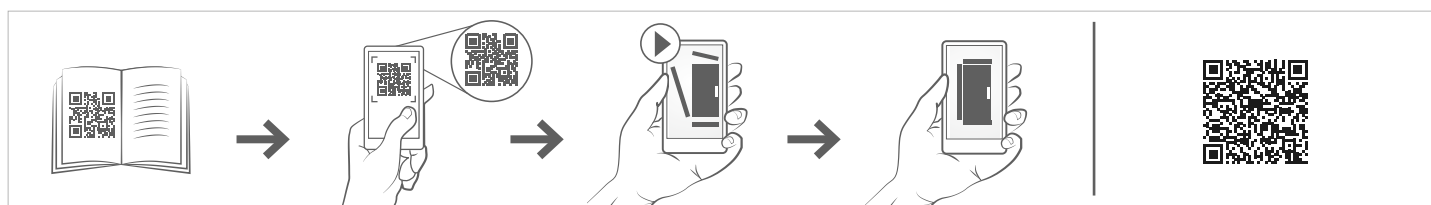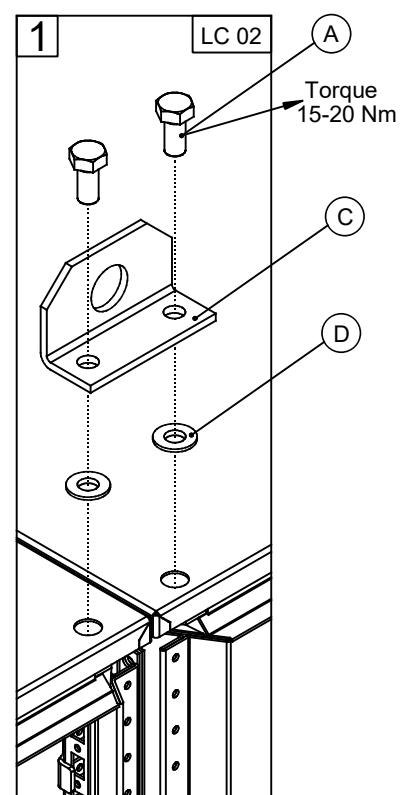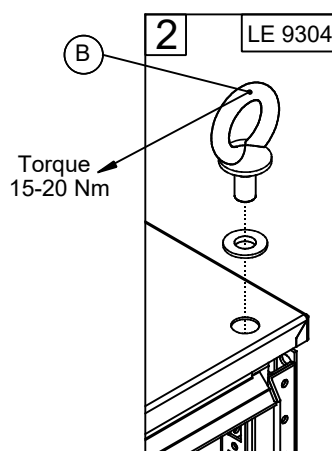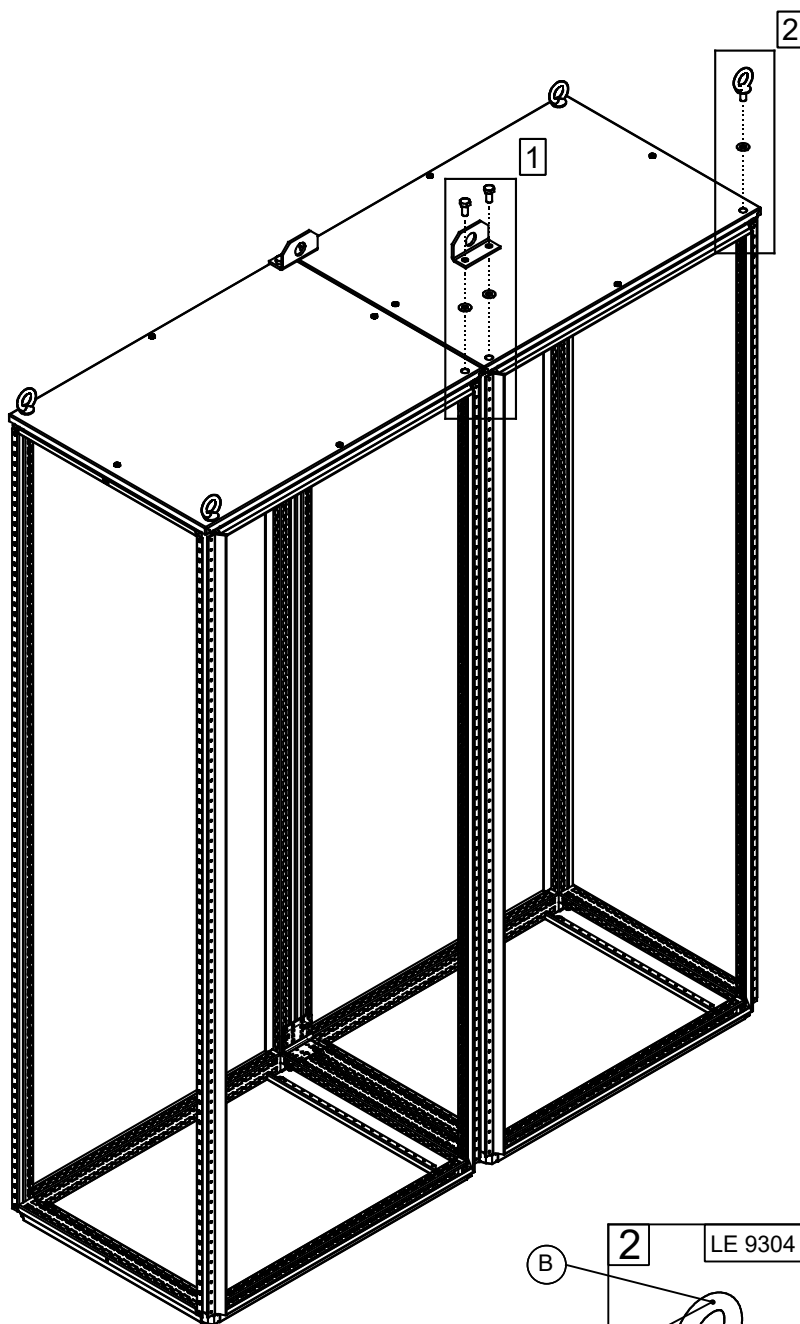


MPF

Ref.	Pic.	Qty.
A		1
B		1
C		2
D		2

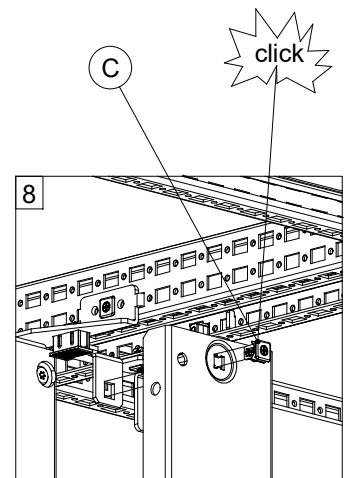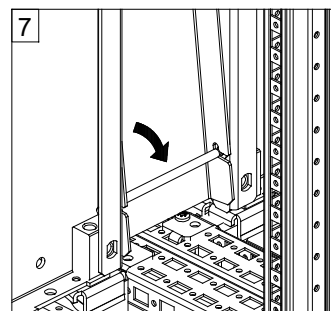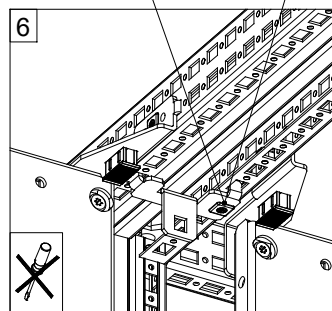
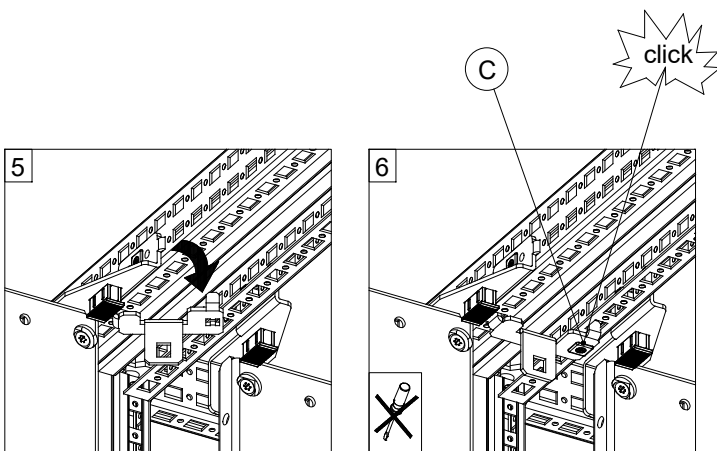
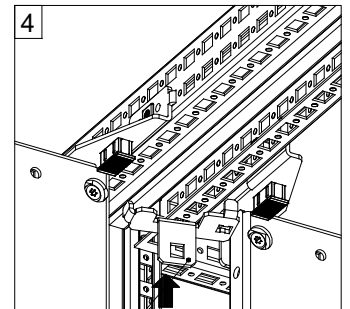
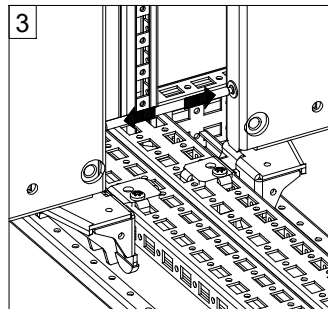
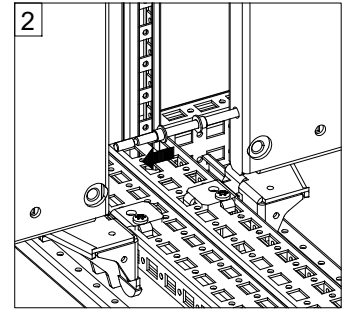
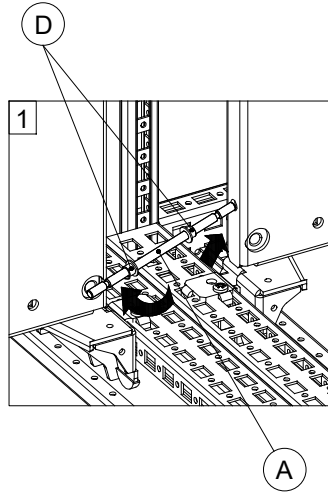
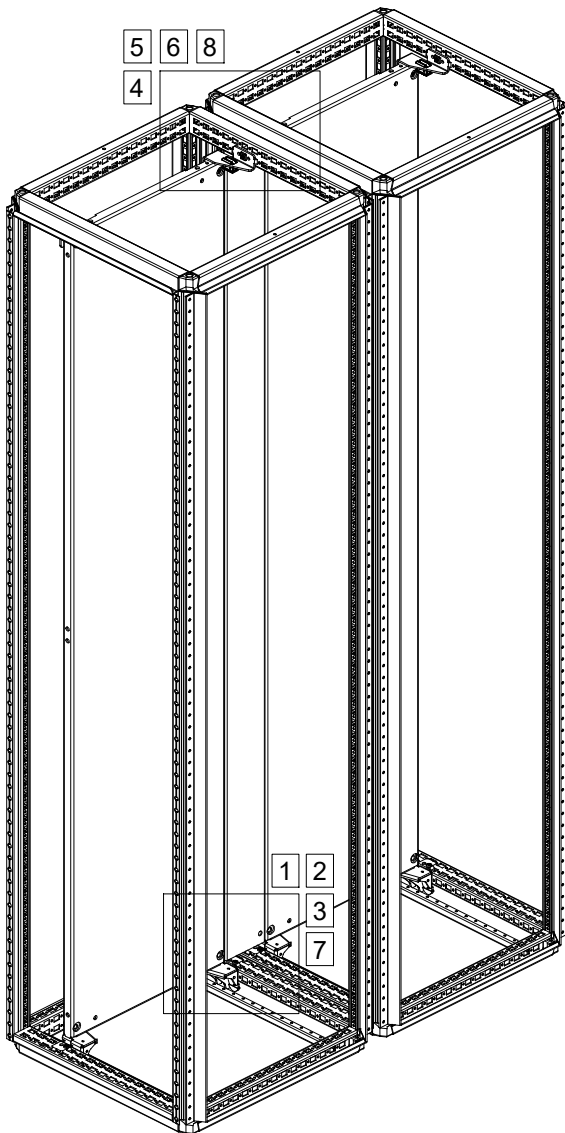



Back view

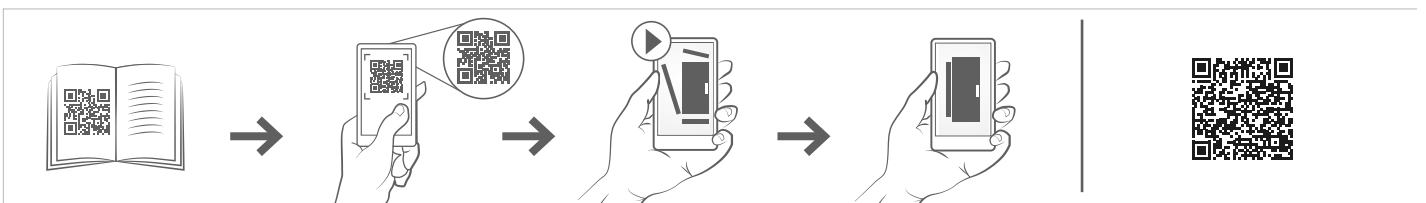






DHN 180




Ref.	Pic.	Qty.
A	 M6x12	8

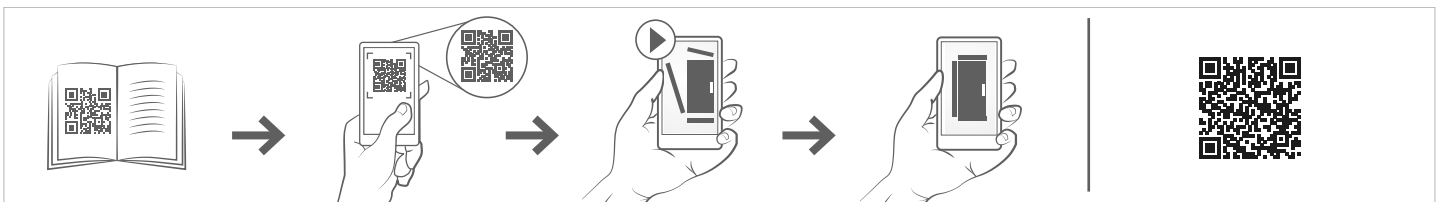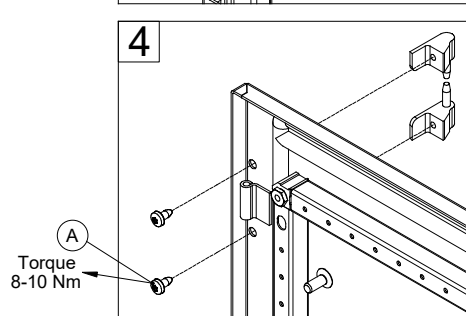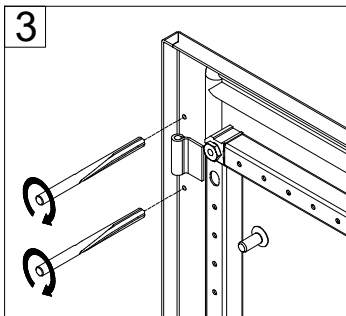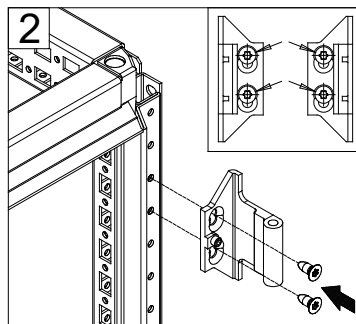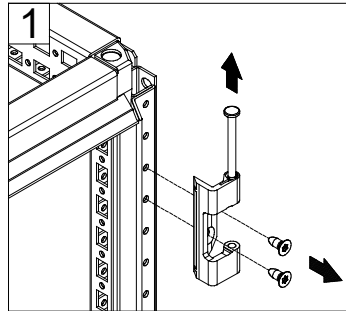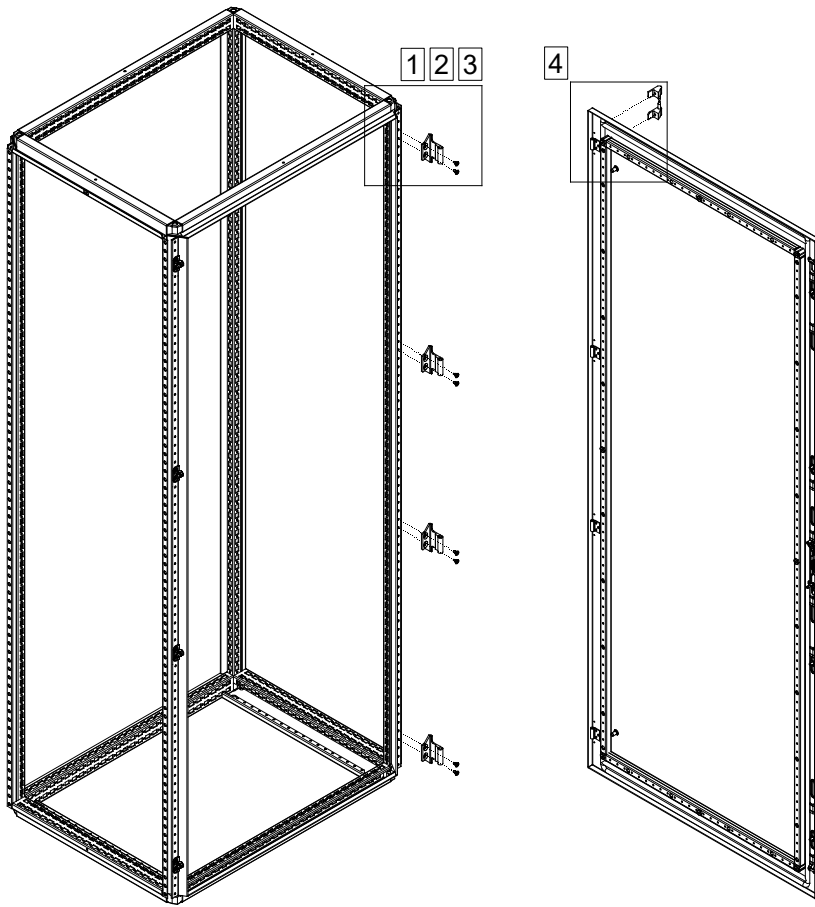




DHN 180 DOOR ADJUSTMENT

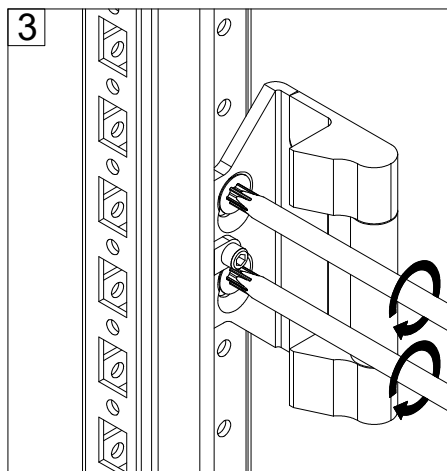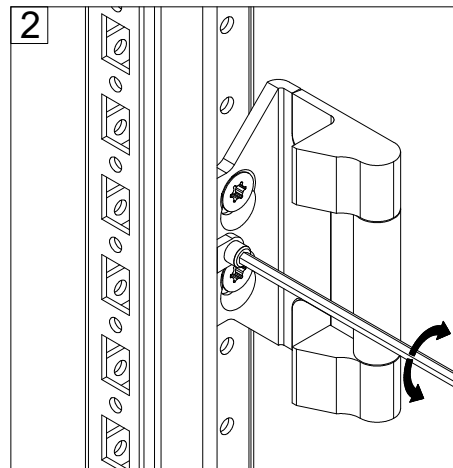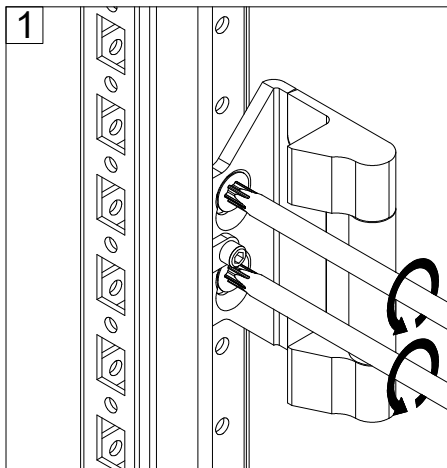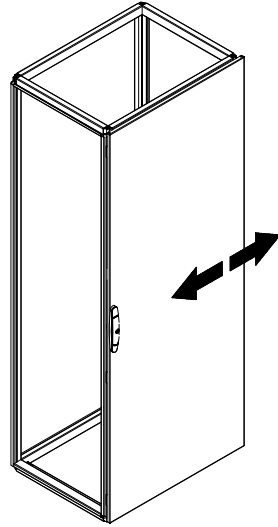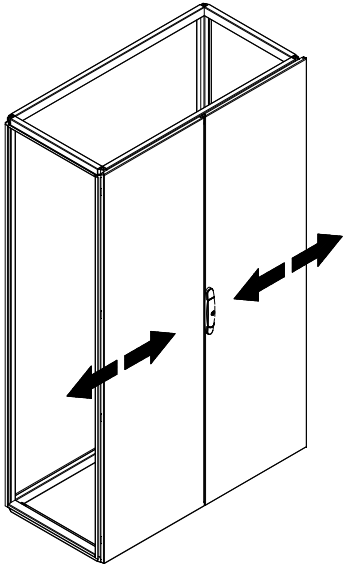

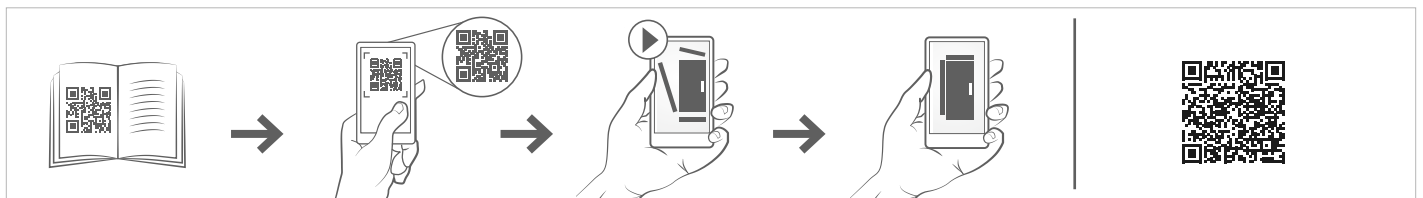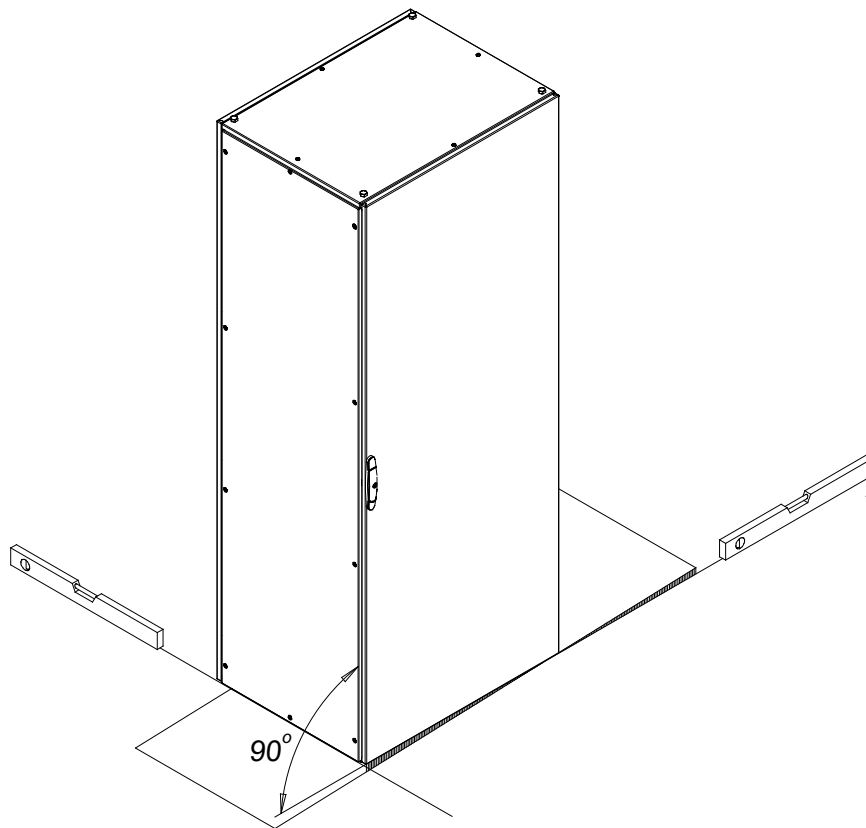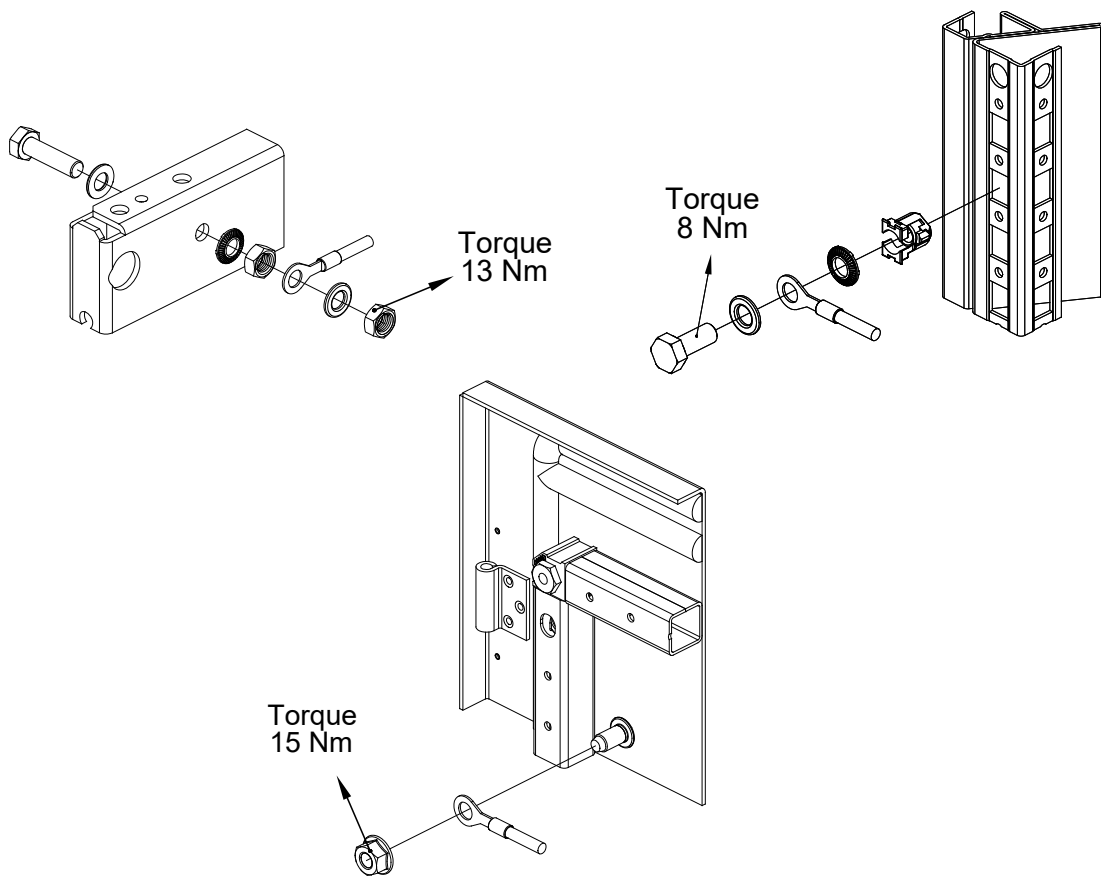

CNM

Ref.	Pic.	Qty.
A		1

