



Industrial Workstation

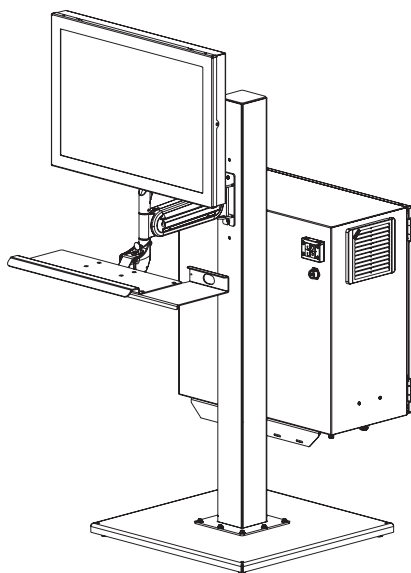


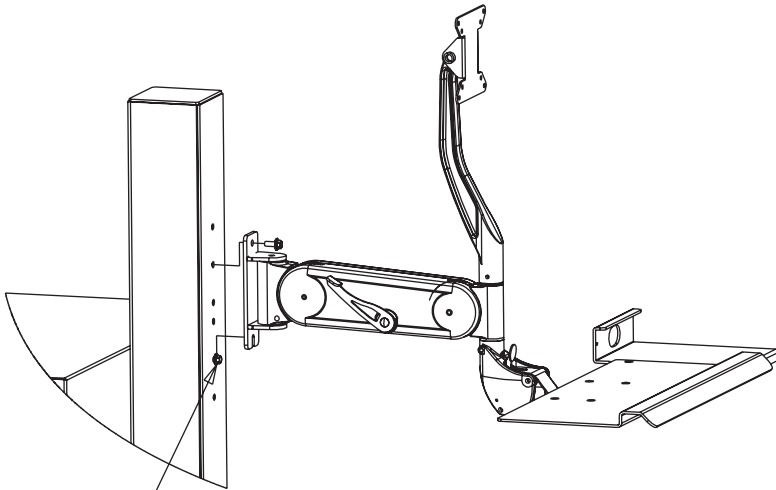

The monitor arm mounting screws are preinstalled in the column mounting holes:

1. Remove the top screw
2. Loosen the bottom screw
3. Hang the monitor arm on bottom screw
4. Install the top screw and tighten both screws

Figure 1

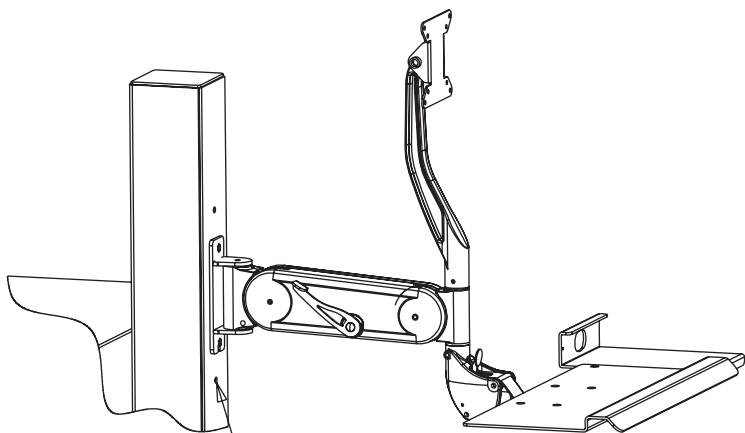

Additional holes provide
a 2.0 inch vertical adjustment
for greater height range

Figure 2

1. Attach bracket to monitor with two top thumb screws provided with the monitor arm, do not tighten completely
2. Lower the monitor over the monitor mount plate so the bracket is on the back of the mounting plate

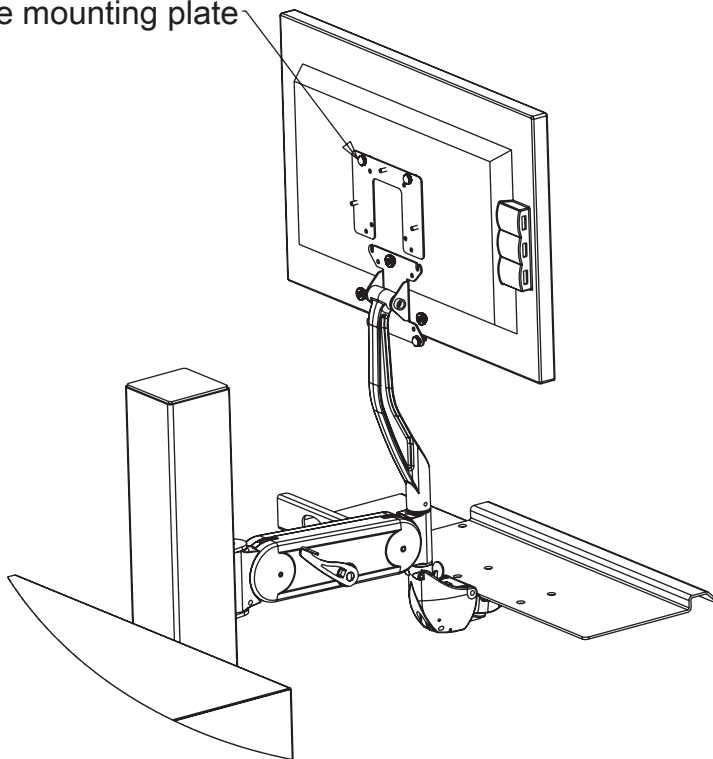


Figure 3

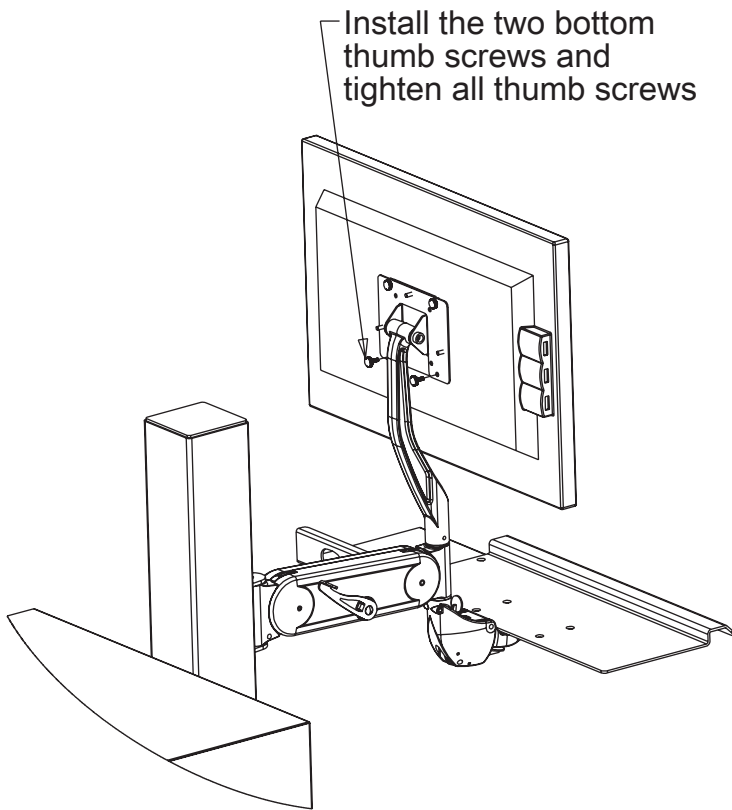


Figure 4

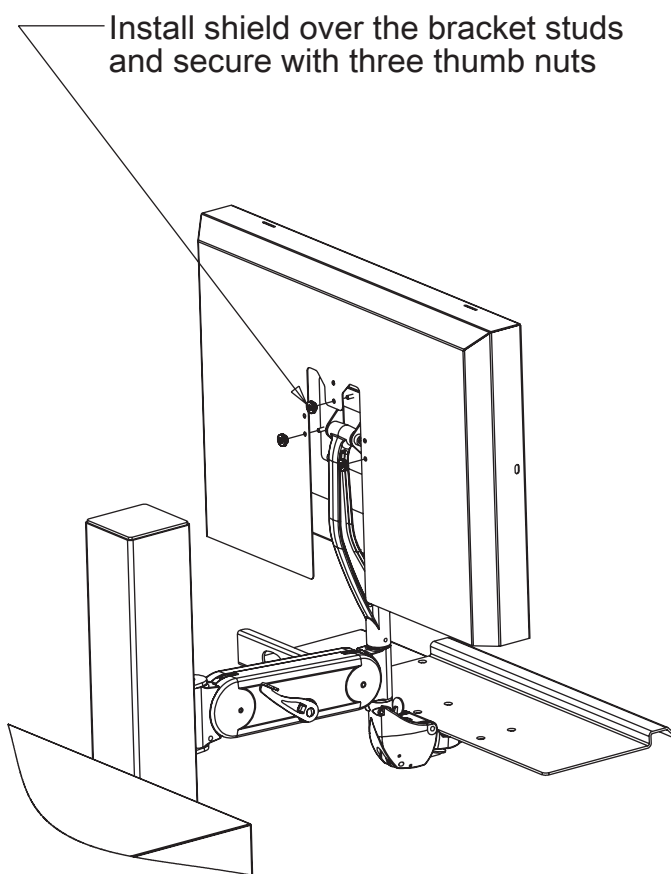


Figure 5


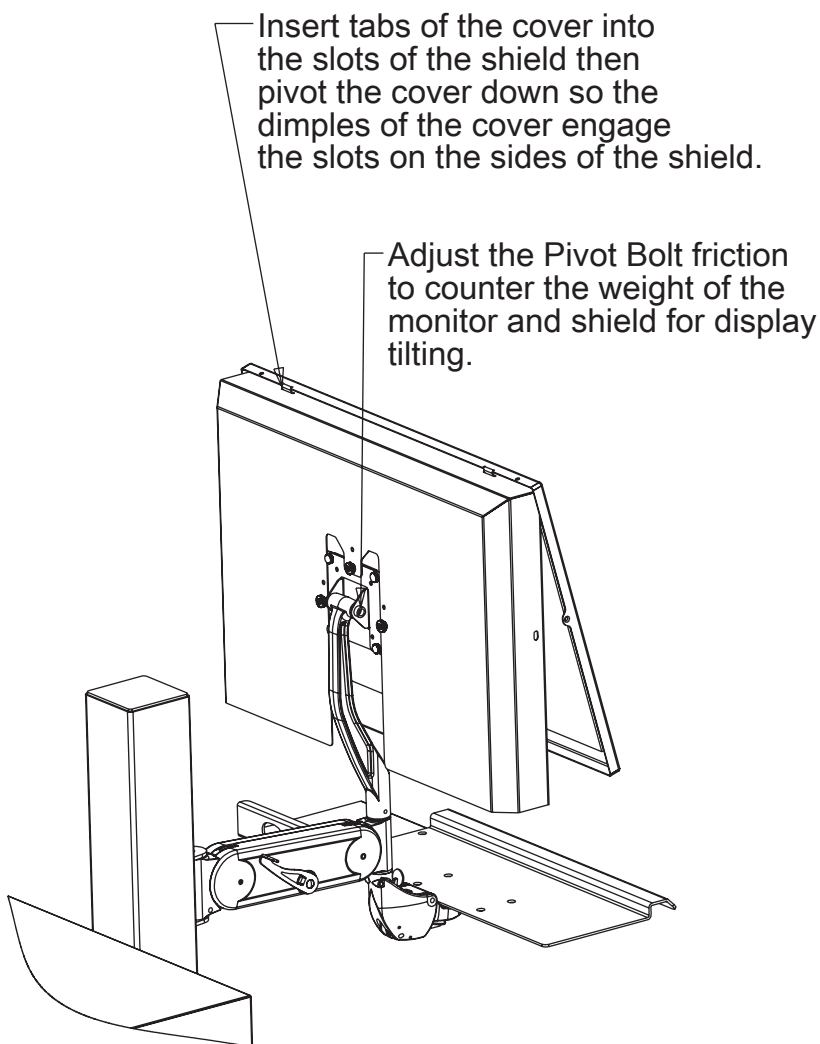


Figure 6

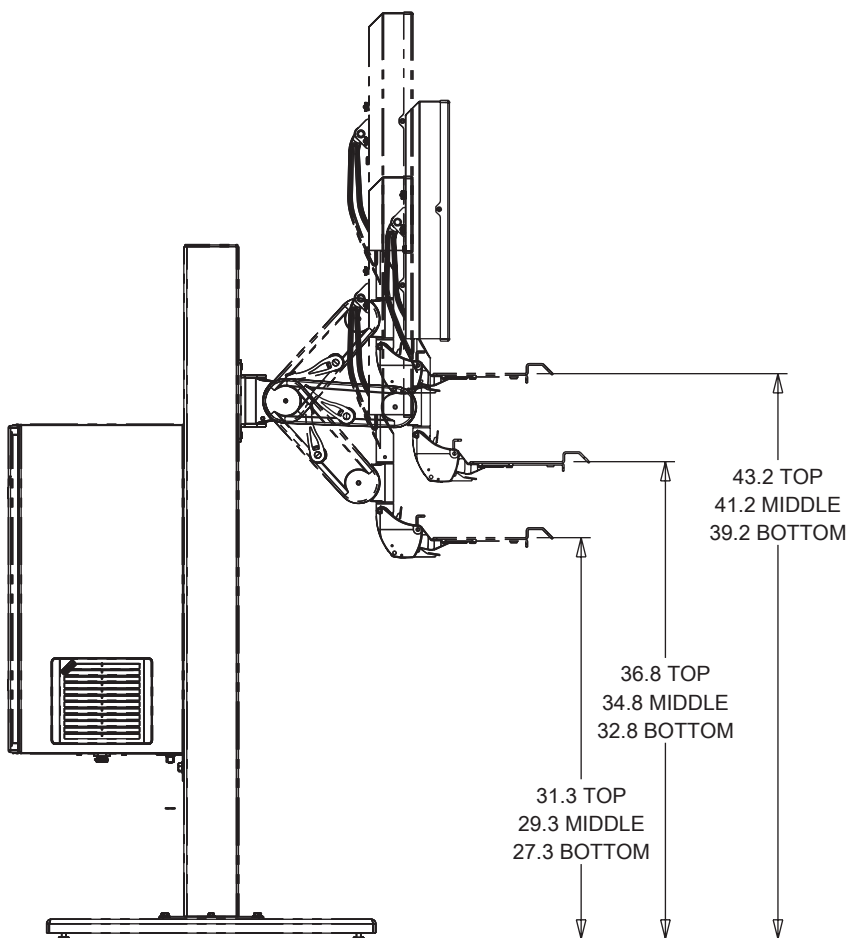

Approximate keyboard heights when alternate mounting positions are used.

Figure 7