

Installation Instructions

150DP AND K150DP

Deadbreak Dead-End Plug

CONTENTS: *Dead-end Plug, Nylon Venting Rod, Installation Instructions.*

The Elastimold 150DP and K150DP dead-end plugs are used to insulate the receptacle portion of the following Elastimold products:
154LR, K154LR and 156LR elbow connectors
150T and K150T tee connectors
151SR and K151SR straight receptacles

DANGER

All apparatus must be de-energized during installation or removal of part(s). For loadbreak products follow operating instructions. All deadbreak connectors must be de-energized before operating. All 200A deadbreak connectors must be mechanically secured with bails when connected.

All apparatus must be installed and operated in accordance with individual user, local, and national work rules. These instructions do not attempt to provide for every possible contingency.

Do not touch or move energized products.

Excess distortion of the assembled product may result in its failure.

FOR MORE INFORMATION ON PARTS, INSTALLATION RATINGS AND COMPATIBILITY, CALL THE NEAREST ELASTIMOLD OFFICE.

Inspect parts for damage, rating and compatibility with mating parts.

This product should be installed only by competent personnel trained in good safety practices involving high voltage electrical equipment. These instructions are not intended as a substitute for adequate training or experience in such safety practices.

Failure to follow these instructions will result in damage to the product and serious or fatal injury.


If this product is supplied with a protective shipping cover(s), remove this shipping cover(s) and replace with the appropriate HV insulated cap(s) or connector(s) before submerging or energizing the circuit.

IMPORTANT

1. Check contents of package to ensure they are complete and undamaged.
2. Check all components to ensure proper fit with cable and/or mating products.
3. Read entire installation instructions before starting.
4. Have all required tools at hand and maintain cleanliness throughout the procedure.


STEP 1

Inspect the mating receptacle interface to make sure it is dry and clear of contaminants. Remove the protective shipping cap from the dead-end plug.

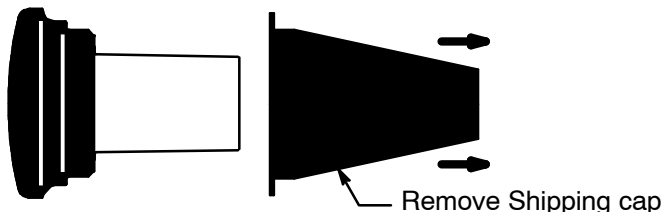

STEP 2

Lubricate the now exposed interface area with the lubricant supplied. DO NOT SUBSTITUTE.

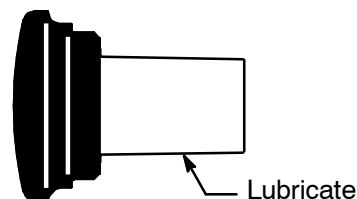

STEP 3

Insert the nylon venting rod into the receptacle area of the product desired to be dead-ended to exhaust the air during assembly. Insert the dead-end plug into the receptacle area as far as possible. Remove the nylon venting rod to complete the installation.

