

Installation Instructions

150TB-5

Deadbreak Bailing Assembly

CONTENTS: *Stainless Steel Collar, Stainless Steel Strap, Stainless Steel Bail Connectors, Instruction Sheets.*

DANGER

All apparatus must be de-energized during installation or removal of part(s). For loadbreak products follow operating instructions. All deadbreak connectors must be de-energized before operating. All 200A deadbreak connectors must be mechanically secured with bails when connected.

All apparatus must be installed and operated in accordance with individual user, local, and national work rules. These instructions do not attempt to provide for every possible contingency.

Do not touch or move energized products.

Excess distortion of the assembled product may result in its failure.

Inspect parts for damage, rating and compatibility with mating parts.

This product should be installed only by competent personnel trained in good safety practices involving high voltage electrical equipment. These instructions are not intended as a substitute for adequate training or experience in such safety practices.

Failure to follow these instructions will result in damage to the product and serious or fatal injury.

If this product is supplied with a protective shipping cover(s), remove this shipping cover(s) and replace with the appropriate HV insulated cap(s) or connector(s) before submerging or energizing the circuit.


FOR MORE INFORMATION ON PARTS, INSTALLATION RATINGS AND COMPATIBILITY, CALL THE NEAREST ELASTIMOLD OFFICE.

IMPORTANT

1. Check contents of package to ensure they are complete and undamaged.
 2. Check all components to ensure proper fit with cable and/or mating products.
 3. Read entire installation instructions before starting.
 4. Have all required tools at hand and maintain cleanliness throughout the procedure.
-


STEP 1

Prepare the cables according to the installation instructions packed with the ELASTIMOLD connectors. Slip a collar, large end first, onto the straight plug connector. Now, install the cables into the connectors and mate the connectors to the tee connector.

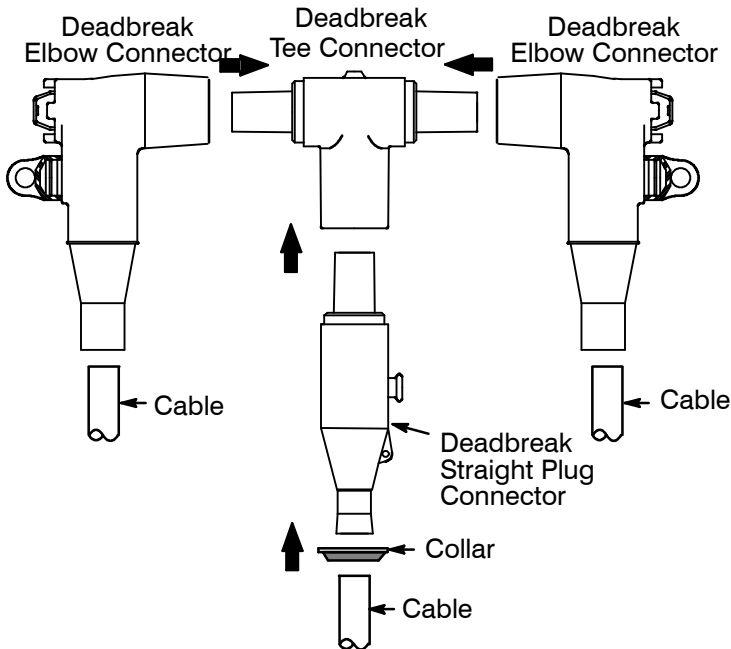

STEP 2

- Unfold the the strap being careful not to kink it. Slip one end of the strap under the collar so that 5/8" (15,9 mm) to 3/4" (19,1 mm) extends through the collar. Now, using pliers, bend and form the strap around the collar as illustrated.
- Bend the strap over the tee connector and slip the free end under the opposite side of the collar. Note that the strap will have to be placed to one side of the rubber projection on the tee connector. Cut the strap 5/8" (15,9 mm) to 3/4" (19,1 mm) past the collar. To assure a tight assembly, pull the strap towards the tee connector and bend the strap around the collar as previously instructed in Step A.

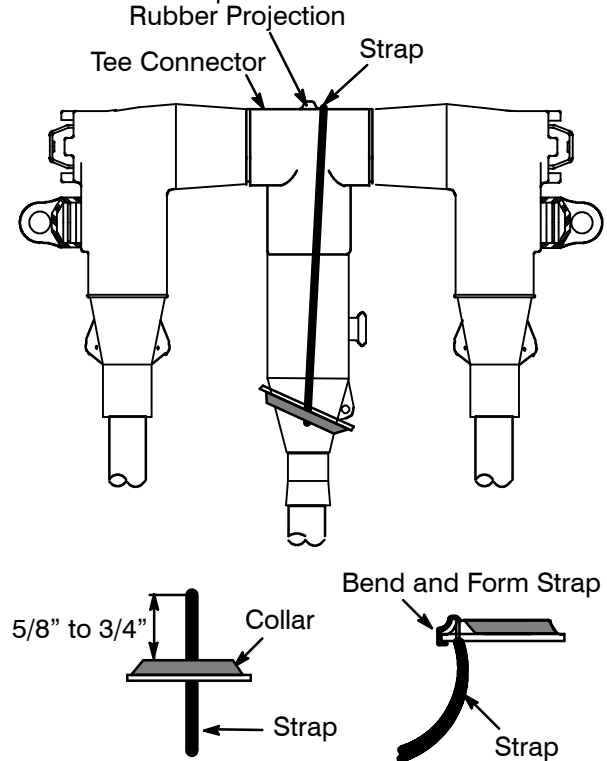

STEP 3

Position the hold-down bails which are supplied with the elbow connector kits over the elbows and then connect them by using the bail connectors. Tighten the eyebolts on each bail to secure the assembly.

