

VERTICAL 4 POST TIE OFF BRACKET




Part Number(s): V4PATOB, V4PATOBWH

© Panduit Corp. 2024

INSTALLATION INSTRUCTIONS

V00029YB_01

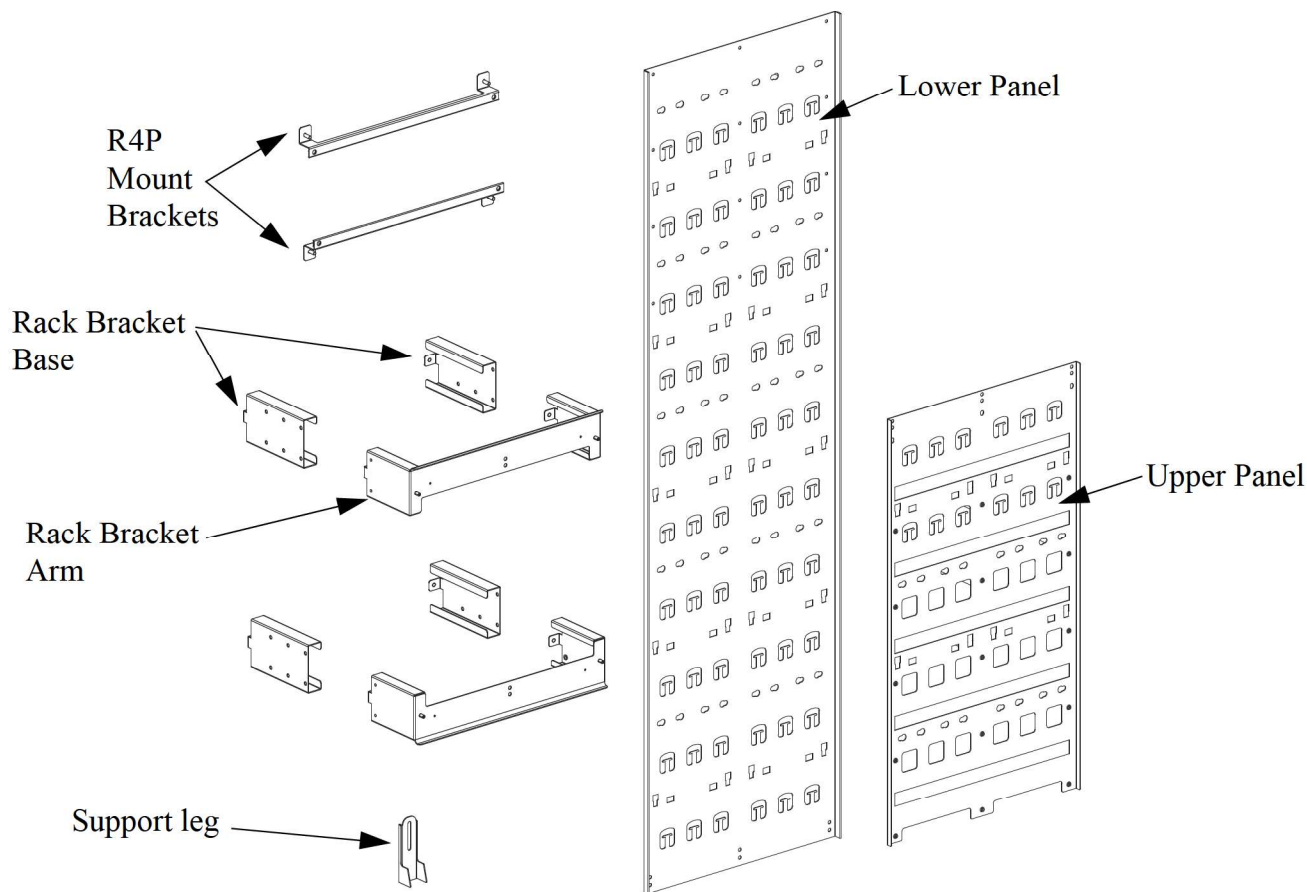

Required hardware - included

(11) M6-12mm CARRIAGE BOLT



(6) M5-10mm CARRIAGE BOLT




(15) M6 FLANGE NUT



Required tools - not included

**RATCHET W/
M8 SOCKET
& M10 SOCKET**

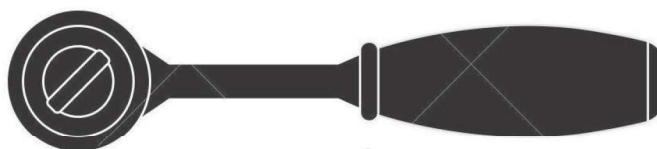



For Technical Support: www.panduit.com


TIE OFF BRACKET HEIGHT ADJUSTMENT

Tie Off Brackets can be adjusted to fit 42RU, 45RU & 52RU racks. See below for hole spacing for your specific rack height.

42RU

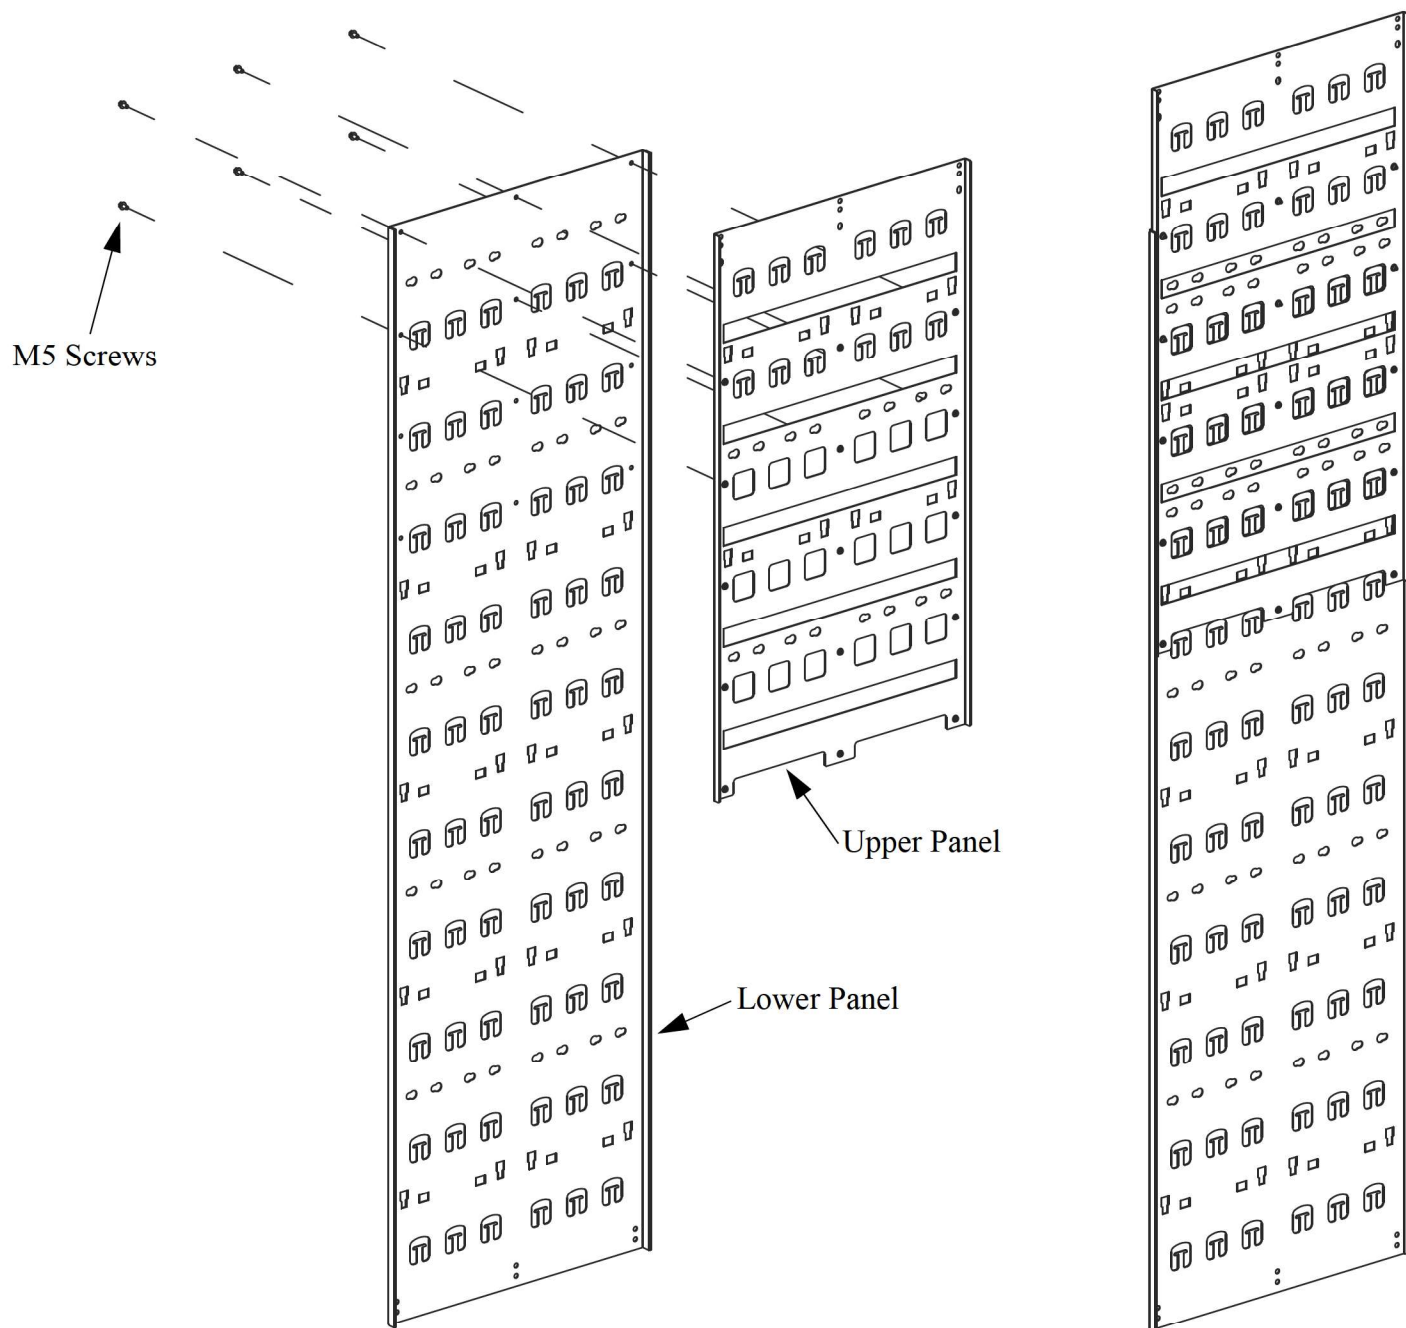


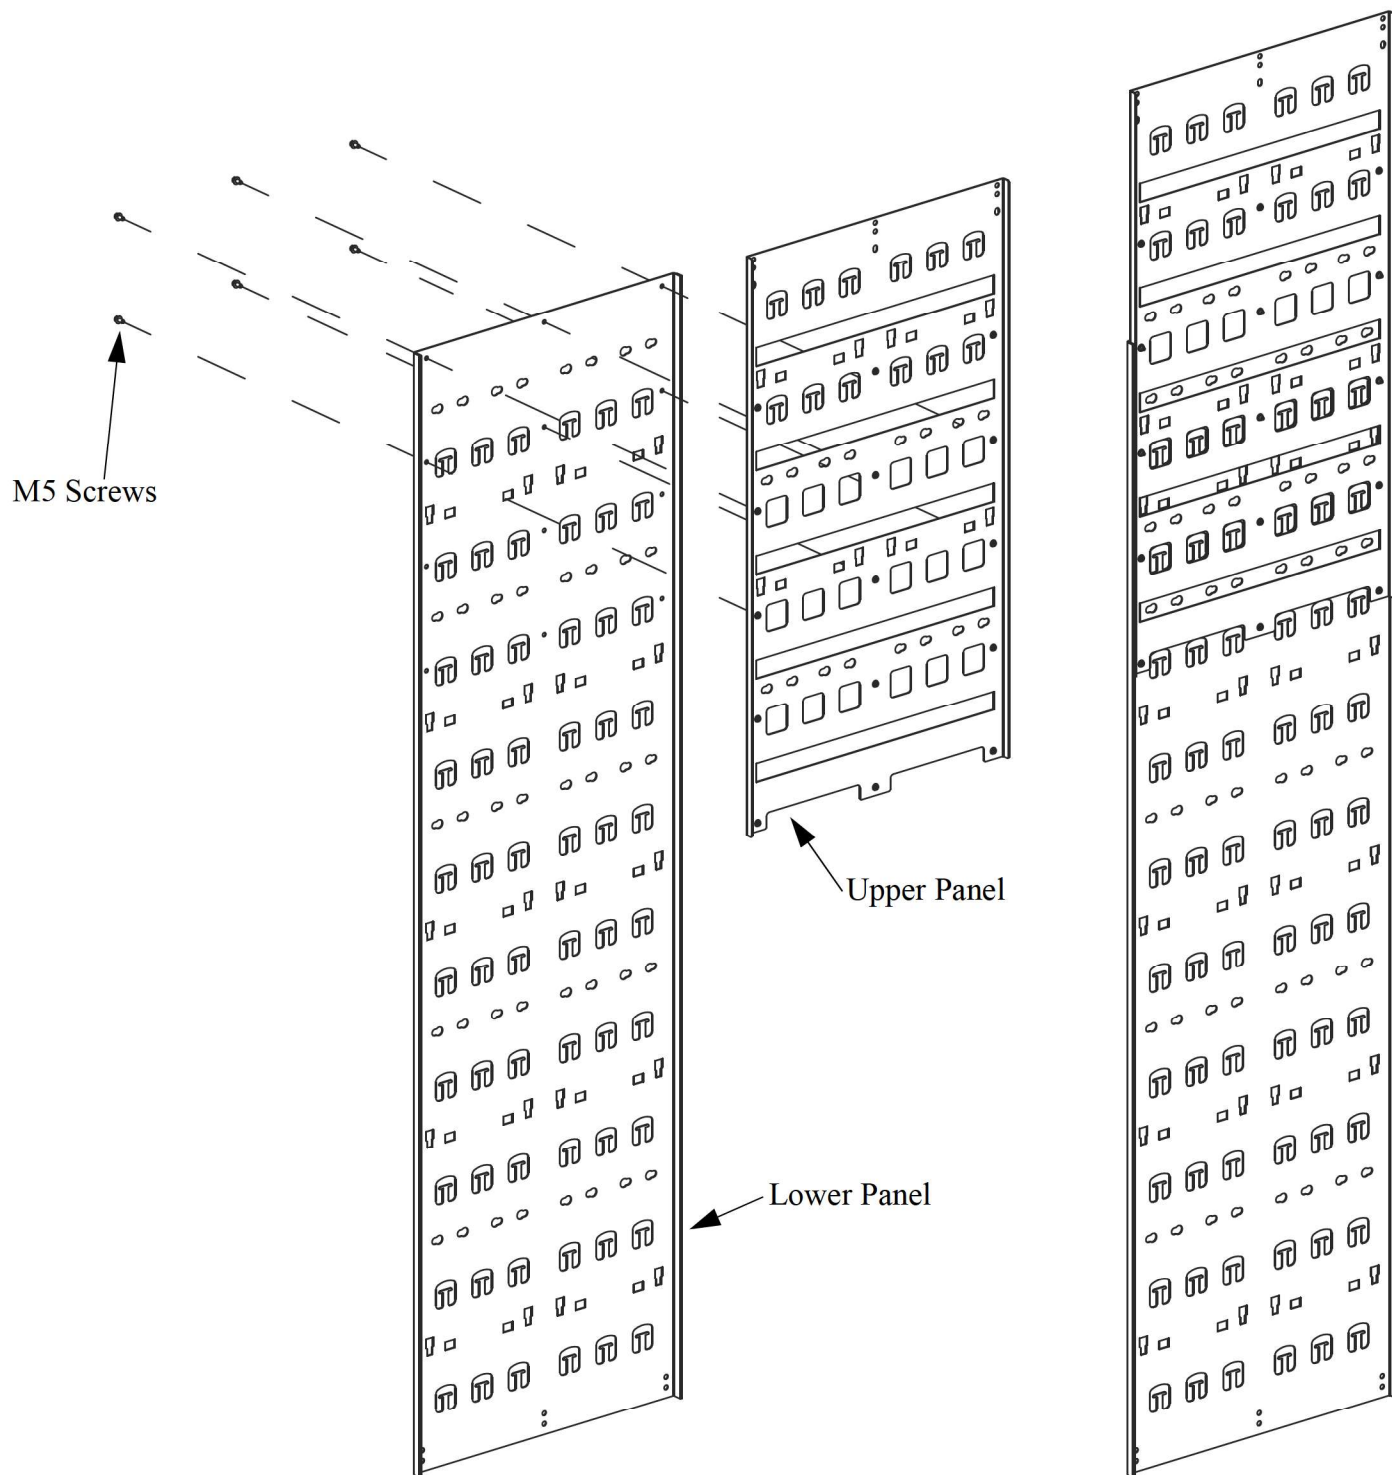
TIE OFF BRACKET HEIGHT ADJUSTMENT (cont.)**45RU**

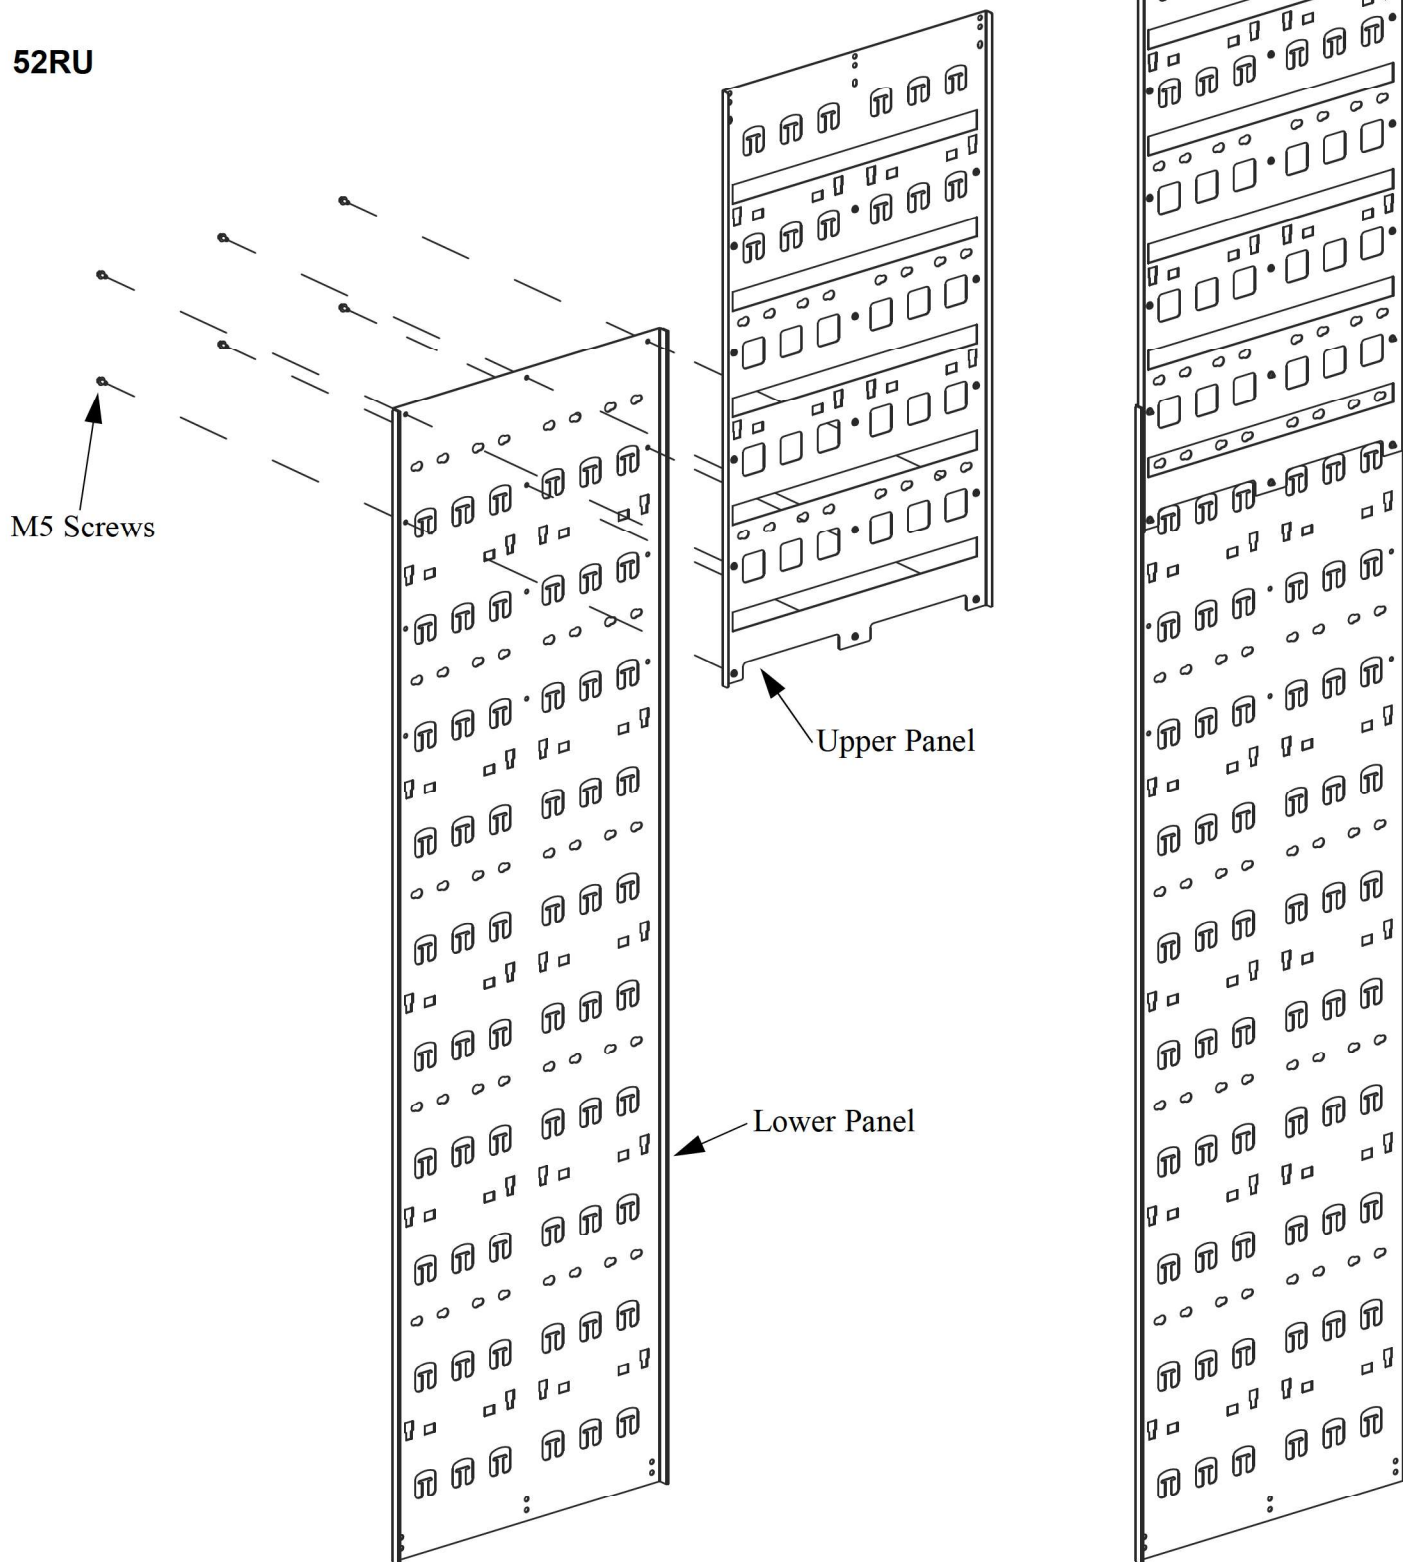TIE OFF BRACKET HEIGHT ADJUSTMENT (cont.)**52RU**

ADJUSTABLE RACK BRACKET ASSEMBLY


1. Align holes of the Rack Bracket Base with the corresponding hole on the Rack Bracket Arm per your Vertical Cable Manager width (shown below).
2. Secure brackets using (4) M6 hex screws.

Note: 6" Vertical Cable Manager Rack Bracket does not use the Rack Bracket Base

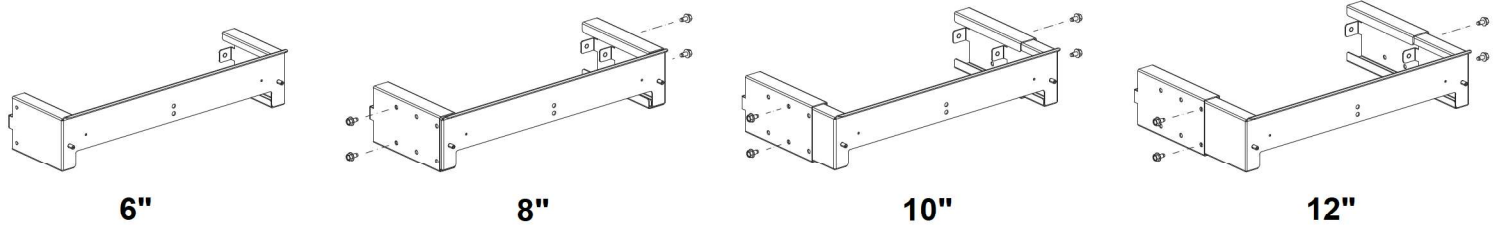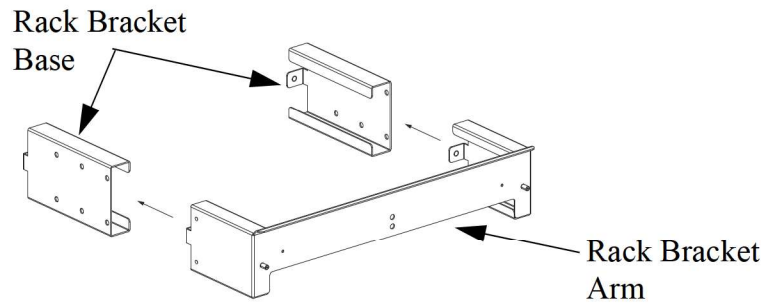


R4P TIE OFF BRACKET ASSEMBLY

1. Attach R4P Rack Mount Brackets at top & bottom of Rack using (4) M6 hex nuts.
2. Attach Assembled Rack Bracket to R4P Mount brackets using (4) M6 hex nuts.
3. Attach the Support Leg to the bottom Rack Bracket and Assembled panels using (2) M6 Hex nuts & Screws.
4. Secure assembled panels to the Rack Brackets using (6) M6 hex nuts.

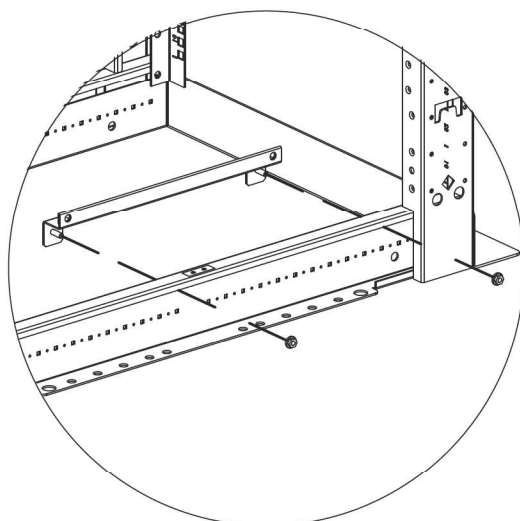


R4P Mount Bracket
Detail

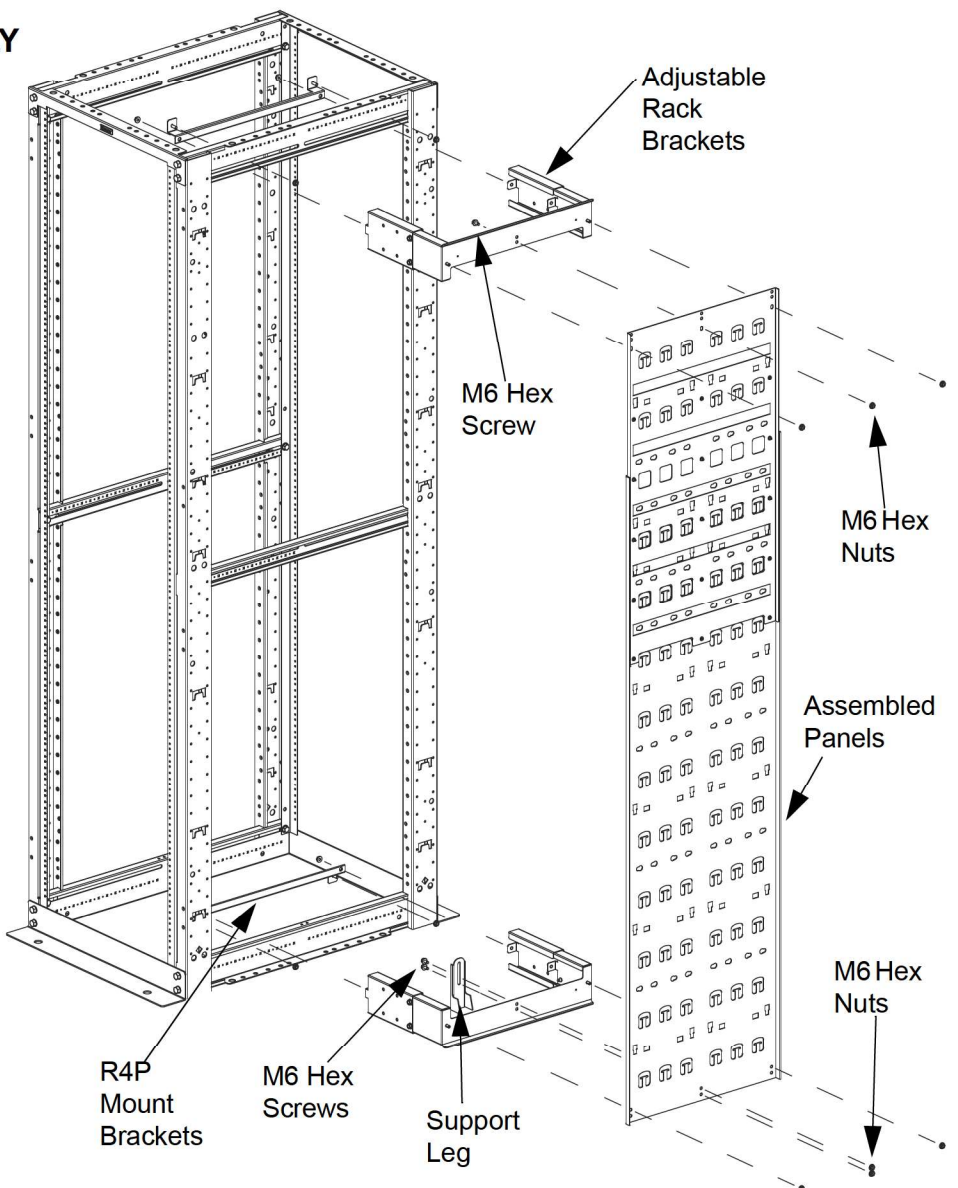

AR4P TIE OFF BRACKET ASSEMBLY

1. Attach Assembled Rack Bracket to rack using (4) M6 hex nuts.
2. Secure assembled panels to the Rack Brackets using (6) M6 hex nuts.
3. Attach the Support Leg to the bottom Rack Bracket and Assembled panels using (2) M6 Hex nuts & Screws.

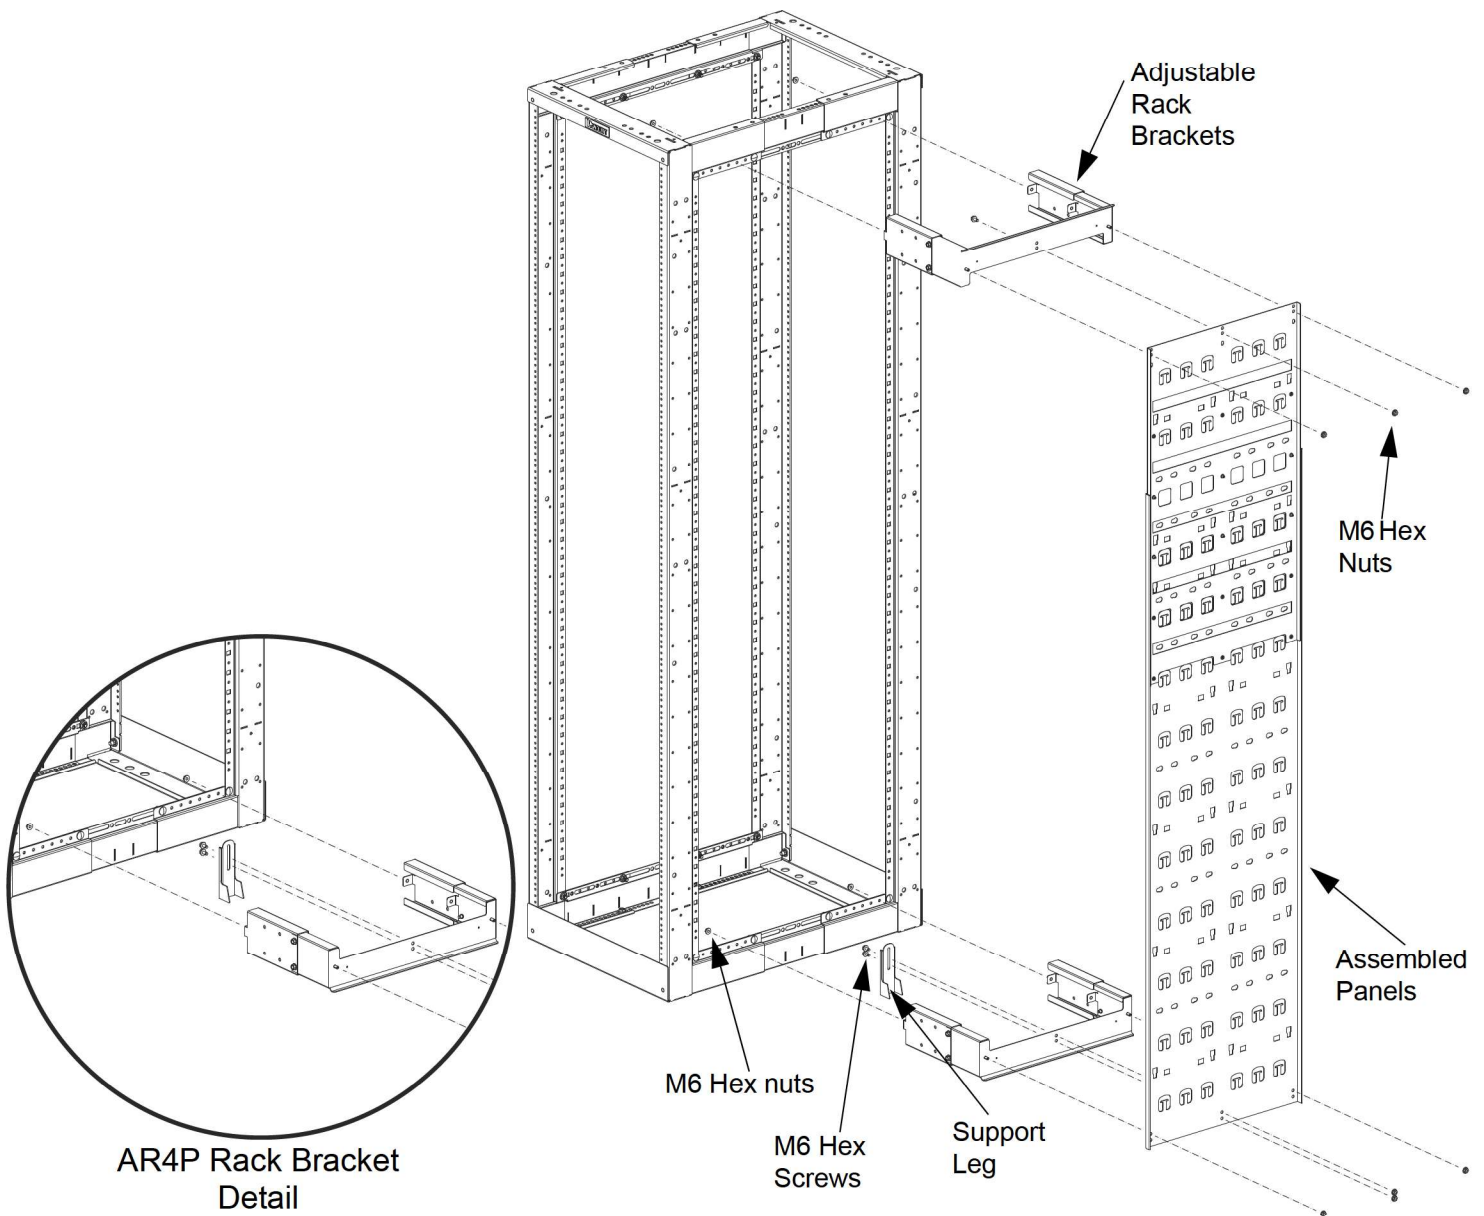

L-Retainer (S1LR, S2LR) and D-Ring (S1DR, S2DR) Installation

- Cable Management L-Retainers - Insert mounting tab of L-Retainer into any keyed mounting slot located on the cable management panel. Slide L-Retainer up or down in keyed slot and engage release tab in adjacent cutout. Pull release tab and reverse the process to remove L-Retainer.
- Cable Management D-Rings - Insert mounting tab(s) of L-Retainer into round keyhole slot(s) located on the cable management panel. Slide D-Ring in keyhole slot to engage D-Ring.

