



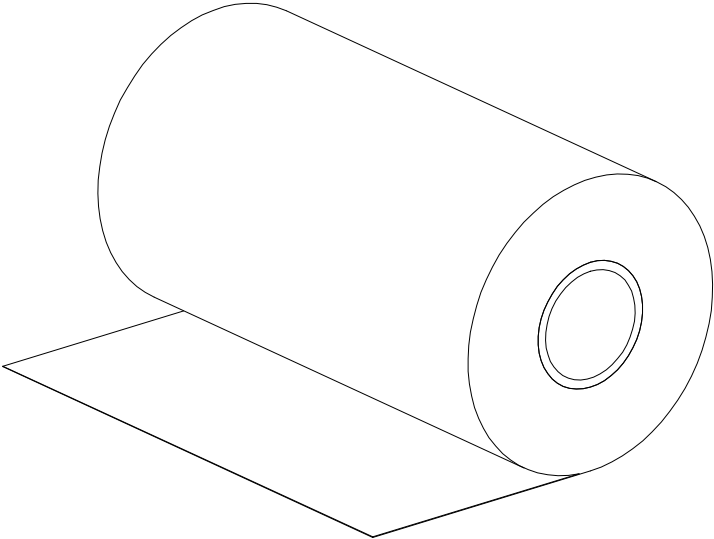

Certain finished goods require two rolls
see table on page 2.

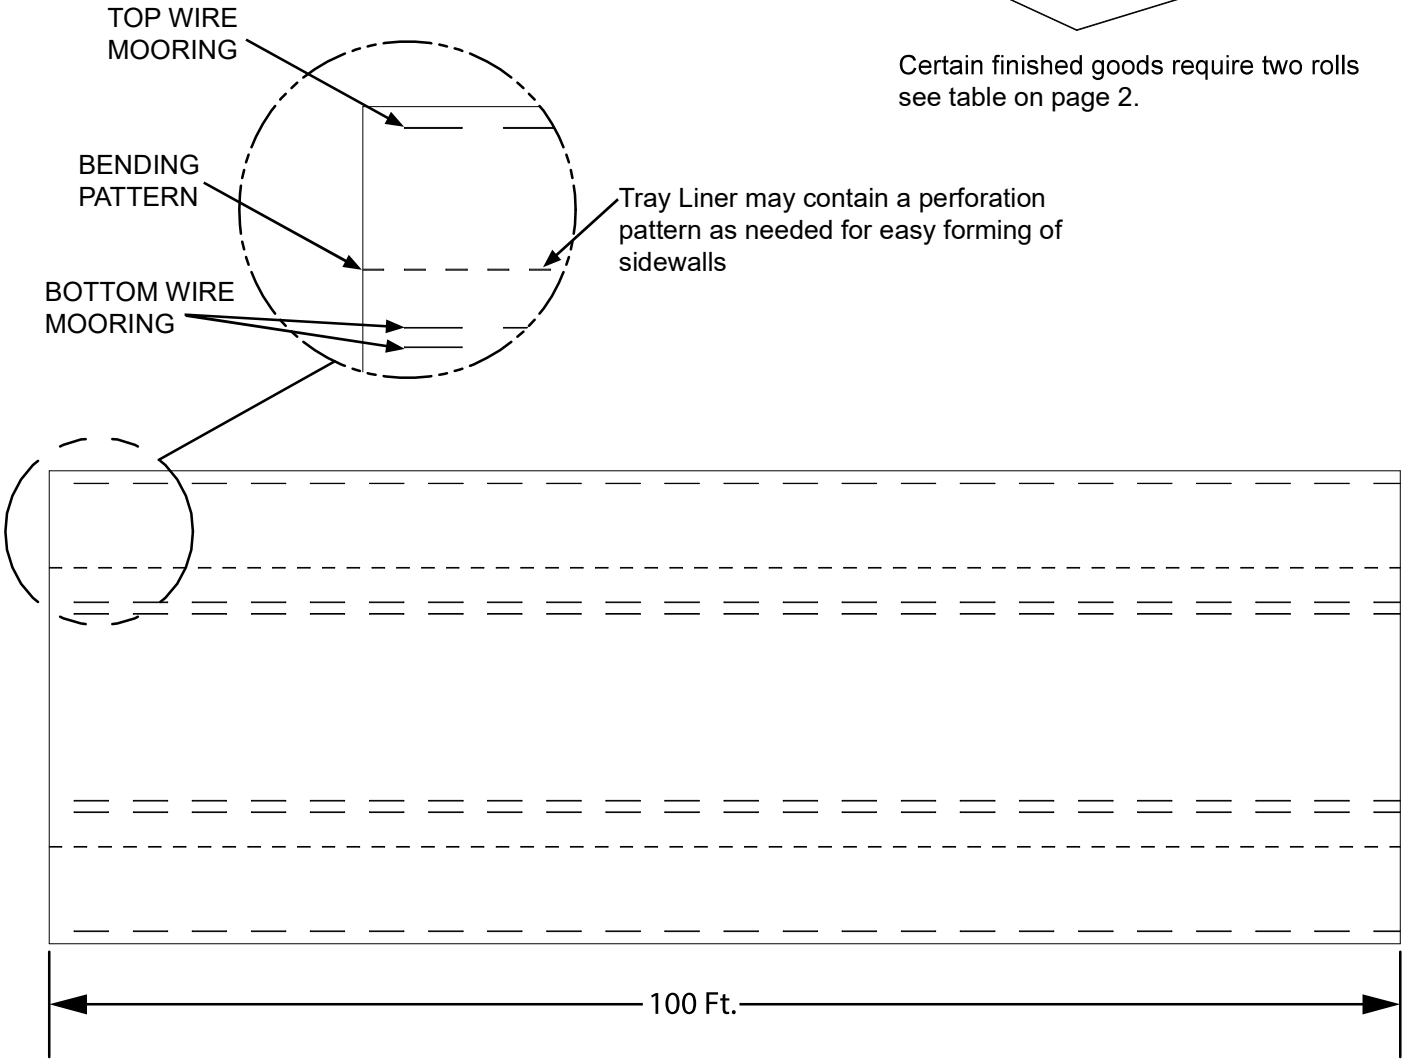


NOTE: All Plastic Tray Liners are provided in 100ft rolls.


P/N (**= BL OR WH)	WIRE BASKET		
	BOTTOM ONLY (in)	WITH SIDEWALL HEIGHT X WIDTH (in)	2PCS REQUIRED
PWBPTL4**	4		
PWBPTL6**	6		
PWBPTL8-2X4**	8	2X4	
PWBPTL2X6**		2X6	
PWBPTL12**	12		
PWBPTL2X8-4X4**		2X8 4X4	
PWBPTL4X6**		4X6	
PWBPTL2X124X8**		2X12 4X8	
PWBPTL18-6X6**	18	6X6	
PWBPTL4X12**		4X12	4X30 [^] 1.5" OVERLAP
PWBPTL6X8**		6X8	
PWBPTL2X18**		2X18	
PWBPTL24-6X12**	24	6X12	6X30 [^] 5.5" OVERLAP 2X36 [^] 7.5" OVERLAP
PWBPTL4X36-2**			4X36 [^] 3.5" OVERLAP
PWBPTL4X18**		4X18	6X36 [^] 3.5" OVERLAP
PWBPTL2X24**		2X24	
PWBPTL30-6X18**	30	6X18	
PWBPTL4X24**		4X24	
PWBPTL2X30**		2X30	
PWBPTL36-6X24**	36	6X24	

[^]= DESIGNED WITH OVERLAP, REQUIRES TWO TRAY LINER PARTS.


INSTALL TRAY LINER ON WIRE BASKET

- Installer can overlap, cut or modify the tray liners easily with common tools, such as scissors and utility knife, to accommodate specific application needs or secure the tray liners to the pathways.

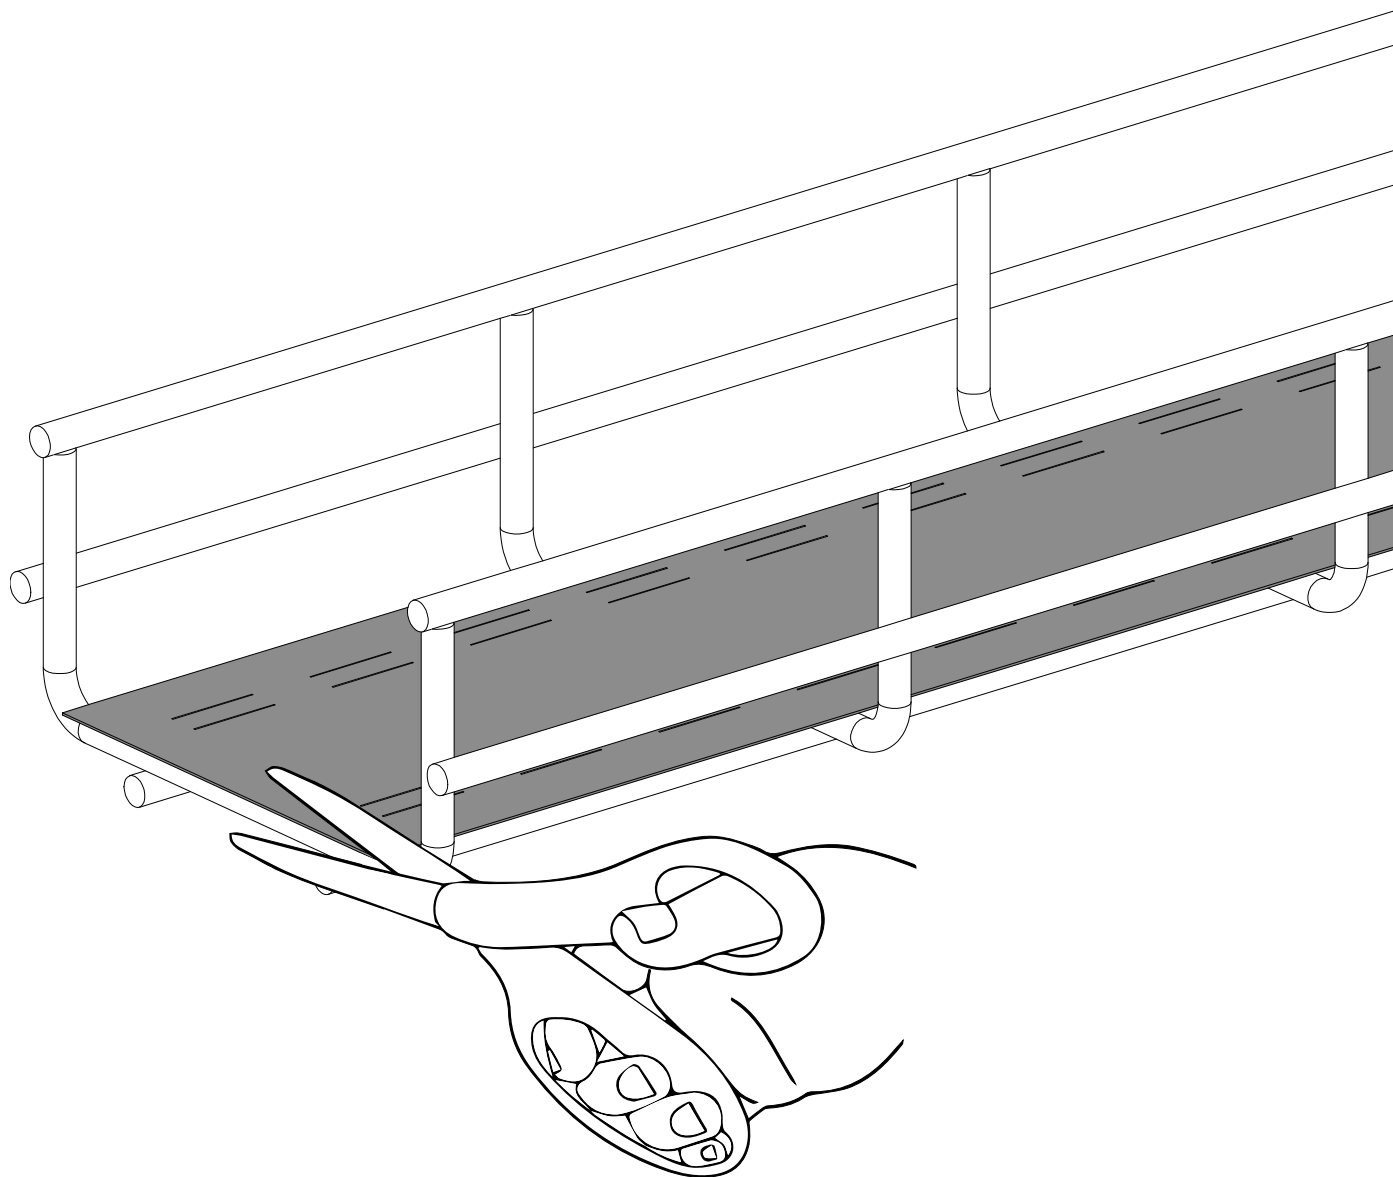


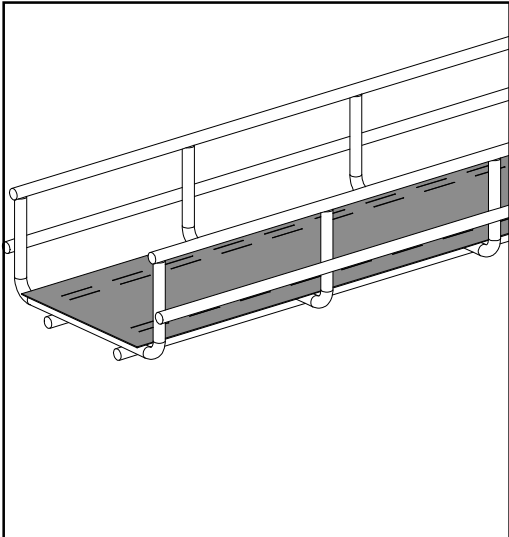

Bottom only Tray Liner
Tray Liner without sidewalls will be slightly narrower than actual pathway widths.

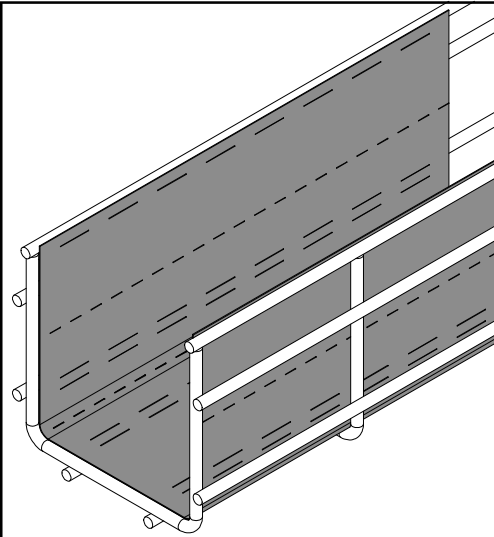


Tray Liner with 2", 4" & 6" Sidewalls

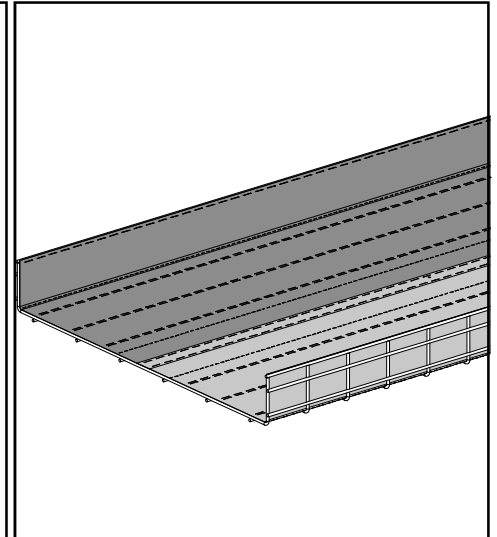


2pc Tray Liner with overlap


NOTE: Cable Tie heads should be installed underneath the tray liner.

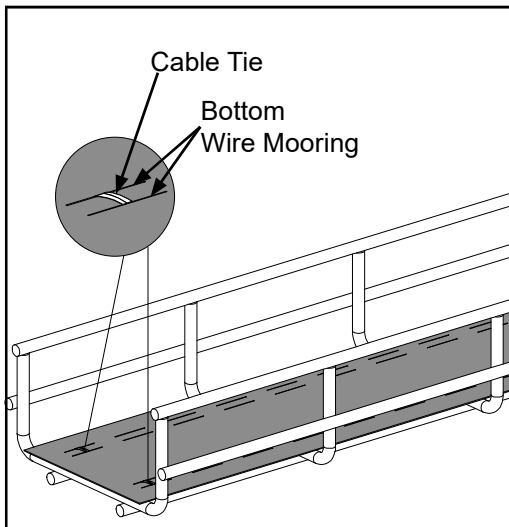

Best Practice: Secure down Tray Liner using Bottom Wire Mooring at the start and end of each basket using cable ties.

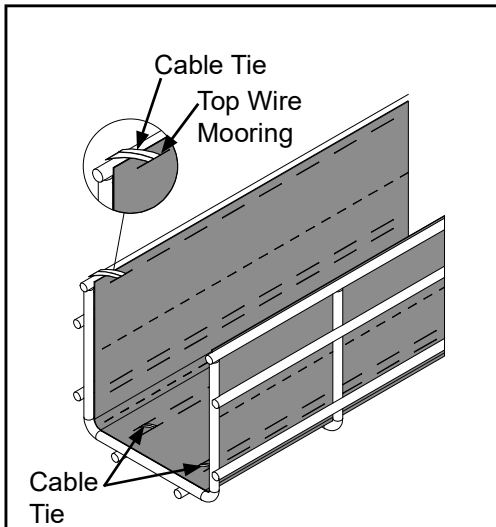

Best Practice: Secure down Tray Liner using both the Top and Bottom Wire Moorings at the start and end of each basket using cable ties.

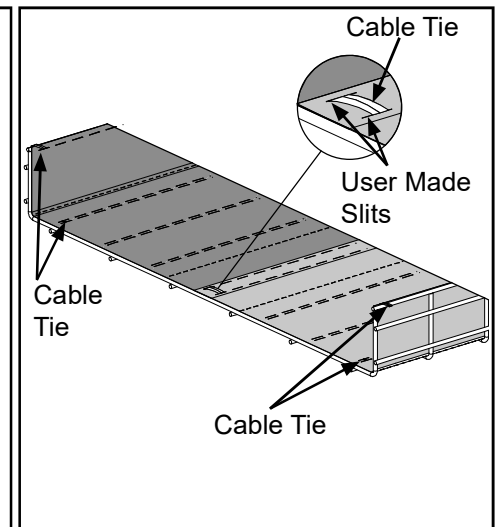

Best Practice: Secure down Tray Liner using both the Top and Bottom Wire Moorings at the start and end of each basket using cable ties. Ensure a cable tie is used to join the two overlapping Tray Liners by using existing or newly made slits.