

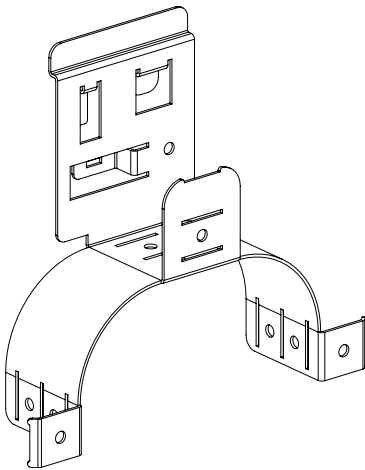
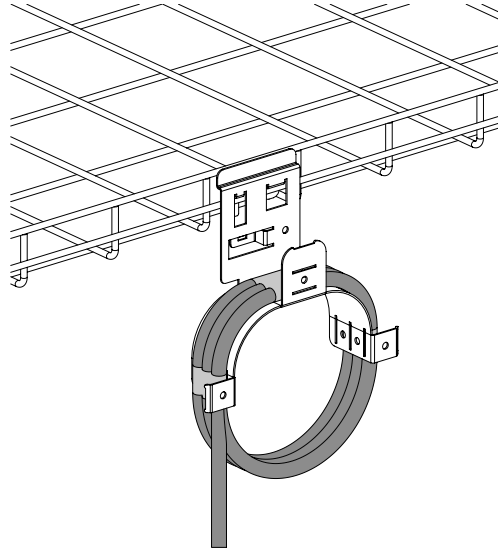



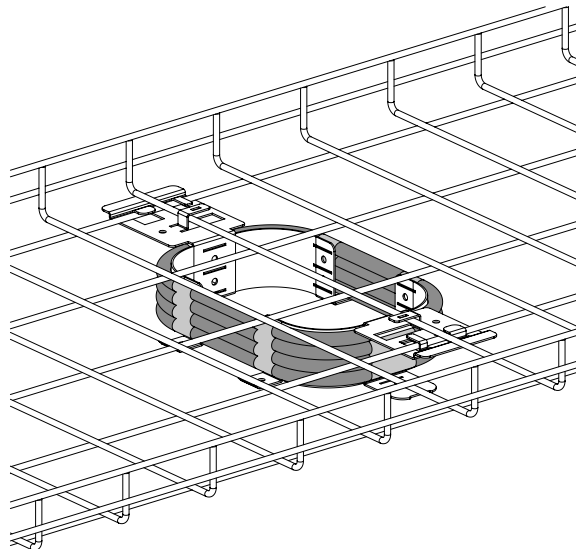


PWBCSM**

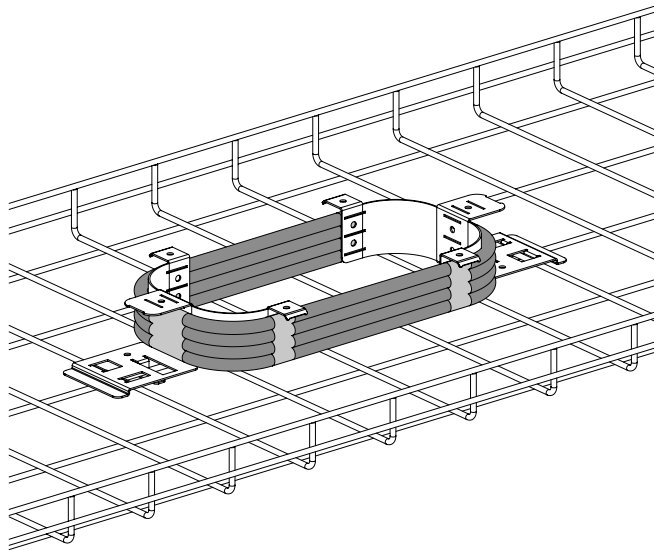



Installing Cable Slack Manager to Wire Basket Side Wall

- Insert top two vertical tabs over side wall wire as shown below
- Bend the longer tab around line-wire to secure to Wire Basket

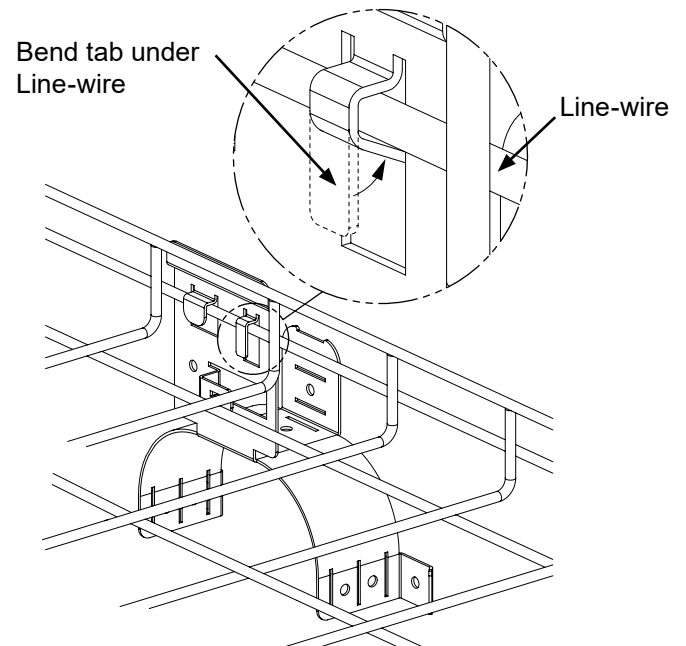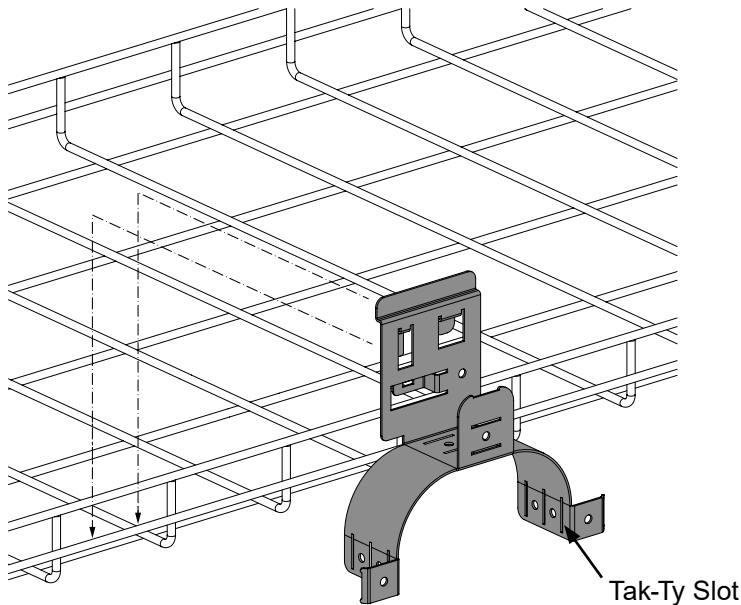



Installing Cable Slack Manager Under Wire Basket

- Insert both vertical tabs over line-wire and horizontal tab over cross-wire as shown below
- Bend longer vertical tab around line-wire and horizontal tab around cross-wire to secure Cable Slack Manager to Wire Basket

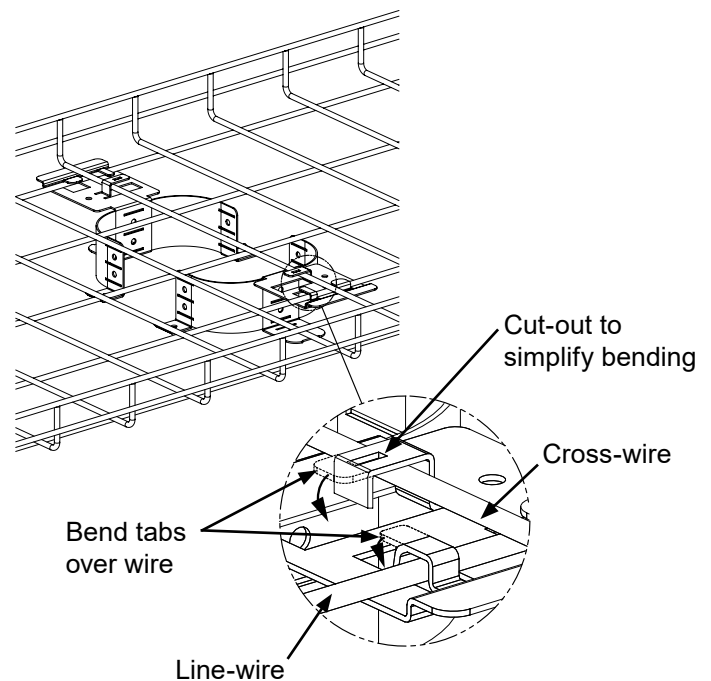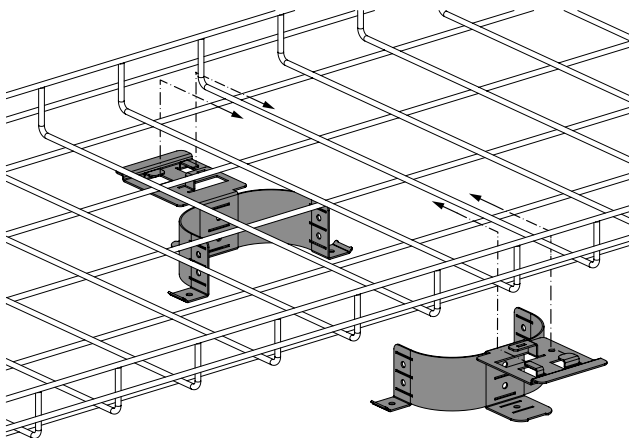

Installing Cable Slack Manager Inside Wire Basket

- Insert both vertical tabs around cross-wire and horizontal tab around line-wire as shown below
- Bend longer vertical tab around cross-wire and horizontal tab around line-wire to secure Cable Slack Manager to Wire Basket

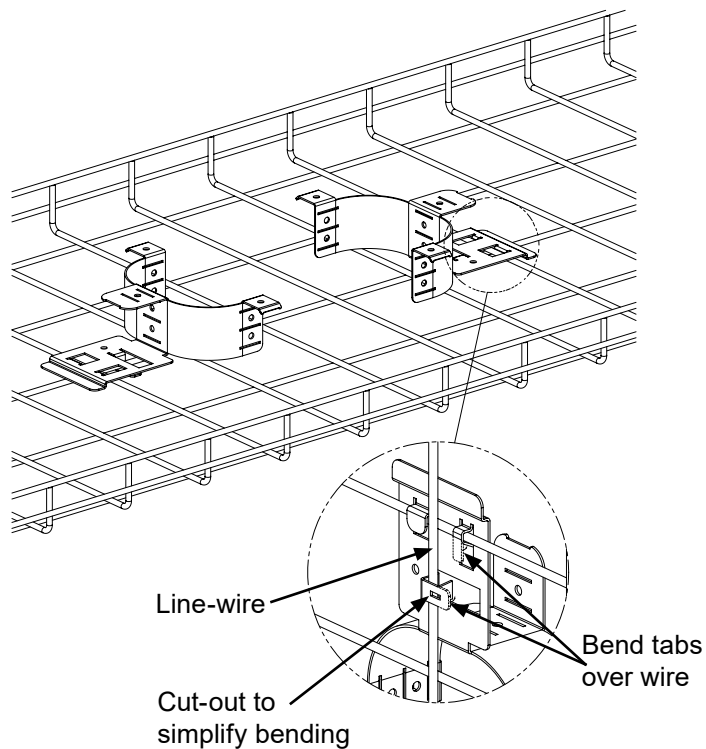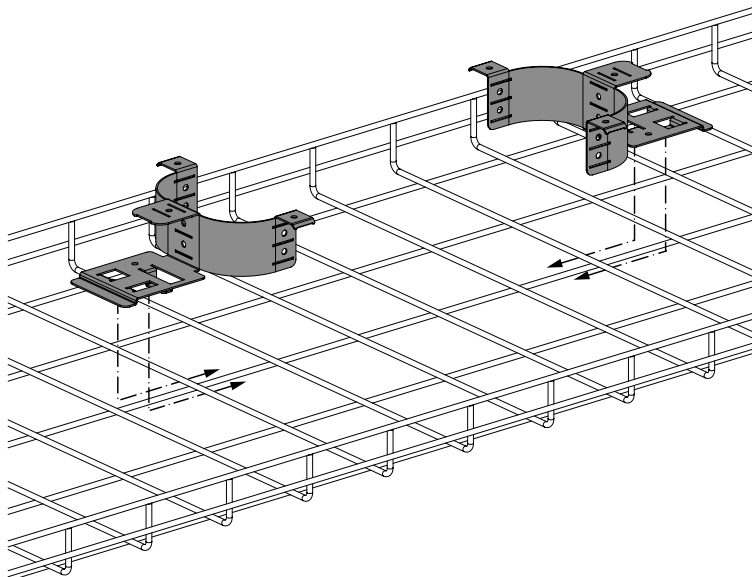

For Instructions in Local Languages
and Technical Support:

www.panduit.com/resources/install_maintain.asp

PANDUIT

www.panduit.com

E-mail:
techsupport@panduit.com

Phone:
866-405-6654