


Become familiar with the Master Key

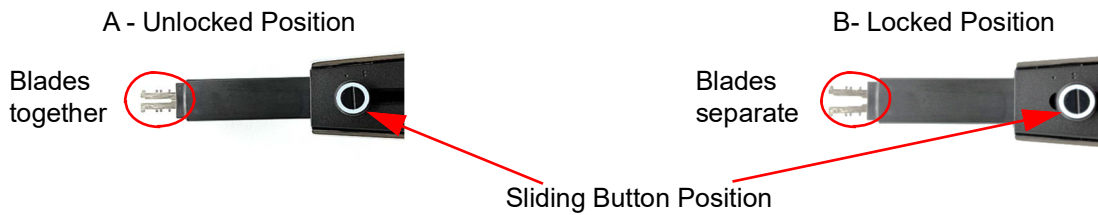

Installation


USB Type A

Ensure device is oriented correctly and insert into USB Port.




USB Type C

Device must be in the UNLOCKED position prior to inserting into the USB port. Press lock button to secure in place.

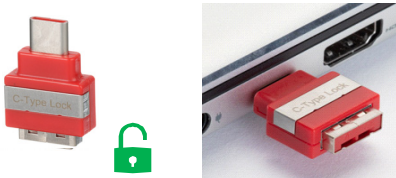

RJ45

Device must be in the UNLOCKED position prior to inserting into the RJ45 port. Press to lock.

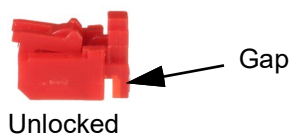


Removal

Key should be in UNLOCKED position (blades together).



Insert blades into the device.

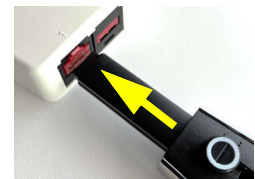

Once inserted, switch key to LOCKED position.



Pull device out of the port.

