




FLAT EXPANSION SPLICE

Part Numbers: PWBFE** -30


©Panduit Corp. 2026

INSTALLATION INSTRUCTIONS

FS170

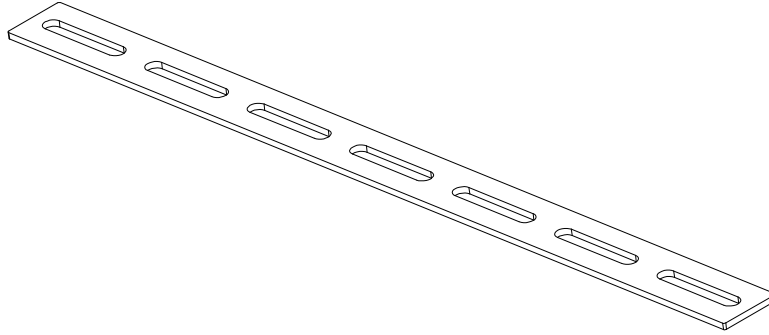

PWBFE** -30
Standard Pack Quantity: 30

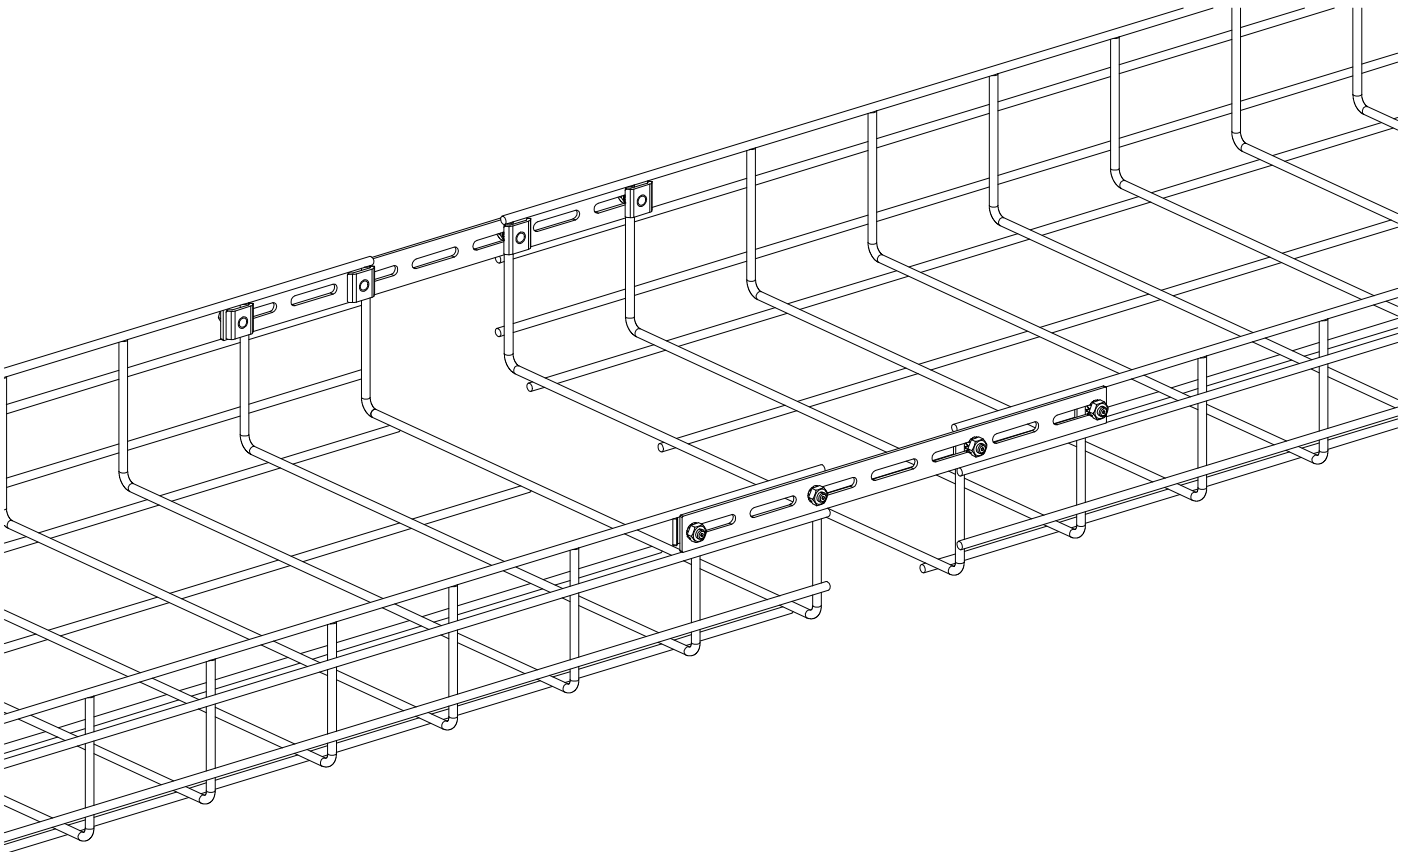


For Technical Support: www.panduit.com/resources/install_maintain.asp

PWBHK**-L (Hardware Kit Sold Separately)

PWBFES**-30

Wire Basket (Sold Separately)

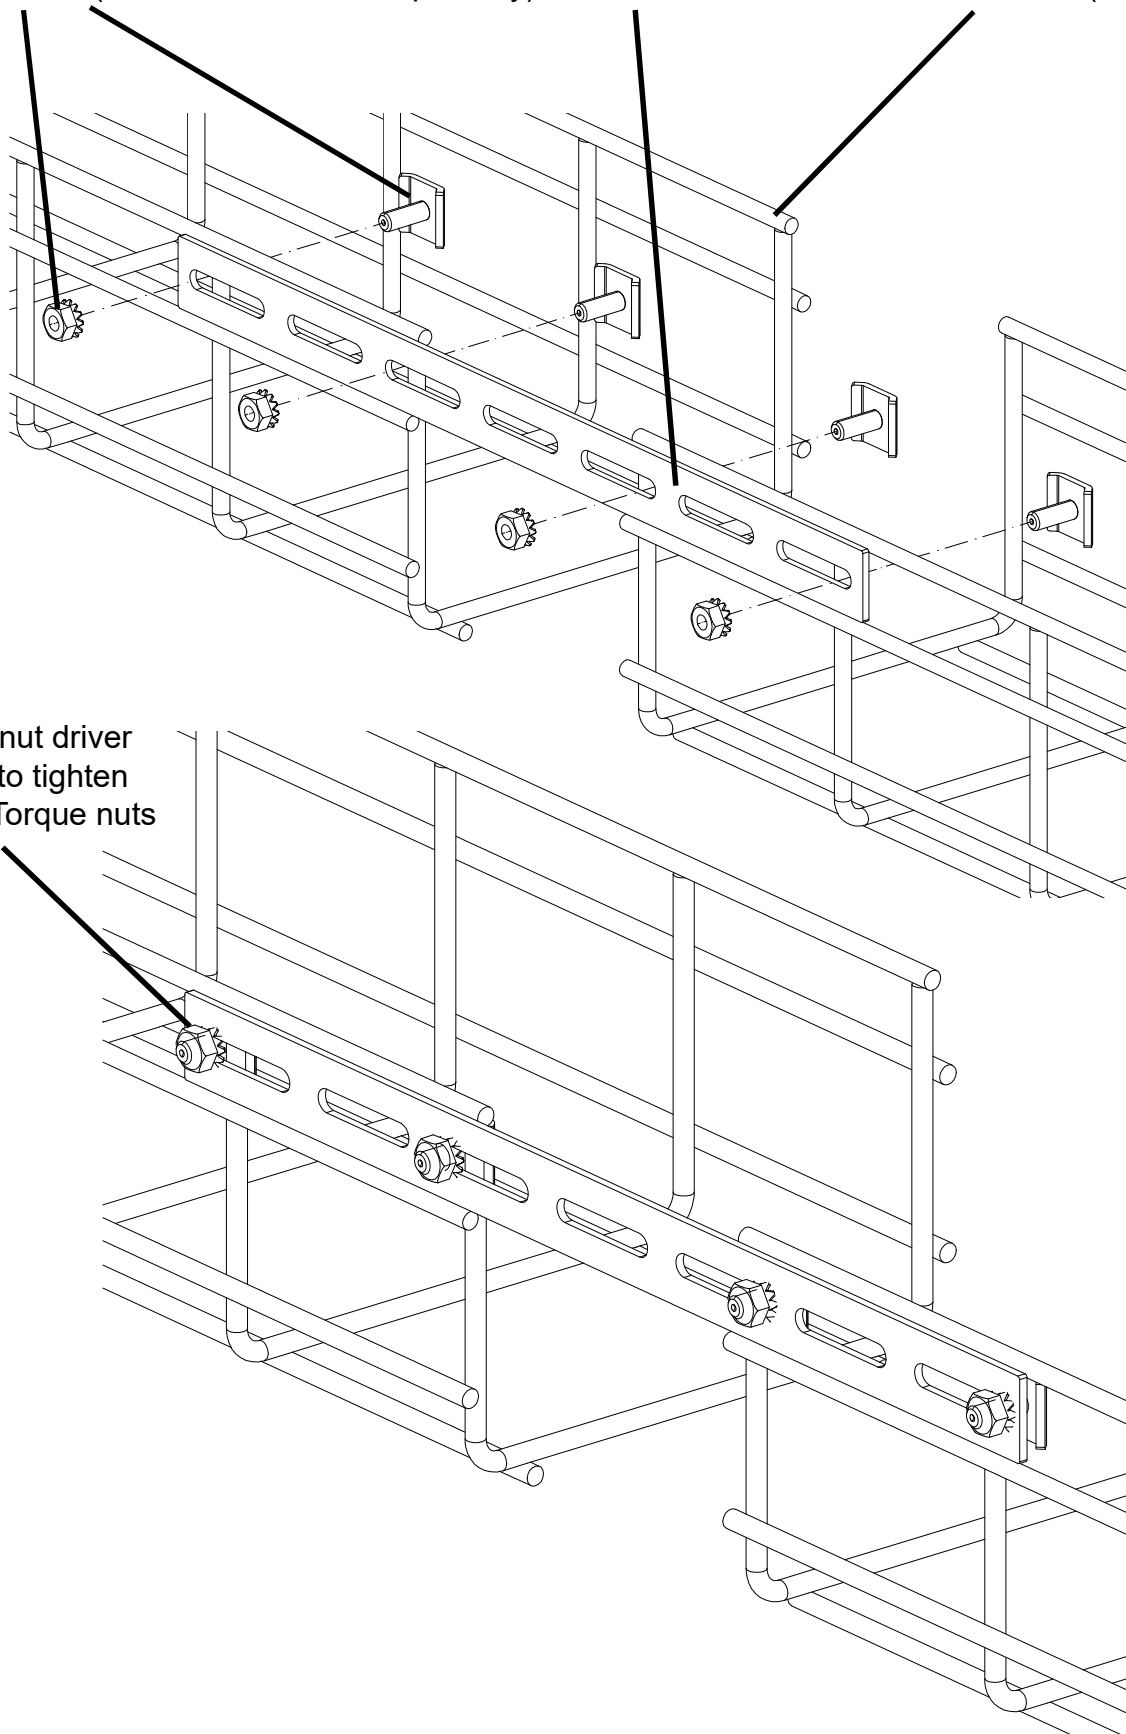

Use a 7/16" nut driver
(FR716DR) to tighten
Keps Nuts. Torque nuts
to 72 in-lbs.

PWBHK**-L hardware kit needed to secure expansion splice to basket.

Max spanned gap between wire baskets is equivalent to 1 grid opening.

Best practice guidelines is to bond pathways sections.

Specific applications or load conditions can vary and may require additional supports or placement adjustments to accommodate actual installation needs.

Recommended 2 flat expansion splices per basket width.

SWL (Safe Working Loads) lbs/Foot					
Part Number	4' Span	5' Span	6' Span	7' Span	8' Span
PWB2X4**	27	22	18	17	15
PWB2X6**	45	40	32	24	21
PWB2X8**	64	52	33	25	21
PWB2X12**	54	49	45	32	23
PWB2X18**	96	75	55	42	29
PWB2X24**	99	73	48	37	27
PWB4X4**	36	34	31	29	21
PWB4X6**	45	41	38	30	24
PWB4X8**	71	59	46	43	40
PWB4X12**	102	84	75	57	46
PWB4X18**	97	85	72	58	46
PWB4X24**	128	101	74	59	42
PWB6X6**	85	75	67	49	33
PWB6X8**	101	91	79	63	47
PWB6X12**	114	103	85	65	55
PWB6X18**	110	97	85	67	51
PWB6X24**	134	110	85	69	56