




PWBTCB1070BL OR PWBTCB1200BL

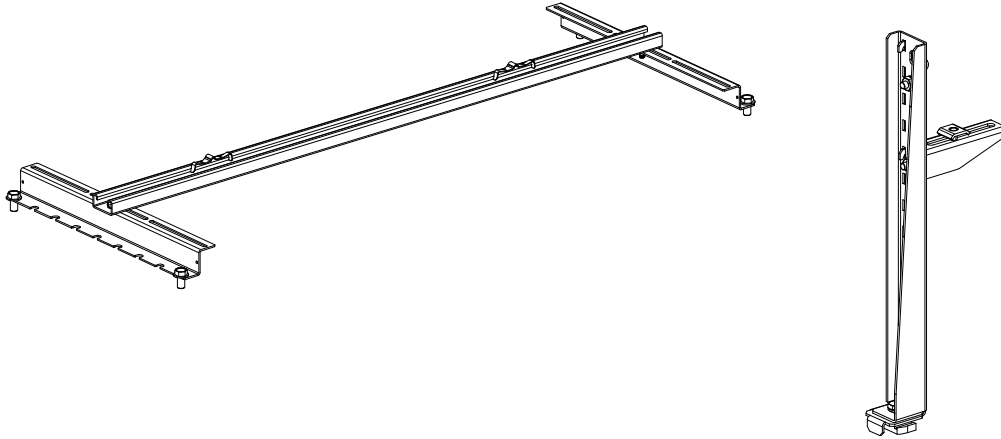

PWBTCBEKBL

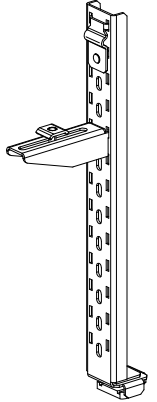


Wire Basket Installed on Elevation Bracket

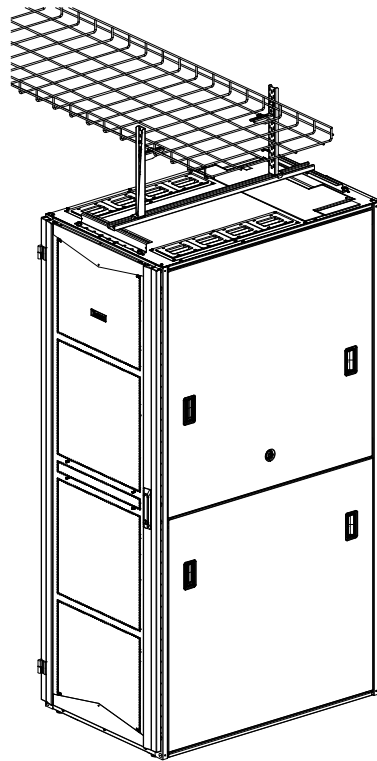


Note: Compatible with FlexFusion™
1070mm and 1200mm Cabinets only

PWBTCB1070BL OR PWBTCB1200BL

Hardware included:

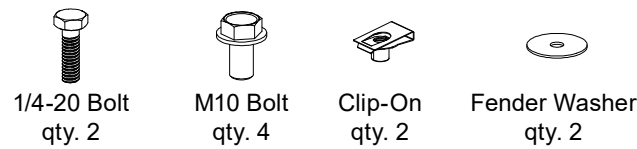


Components included:

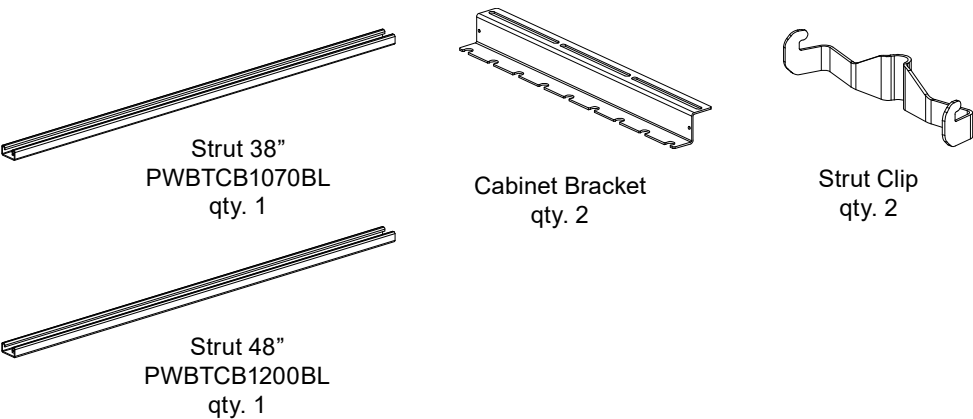


PWBTCBEKBL

Hardware included:

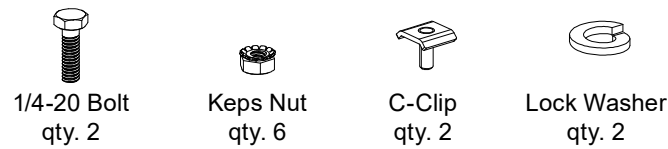


Components included:

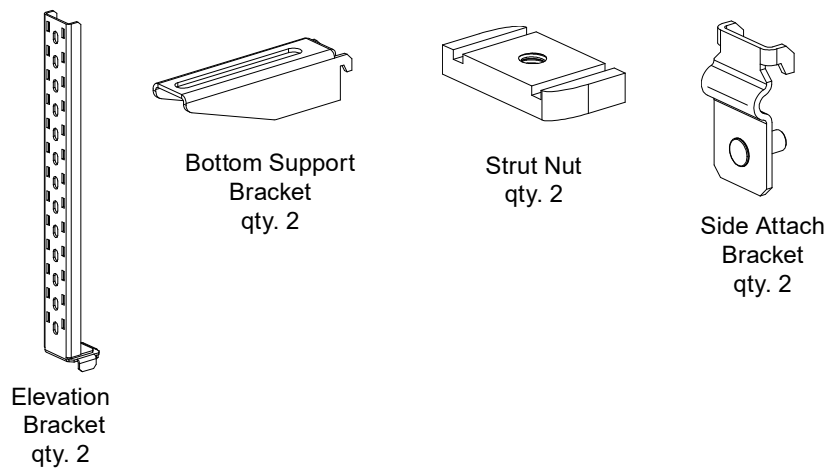


Installing Cabinet Bracket to top of cabinet

- Secure (2) Cabinet Brackets to top of cabinet using (4) M10 Bolts

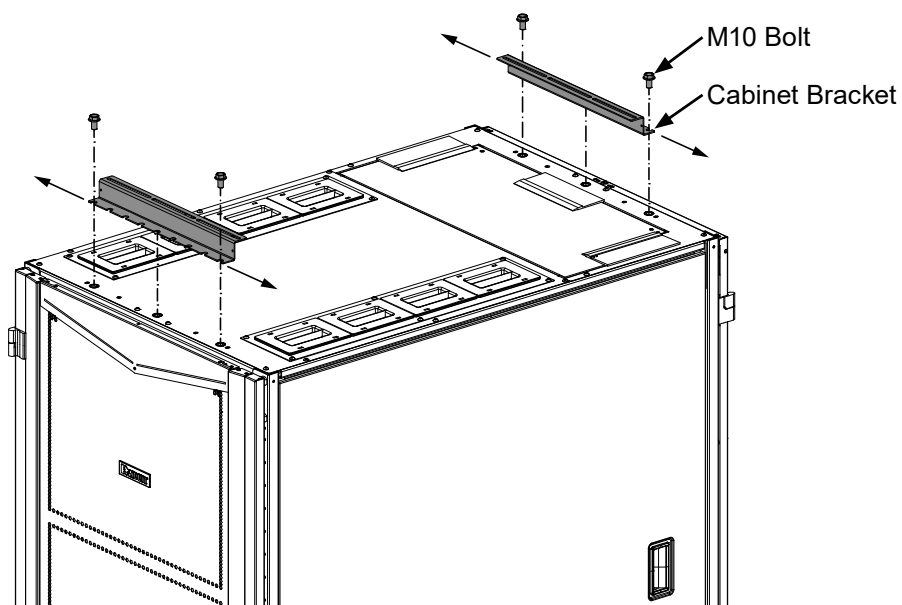


Installing Clip-On to Cabinet Bracket

- Attach Clip-on to center of Cabinet Bracket on both sides

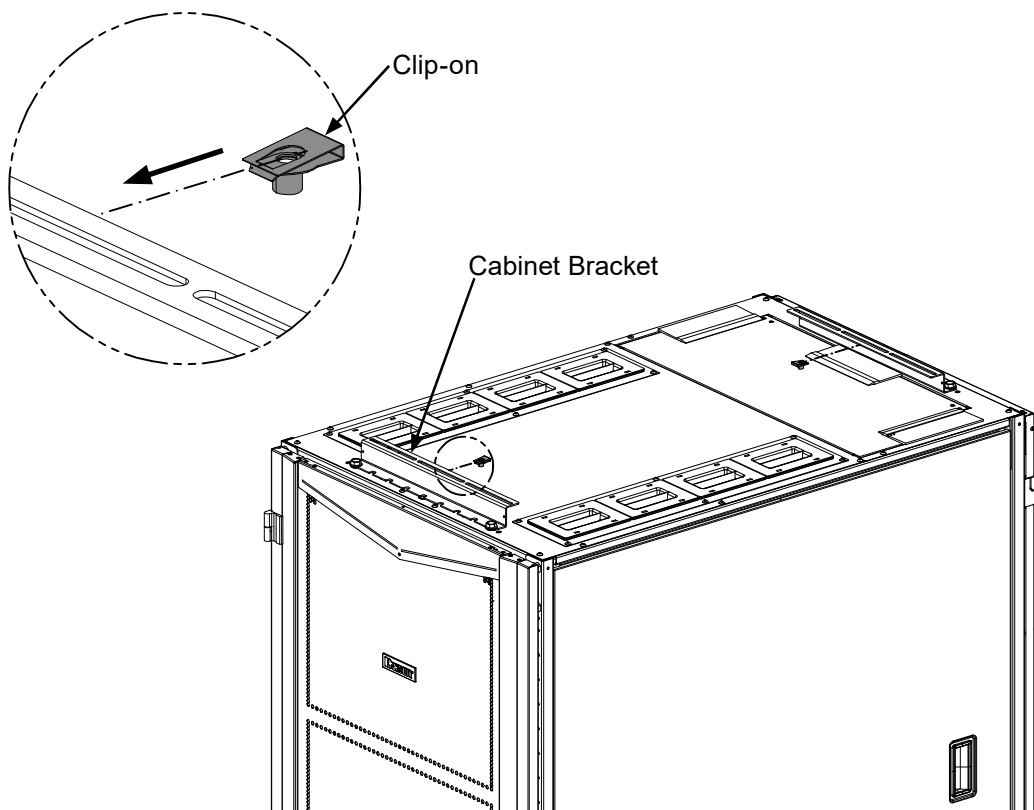


Installing Strut to top of Cabinet Bracket

- Secure Strut to Cabinet Bracket using (1) 1/4-20 Bolt, (1) Fender Washer
- Repeat on opposite side

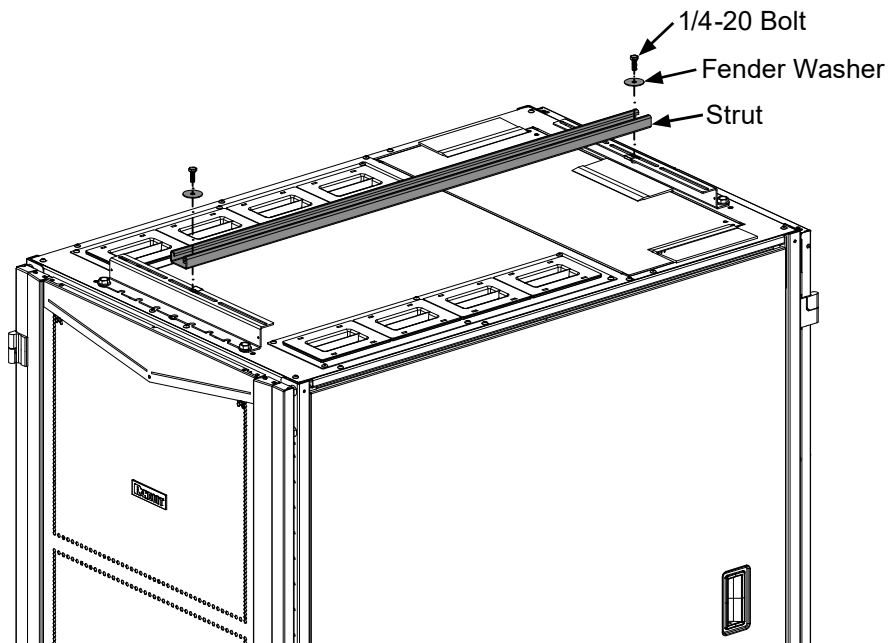


Installing Wire Basket to Strut

- Secure Wire Basket to Strut using Strut Clip

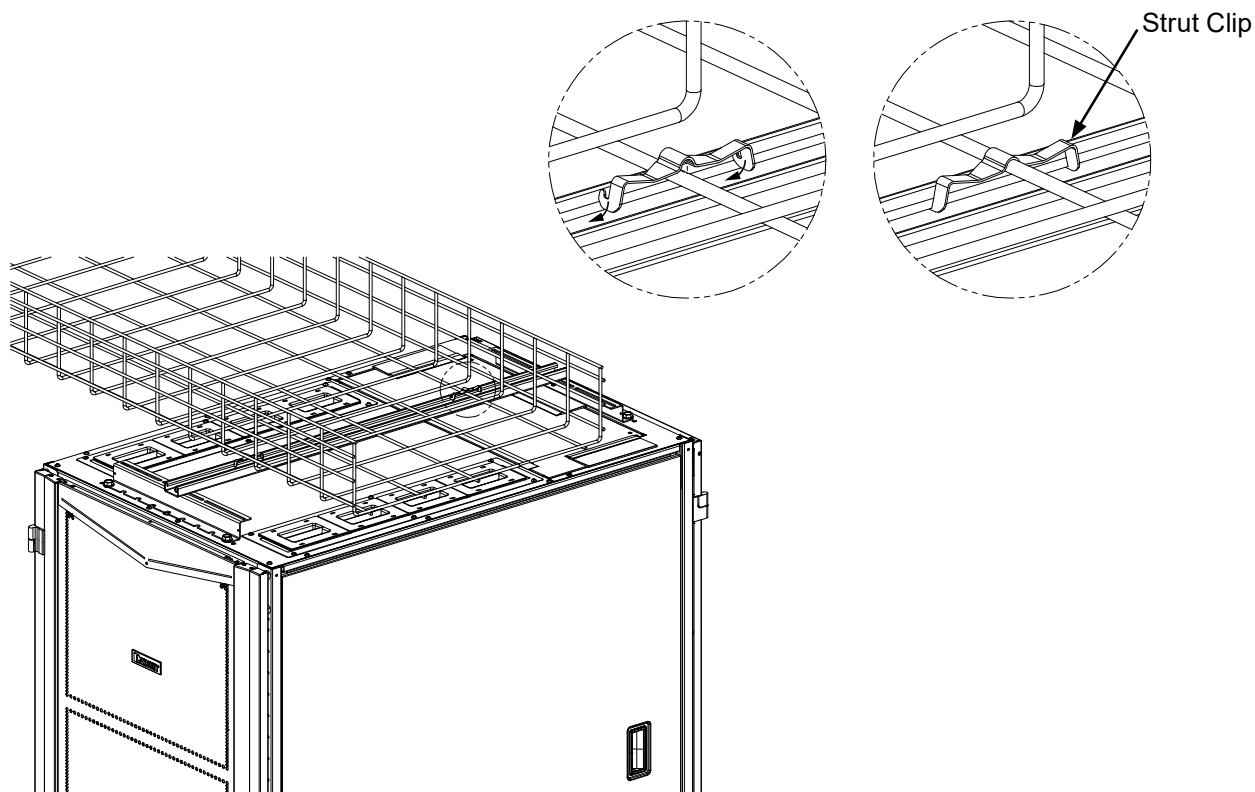


Installing Elevation Kit

- Insert (1) 1/4-20 Bolt and (1) Lock Washer in Elevation Bracket then start Strut Nut thread.
- Repeat on other Elevation Bracket.

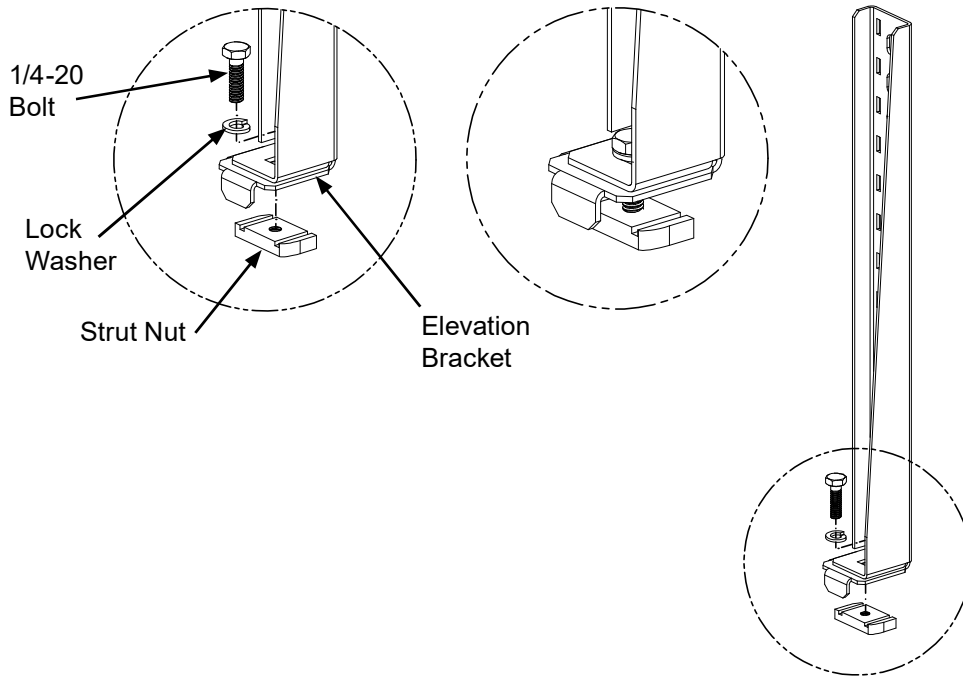


Installing Elevation Bracket

- Slide Elevation Bracket with preinstalled hardware to Strut as shown below. Tighten 1/4-20 bolt with 7/16 nut driver.
- Repeat with other Elevation Bracket

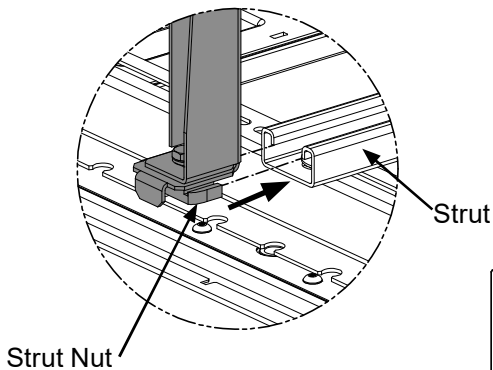


Note:

Ensure Strut Nut is under Strut bracket lip


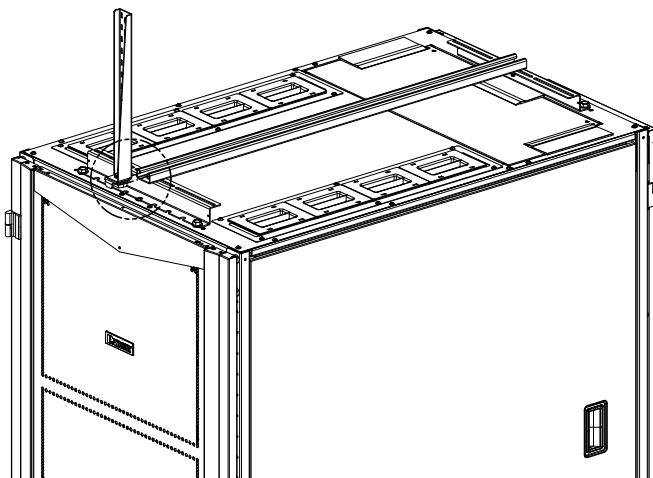


Installing Bottom Support Bracket to Elevation Bracket


- Secure Bottom Support Bracket to Elevation Bracket using (1) Keps Nut
- Repeat on opposite side

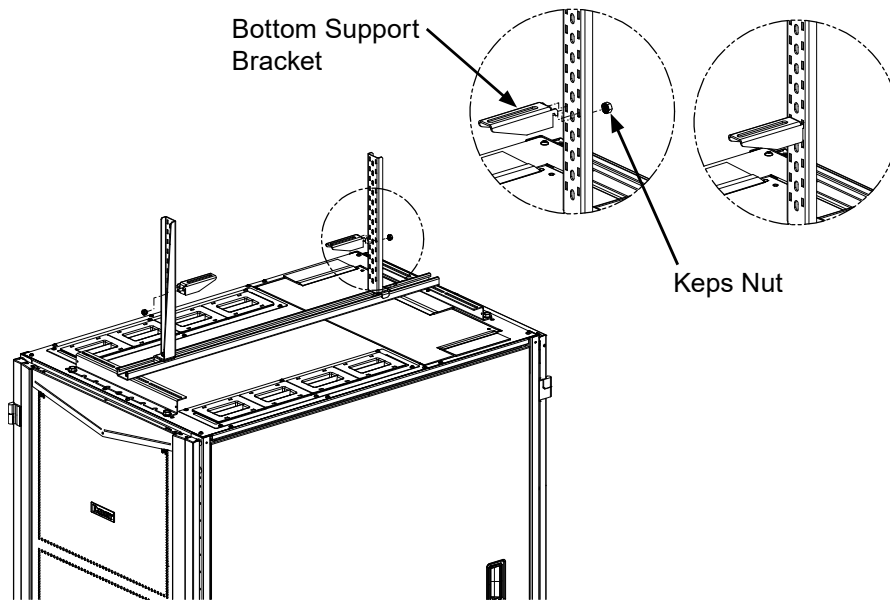

Support Bracket Locations

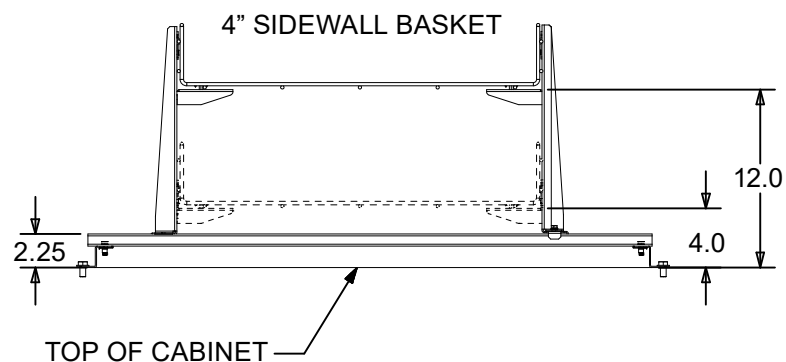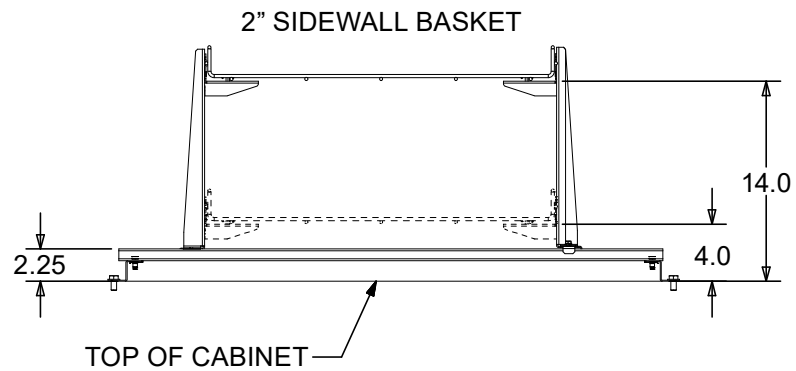


Support Bracket Locations

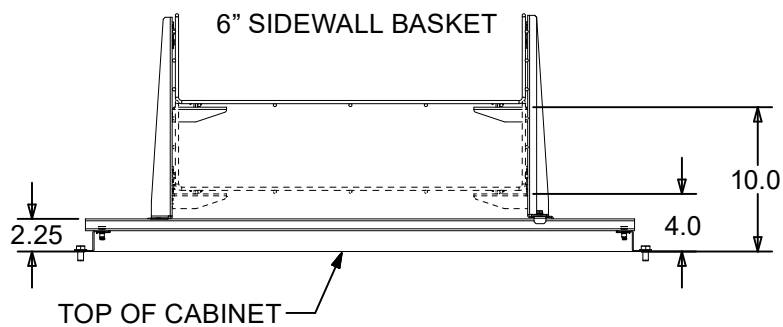


Installing Wire Basket to Bottom Support Bracket

- Secure Wire Basket to Bottom Support Bracket using (1) C-Clip and (1) Keps Nut
- Repeat on opposite side

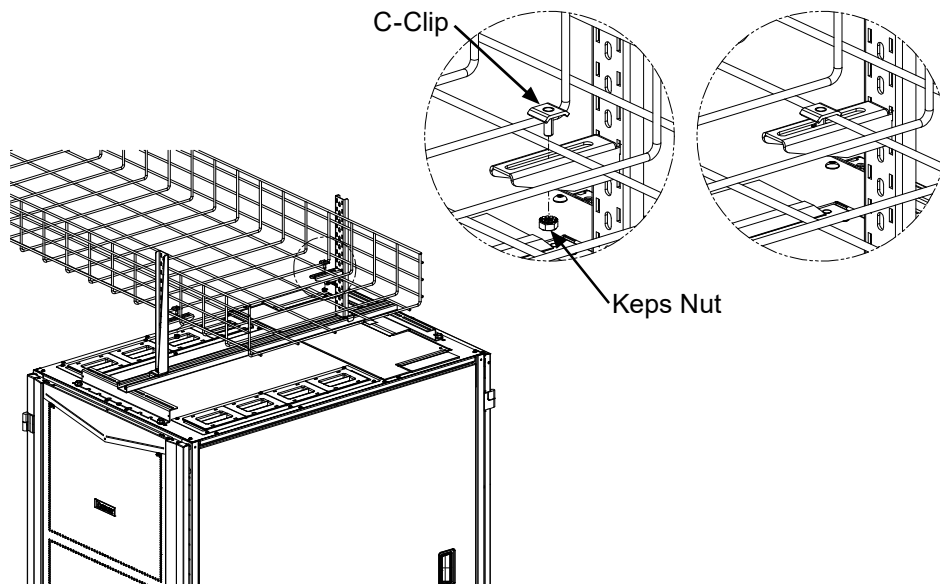


Installing Wire Basket to Elevation Bracket


- Secure Wire Basket to Elevation Bracket using (1) Side Attach Bracket and (1) Keps Nut
- Repeat on opposite side

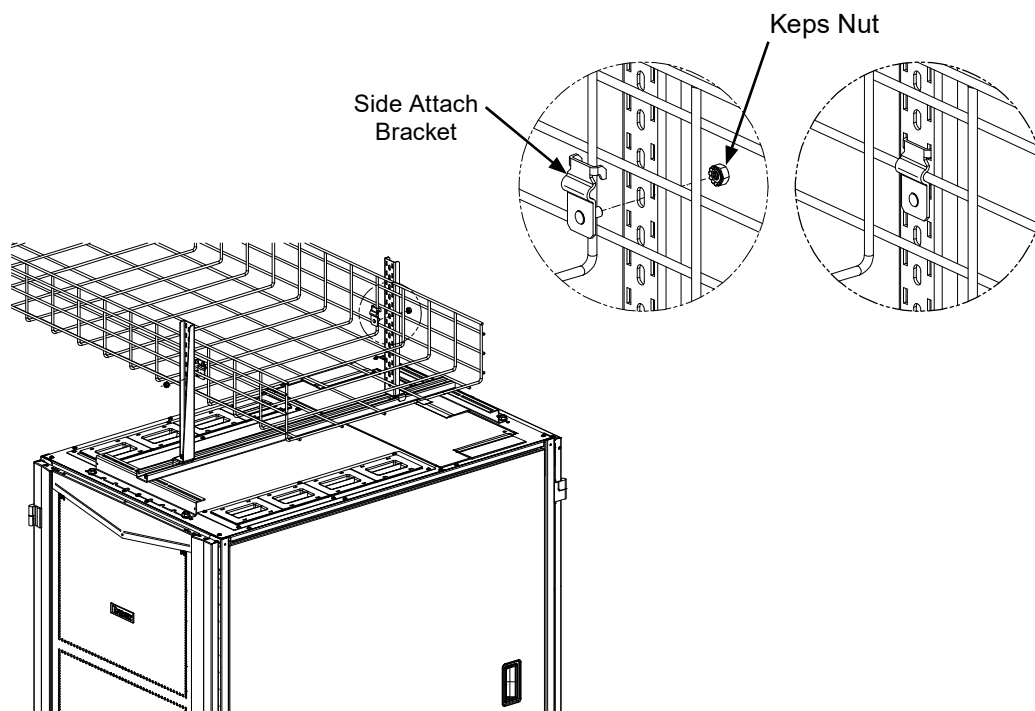


Wire Basket Installed on Strut

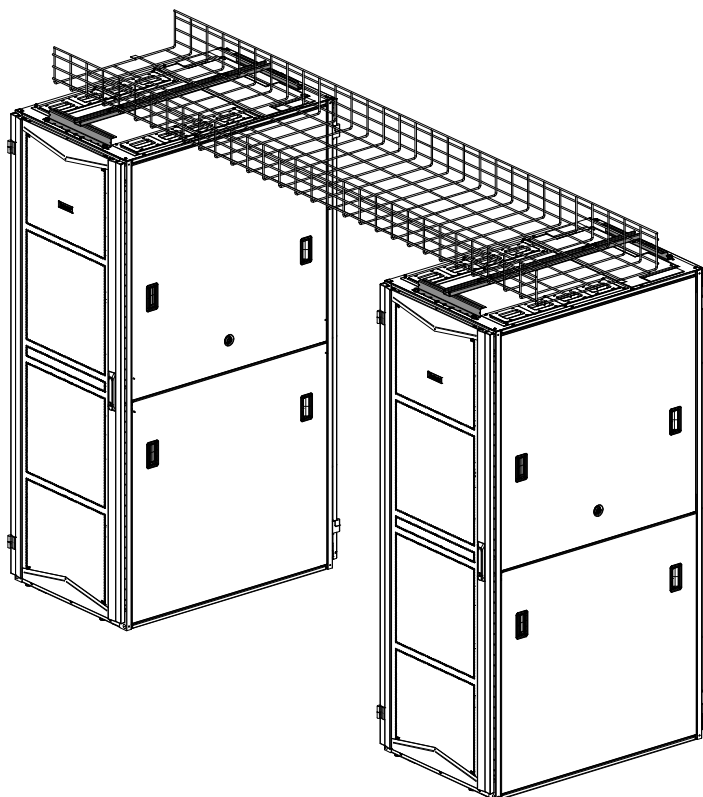

Wire Basket Installed on Elevation Bracket

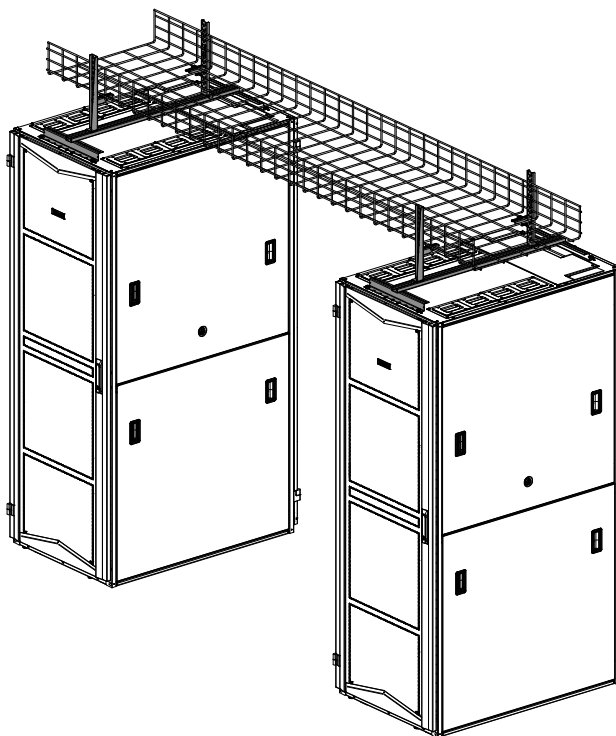

Two-Tier Wire Basket Installation

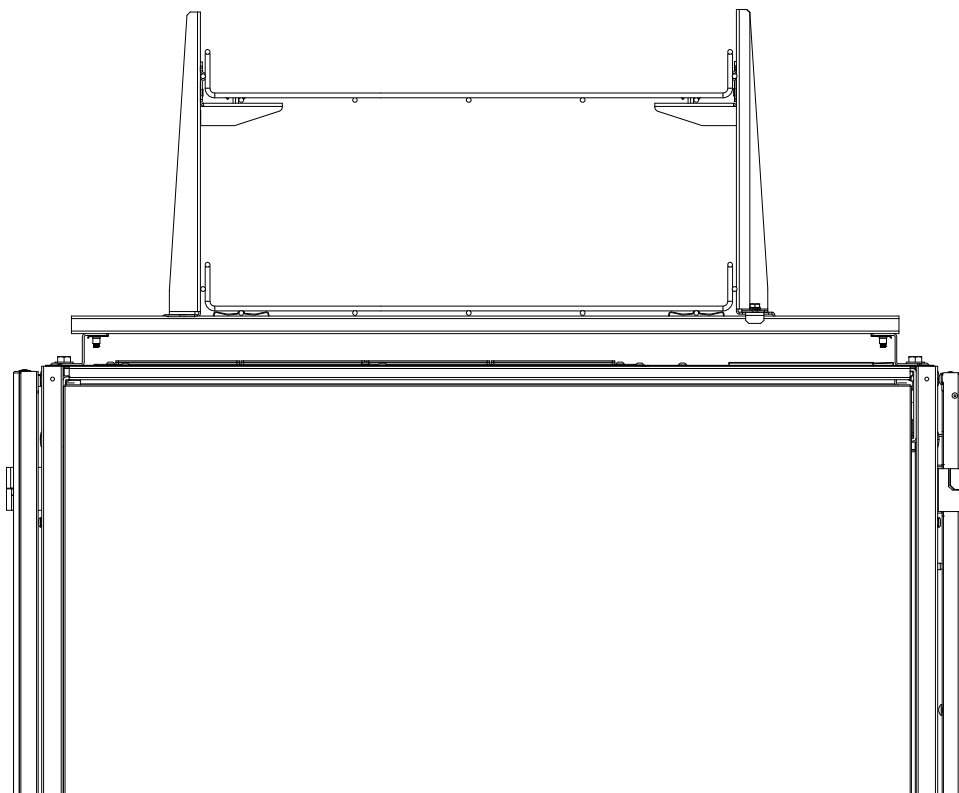

For Instructions in Local Languages
and Technical Support:

www.panduit.com/resources/install_maintain.asp

PANDUIT
www.panduit.com

E-mail:
techsupport@panduit.com

Phone:
866-405-6654