


Before Assembling Cable Clamp Kit onto Connector:

- ① Insert Flat Ring Into Coupling Ring
- ② Make Sure Flat Ring is Not Twisted and Fully Seated on Rim


Important: The Flat Ring Must Be Used on Right-Angle Cable Clamps Being Installed onto Series 2 Connectors

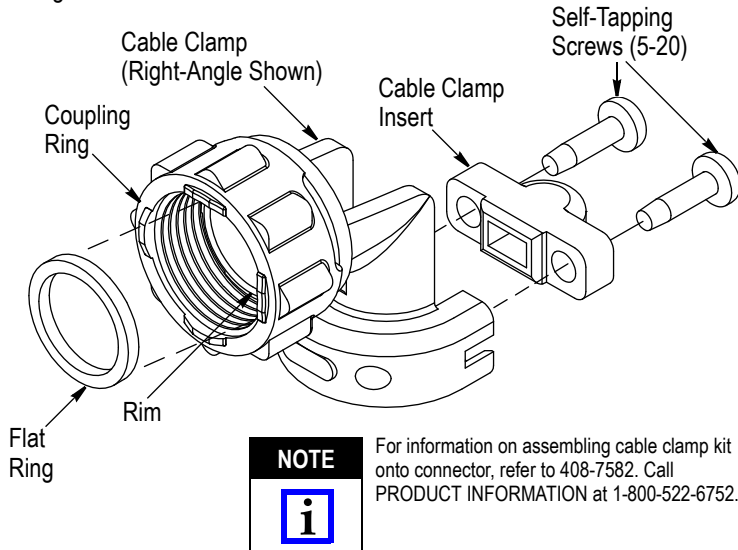

Before Assembling Cable Clamp Kit onto Connector:

- ① Insert Flat Ring Into Coupling Ring
- ② Make Sure Flat Ring is Not Twisted and Fully Seated on Rim


Important: The Flat Ring Must Be Used on Right-Angle Cable Clamps Being Installed onto Series 2 Connectors

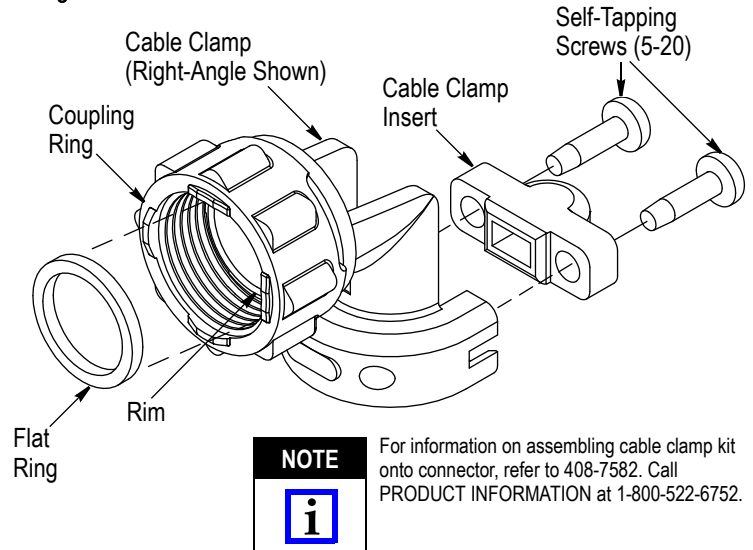

Before Assembling Cable Clamp Kit onto Connector:

- ① Insert Flat Ring Into Coupling Ring
- ② Make Sure Flat Ring is Not Twisted and Fully Seated on Rim

Important: The Flat Ring Must Be Used on Right-Angle Cable Clamps Being Installed onto Series 2 Connectors

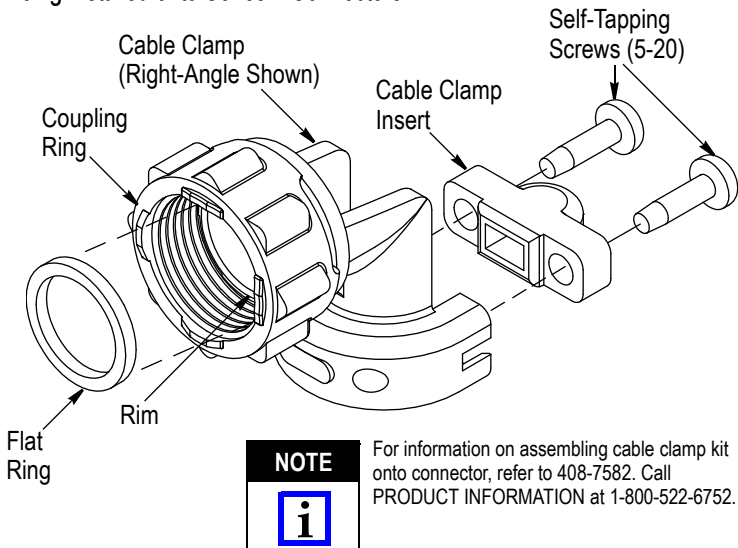

Before Assembling Cable Clamp Kit onto Connector:

- ① Insert Flat Ring Into Coupling Ring
- ② Make Sure Flat Ring is Not Twisted and Fully Seated on Rim

Important: The Flat Ring Must Be Used on Right-Angle Cable Clamps Being Installed onto Series 2 Connectors

