

## 1-1/2" Mighty-Align® EMT Steel Set Screw Slip Coupling

Mighty-Align® "Slip" Style Coupling - Used to join two lengths of EMT together.

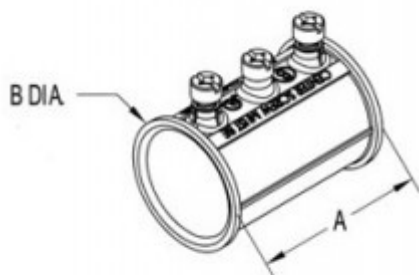
Backing out center screw allows the slip coupling to be temporarily located on one cut end while adjacent end is slid into place.

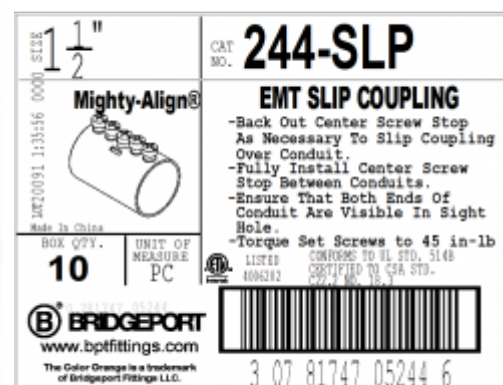
Back out center screw stop as necessary to slip coupling over conduit.

Fully install center screw stop between conduits.

Ensure that both ends of conduit are visible in sight hole.

Tighten all set screws. Patented


[Download Photo](#)

[Download Drawing](#)

[Download Drawing](#)

### Product details

|                                   |             |
|-----------------------------------|-------------|
| <b>Catalog Number:</b>            | 244-SLP     |
| <b>UPC Number:</b>                | 78174705244 |
| <b>Primary Materials:</b>         | Steel       |
| <b>Finish:</b>                    | Zinc Plated |
| <b>Trade Size:</b>                | 1-1/2"      |
| <b>Unit Quantity:</b>             | 10          |
| <b>Standard Package Quantity:</b> | 60          |

### Dimensions

|                      |        |
|----------------------|--------|
| <b>Trade Size:</b>   | 1-1/2" |
| <b>Dimensions A:</b> | 2.875  |
| <b>Dimensions B:</b> | 2.078  |

## Certifications & Codes

**Federal Specification Number:** A-A-50553

**UL File Number:** E24001

**UNSPSC:** 39121434

**Nema Standard:** FB-1

**UL Standard:** UL-514B

**Patent Number:** D702,542